

# PARTS AND OPERATION MANUAL



## PLASTER / MORTAR MIXERS

**WM-700S**

**WM-700P**

© COPYRIGHT 2001, MULTIQIIP INC.

Revision #7 (06/26/01)



# PARTS FINDER

**Search Website  
by Part Number**



**Search Manual  
Library For Parts  
Manual & Lookup Part  
Numbers – Purchase  
or Request Quote**

**Search Manuals**

Enter your information to help us find the right parts manual for your machine.

\* Brand:

\* Model:

\* Serial:

\* Part Number:

SEARCH

**Can't Find Part or  
Manual? Request Help  
by Manufacturer,  
Model & Description**

**Parts Order Form**

Please fill in the following information to help us find the right part for your machine.

Manufacturer:	<input type="text"/>
Model:	<input type="text"/>
Description:	<input type="text"/>
Part Number:	<input type="text"/>
Quantity:	<input type="text"/>
Notes:	<input type="text"/>

Submit

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

**Need parts?**

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar



# WARNING



## **CALIFORNIA — Proposition 65 Warning**

Engine exhaust and some of its constituents, and some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks.
- Cement and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: **ALWAYS** work in a well ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

Here's how To Get Help ..... 3  
Table Of Contents ..... 4  
Parts Ordering Procedures ..... 5  
Rules for Safe Operation & Safety Decals ..... 6  
Warranty ..... 7

**WHITEMAN — 700S & 700P**

Operations ..... 8-10  
Specifications ..... 11  
Explanation Of Codes In Remarks Column ..... 12  
Suggested Spare Parts ..... 13  
Drum Head & Paddle Shaft Assembly ..... 14-15  
Steel Drum (S) ..... 16-17  
Polyethylene Drum (P) ..... 18-19  
Gas Engines, Pulleys & Cab Assembly ..... 20-21  
Electric Motor & Pulleys ..... 22-23  
Axle & Wheel Group ..... 24-25  
  
Terms and Conditions Of Sale — Parts ..... 26

Go to Discount-Equipment.com to order your parts

## RULES FOR SAFE OPERATION & SAFETY DECALS



■ Do not operate or service this equipment before reading the operating and maintenance instructions manual or serious injury may result.

■ Do not operate this equipment unless all guards and safety devices are attached and in place.

■ Stop the engine when leaving the equipment.

■ Block the unit when leaving or when using on a slope

■ Maintain this equipment in a safe operating condition at all times.



■ Caution must be exercised while servicing this equipment. Rotating and moving parts can cause injury if contacted.

■ Stop the engine before servicing, adding fuel and oil.



■ When towing, an adequate safety chain must be fastened to the frame, refer to page 9.

■ Keep all inexperienced and unauthorized people away from the equipment at all times.

■ Unauthorized equipment modifications will void all warranties.

■ Check all fasteners periodically for tightness. Also check towing tongue bolt, lock nut and wheel lug nuts for wear.

■ Wear safety glasses at all times when working around machinery.



■ Stop the engine and disconnect the spark plug before allowing anybody's hands in the mixing drum.

■ Never pour or spray water over the engine or electric motor.

■ Always stand clear of dump handle when mixer is in operation. Any binding of material between the mixer blades and drum will cause drum and handle to quickly move in the discharge position.

**The safety instruction decals shown must be on all Whiteman Mixers**

**CAUTION!**  
**SHUT OFF ENGINE BEFORE**  
**PUTTING HANDS IN MIXING DRUM**

Caution Decal is:  
P/N EM948423

### **WHITEMAN** SAFETY INSTRUCTIONS

1. Read owners manuals before operating.
2. Keep unauthorized and untrained people away from machine during operation.
3. Make sure all safety devices are in place before this machine is started.
4. Make sure engine is turned off and spark plug wire is disconnected before cleaning the machine.
5. Keep hands and fingers away from moving objects.
6. Do not operate machine in an enclosed area. Proper ventilation is required.
7. Never leave machine unattended when operating.
8. Always stop engine and allow engine to cool before adding fuel or oil.

WHITEMAN CONCRETE PRODUCTS — A MULTIQUIP COMPANY — CARSON, CALIFORNIA

The safety instruction decal is **P/N 924801**

There are no warranties, express or implied, made by **Multiquip Inc.** hereunder on Products manufactured or distributed by it except the warranty against defects in material and workmanship on new Products to the original purchaser, as hereinafter set forth.

Multiquip Inc. warrants Products manufactured by it to be free from defects in material and workmanship under normal and proper use and servicing for the periods specified on the bottom of this page. Warranty on the engines supplied with the Products is limited to the warranty extended by the engine manufacturer. Multiquip Inc.' sole obligation under this warranty is limited to the replacement or repair, at its Carson, California facility, or such authorized facility, of only such part or parts thereof as shall appear to Multiquip Inc. upon inspection at such facility, to have been defective in material and workmanship.

A statement giving model and serial number of the Product, date of sale to original purchaser and date and description of failure shall accompany all parts.

Any part or parts determined by Multiquip Inc. to be defective will be replaced free of charge, F.O.B. Carson, California. Returned parts subject to warranty must be shipped prepaid to Multiquip Inc. within 30 days from the date the defective part or parts were removed. This warranty does not apply to any part or parts which have been subject to abuse or unauthorized repairs.

Warranty with respect to Products, components and accessories not manufactured by Multiquip Inc. is limited to the warranty extended by the manufacturer of those items.

There are no warranties, express or implied, in addition to the above except as may be provided in writing by Multiquip Inc. MULTIQUIP INC. SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.


**THE FOREGOING WARRANTIES ARE IN PLACE AND IN LIEU OF ALL WARRANTIES OF MERCHANTABILITY AND FITNESS AND SETS FORTH THE ENTIRE OBLIGATION OF MULTIQUIP INC.**

To avoid misrepresentations with respect to Products sold hereunder, the Dealer agrees that no warranties, or other operating guaranties on any Products covered by this Agreement shall be made in excess of those made by Multiquip Inc.

### **Multiquip Inc. Warranty Periods:**

WM-700 ..... 12 months

# WM-700S, 700P — OPERATIONS

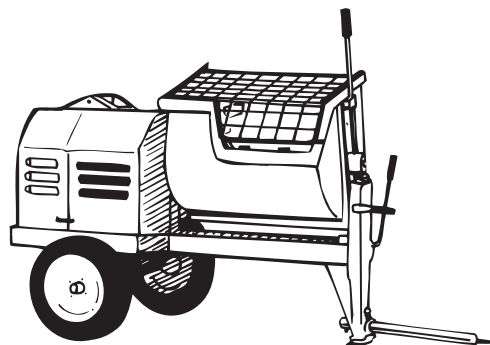

## GENERAL

The Whiteman WM-700 and WM-900 Series plaster and mortar mixers are quality mixers that have a batch capacity of 2.5 and 3.5 bags respectively. With proper care, they will give continuous service year-after-year.

## BEFORE STARTING

Before starting the engine, read the engine owners manual and thoroughly understand the safety information.

Check the items listed below:

**Oil Levels.** Be sure to check the oil levels in the engine and engine reduction unit before starting the unit.

**Hardware.** Check all hardware on the mixer before starting. Periodically inspect all hardware. Loose hardware can contribute to early component failure and poor performance. Use the torque chart below as a general guideline and keep all hardware tight:

HARDWARE DIA	TORQUE (LB./FT.)
5/16" - 18	14
#/8" - 16	24
#/8" - 24	37
1/2" - 13	39
1/2" - 13 (Grade 8)	90

## GASOLINE ENGINE CARE

For care and operation of the gasoline engine, refer to the engine manufacturer's operating instructions furnished with the engine. We recommend draining and refilling the engine crankcase at least every thirty hours of operation. Check the engine oil level daily.

## ELECTRIC MOTOR CARE

For lubrication care and operation of the electric motor, refer to your electric motor instruction booklet furnished with the motor.

Protect the electric motor from dust as much as possible and keep ventilating openings clean. Do not spray water on the electric motor.

Refer to the following chart. For recommend plug sizes.

MOTOR	115 VOLT 1Ø WM 700		230 VOLT 1Ø WM 900	
	PIGTAIL CAP NEMA/ WHITEMAN	CONN BODY NEMA/ WHITEMAN	PIGTAIL CAP NEMA/ WHITEMAN	CONN BODY NEMA/ WHITEMAN
1½ & 3 HP	L5-30P/940545	L5-30R/940546	L6-15P/940550	L6-15R/940551

## CONTROLS

**KILL SWITCH:** (Gasoline Engine Only) Located on the side of the engine cover.

**ENGINE THROTTLE AND CHOKE CONTROLS:** Please refer to the engine owners manual for specific instructions. The electric motor switch ( electric motor only) located on the motor — is used to start and stop the mixer.

**DUMP LATCH:** To dump the tub, grasp the dump handle and lift the dump latch, then rotate the tub to discharge the mix. After, discharge, return the tub to the vertical mixing position.

## CLUTCH

The paddle shaft and mixing blades are engaged and disengaged by tightening and loosening the drive belts with a spring loaded idler pulley. To engage the clutch, rotate the lever counterclockwise. The spring maintains the correct belt tension. To disengage the clutch, rotate the lever clockwise against the lever stop. The engine base is slotted to adjust for belt wear and to bring the idler pulley into operating range.

**CAUTION:** Stop the engine before allowing anybody to put their hands in the mixing drum.

## WHEEL BEARINGS

After every 3 months of operation, remove the hub dust cap and inspect the wheel bearings. Once a year, or when required, disassemble the wheel hubs remove the old grease and repack the bearings forcing grease between rollers, cone and cage with a good grade of high speed wheel bearing grease (never use grease heavier than 265 A.S.T.M. penetration ("No. 2.)) Fill the wheel hub with grease to the inside diameter of the outer races and also fill the hub grease cap. Reassemble the hub and mount the wheel. Then tighten the adjusting nut, at the same time turn the wheel in both directions, until there is a slight bind to be sure all the bearing surfaces are in contact. Then back-off the adjusting nut ! / 6 to ¼ turn or to the nearest locking hole or sufficiently to allow the wheel to rotate freely within limits of .001" to .010" end play. Lock the nut at this position. Install the cotter pin and dust cap, and tighten all hardware.



## BEARING BRACKET

Grease the bearing bracket every month.

## COUNTERSHAFT

The countershaft rotates on two self-aligned pillow block bearings. Grease these every 40 hours using grade #1 Lithium Base grease.

## GEAR ALIGNMENT

The countershaft and driven pinion are mounted on a slotted base. To align gears, loosen the pillow block mounting bolts and move them until the necessary alignment has been made.

## GEAR LUBRICATION



The surface of the pinion and the bull gear should be very lightly greased every 250 hours.

**IMPORTANT! AVOID OVER-GREASING. EXCESS GREASE WILL ACCUMULATE CONTAMINATES AND CAUSE PREMATURE WEAR.**



### IMPORTANT — DRUM HEAD SEAL CARE

Grease seals every 40 hours of operation using any grade #1 lithium base grease. Apply grease until visible inside of mixing tub (overgrease). This will purge seal system of contamination.

## DRUM GRILL

The drum opening is covered by a steel grill that is hinged for easy cleaning. This grill should be closed at all times when mixer is in use. Do not remove the grill or grill opening bar. Keep the grill clean by washing it down daily.

**CAUTION:** Stop the engine before allowing anybody to put their hands in the mixing drum.

**TOWING — Before towing, check with local and state laws for proper compliance.**




The tow bar and chain must be properly attached to the mixer and towing vehicle prior to towing. Refer to the following installation instruction:

**Step 1.** Insert the Draw Bar into the main frame. Secure, utilizing the 3/4" bolt (grade 5) and nylock nut. Tighten to 100 foot pounds.

**Step 2.** Install the chain through the hole located between the frame gusset and frame angle. Loop the chain together and place under the Draw Bar. Secure with connector link.

**Step 3.** Extend the chain along the length of the Draw Bar, remove excess chain (slack) and secure to bottom connector link. Secure the chain to the towing vehicle, using the connector link.

**NOTE:** It is critical that the length of chain be properly adjusted to prevent the Draw Bar and front mixer stand from dropping to the ground (contact) in the event the Draw Bar becomes disconnected from the towing vehicle.

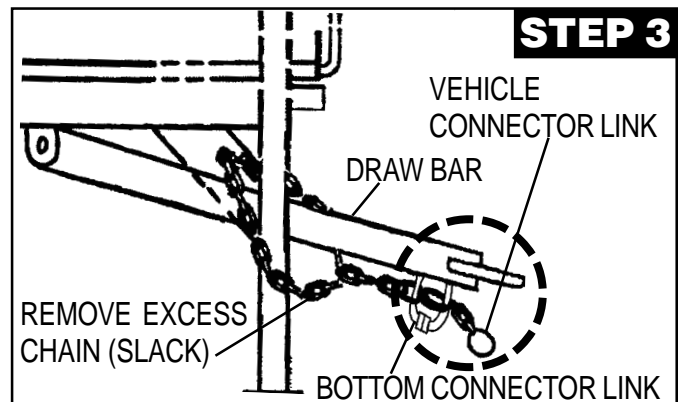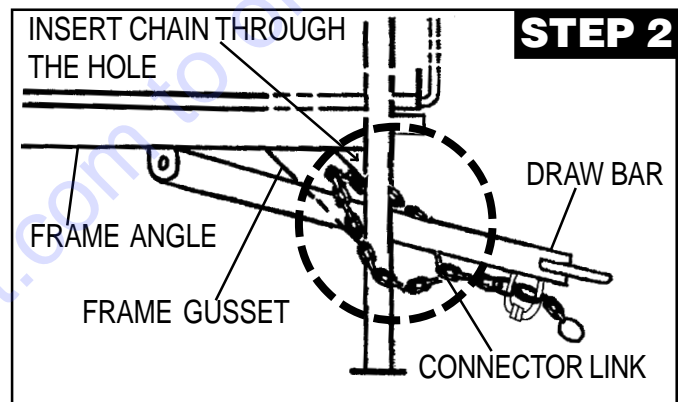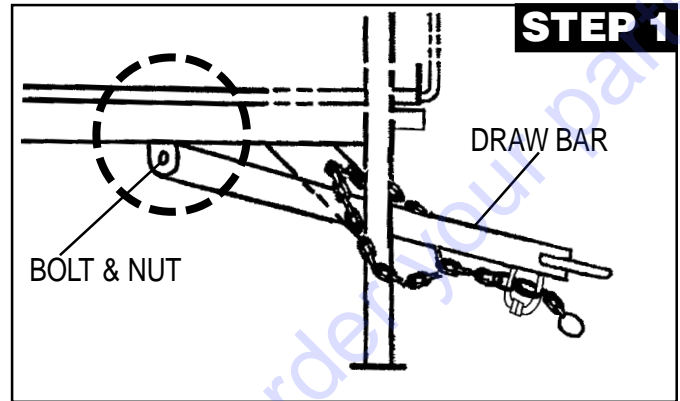

**SAFETY CHAIN** ..... P/N 13363


**CONNECTOR LINK** ..... P/N 01004



# WM-700S, 700P — OPERATIONS



**DANGER**

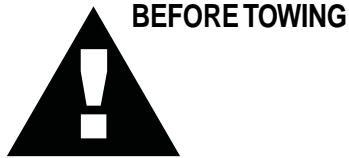

**BEFORE TOWING**

## BALL HITCH COUPLER

1. Check vehicle hitch, ball, and coupler for signs of wear or damage. Replace any parts that are worn or damaged before towing.
2. Use only the 2" ball diameter as indicated on your coupler. Use of any other ball diameter will create an extremely dangerous condition which can result in separation of the coupler and ball or ball failure.
3. Be sure the coupler is secured to the hitch ball and the lock lever is down tight and locked.  
Recheck tightness again after towing about 50 miles.
4. Check that trailer safety chains are properly connected.

## RECOMMENDED MAINTENANCE

1. Smear ball socket and clamp face with chassis grease. Periodically oil pivot points and solutions surfaces of coupler with SAE 30 wt. motor oil.
2. When parking or storing your trailer. Keep the coupler off the ground so dirt will not build up in the ball socket.



**DANGER**



**If housing is deformed,  
replace complete coupler.**

**USE ONLY GENUINE  
FULTON REPAIR KITS.**

## CLEANING — BLADE ADJUSTMENTS

Always disconnect the spark plug wire before cleaning the inside of the drum.


Never pour or spray water over the gasoline engine or electric motor.

For consistent performance, long life and high quality mixing, thoroughly clean the mixer inside and out at the end of each day's operation. To prevent lumps of dried mortar from forming and contamination of future batches, do not allow a buildup of materials to form on the blades or anywhere inside the drum.


The following is the recommended wiper blade adjustments:

## 1) STEEL DRUM MIXERS

### SIDE SCRAPER

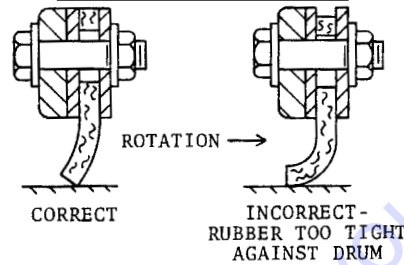


### END SCRAPER

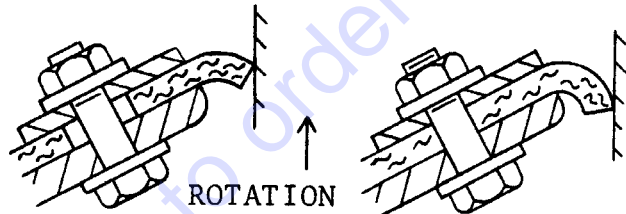

**CORRECT**

**INCORRECT -  
RUBBER TOO TIGHT  
AGAINST DRUM**

## 2) POLYETHYLENE DRUM MIXERS

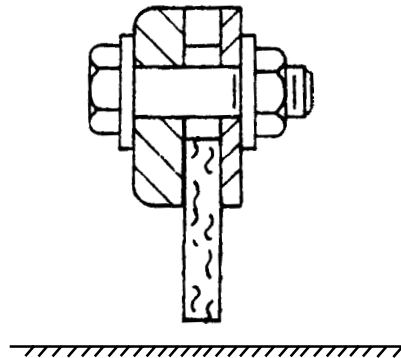

The poly blade should come as close as possible to the surface without touching. If material builds up on the drum, you may use a rubber mallet to dislodge the material without adverse effect to the drum.

### IMPORTANT NOTICE

**EPOXY COMPATIBILITY** — There are some epoxies and other chemicals used in certain applications that are not compatible with polyethylene tubs.

Since Whiteman Industries cannot control the end user's application of this product, we will not assume responsibility for the resulting damages when exposed to incompatible chemicals.

## WM-700S SPECIFICATIONS

<u>MODEL</u>	<u>U.S.(inch)</u>	<u>METRIC</u>
CAPACITY .....	7 CUBIC FEET .....	198 LITERS
BAG CAPACITY .....	1½ - 2½ .....	1½ - 2½
WEIGHT (approx.) .....	788 LBS. ....	357 KG.
L x W x H .....	71 x 50 x 56 IN. ....	180 x 127 x 142 CM.
LENGTH W/TOW BAR .....	98 IN. ....	248 CM.
HEIGHT W/DUMP HANDLE .....	73 IN. ....	185 CM.
DISCHARGE HEIGHT .....	21 IN. ....	53 CM.
DRIVE .....	V-BELT TO GEAR .....	—
DUMP ACTION .....	MANUAL .....	—

## WM-700P SPECIFICATIONS

<u>MODEL</u>	<u>U.S.(inch)</u>	<u>METRIC</u>
CAPACITY .....	7 CUBIC FEET .....	198 LITERS
BAG CAPACITY .....	1½ - 2½ .....	1½ - 2½
WEIGHT (APPROX.) .....	788 LBS. ....	357 KG.
L x W x H .....	71 x 50 x 56 IN. ....	180 x 127 x 142 CM.
LENGTH W/TOW BAR .....	98 IN. ....	248 CM.
HEIGHT W/DUMP HANDLE .....	73 IN. ....	185 CM.
DISCHARGE HEIGHT .....	21 IN. ....	53 CM.
DRIVE .....	V-BELT TO GEAR .....	—
DUMP ACTION .....	MANUAL .....	—

# EXPLANATION OF CODE IN REMARKS COLUMN

How to read the marks and remarks used in this parts book.

## Section 1: Items Found In the “Remarks” Column

Serial Numbers-Where indicated, this indicates a serial number range (inclusive) where a particular part is used.

Model Number-Where indicated, this shows that the corresponding part is utilized only with this specific model number or model number variant.

## Section 2: Items Found In the “Remarks” Column

Serial Numbers-Where indicated, this indicates a serial number range (inclusive) where a particular part is used.

Model Number-Where indicated, this shows that the corresponding part is utilized only with this specific model number or model number variant.

## Section 3: Items Found In the “Items Number” Column

All parts with same symbol in the number column, \*, #, +, %, or ■, belong to the same assembly or kit.

Note: If more than one of the same reference number is listed, the last one listed indicates newest (or latest) part available.

### NOTE

If more than one of the same reference number is listed, the last one listed indicates newest (or latest) part available.

### NOTE

*The contents of this catalog are subject to change without notice.*

# WM-700S, 700P — SUGGESTED SPARE PARTS

## WM-700S/P

### 1 to 3 Units

Qty.	P/N	Description
3	EM505834	V-BELT
3	EM507846	V-BELT, WM-700 ELECTRIC MOTOR
6	491010	LATCH ASSY
3	EM203010	BLADE KIT STEEL DRUM
3	EM204624	BLADE KIT POLY DRUM
2	EM902153	BEARING, DRUM HEAD
2	3131	O-RING, DRUM HEAD
2	3530	SEAL KIT
1	3351	PINION GEAR

## WM-700S/P


### 5+ Units

Qty.	P/N	Description
5	EM505834	V-BELT
5	EM507846	V-BELT, w/ELECTRIC MOTOR
10	491010	LATCH ASSY
5	EM203010	BLADE KIT STEEL DRUM
5	EM204624	BLADE KIT POLY DRUM
4	EM902153	BEARING, DRUM HEAD
4	3131	O-RING, DRUM HEAD
1	EM940734	SWITCH, ON/OFF
2	3351	DRIVEN PINON GEAR
1	EM500083	DUMP HANDLE, POLY DRUM
1	EM201537	DUMP HANDLE, STEEL DRUM
4	3530	SEAL KIT
2	3065	SEAL, AXLE
2	3469	DUST CAP AXLE
2	EM903049	BEARING CONE UP TO S/N HL60000
2	EM903113	BEARING CONE STARTING S/N JA00000
2	EM903012	BEARING CUP


#### NOTE

Part numbers on this Suggested Spare Parts List may supercede/replace the P/N shown in the text pages of this book.

### DRUM HEAD

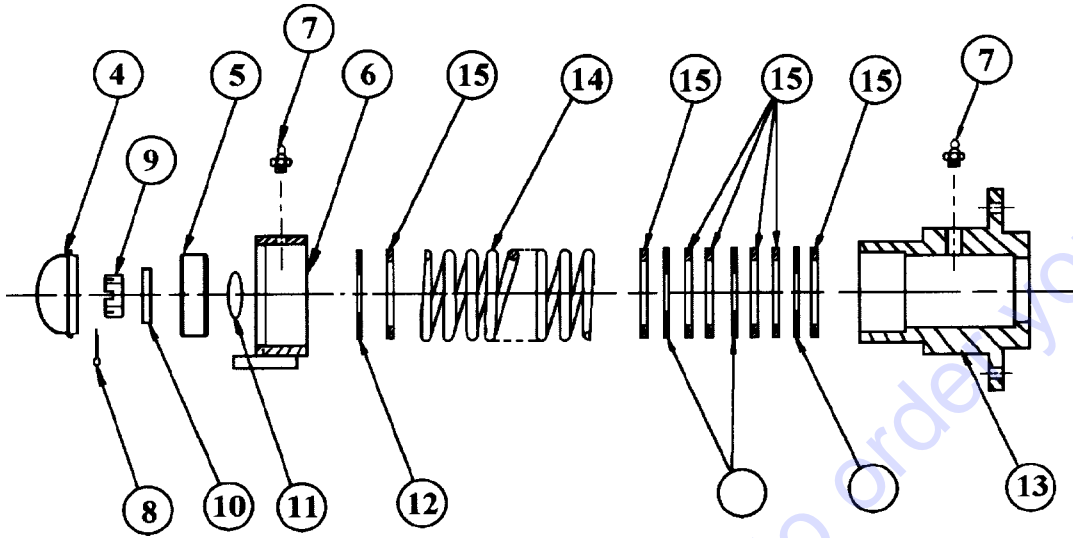

### TOW END

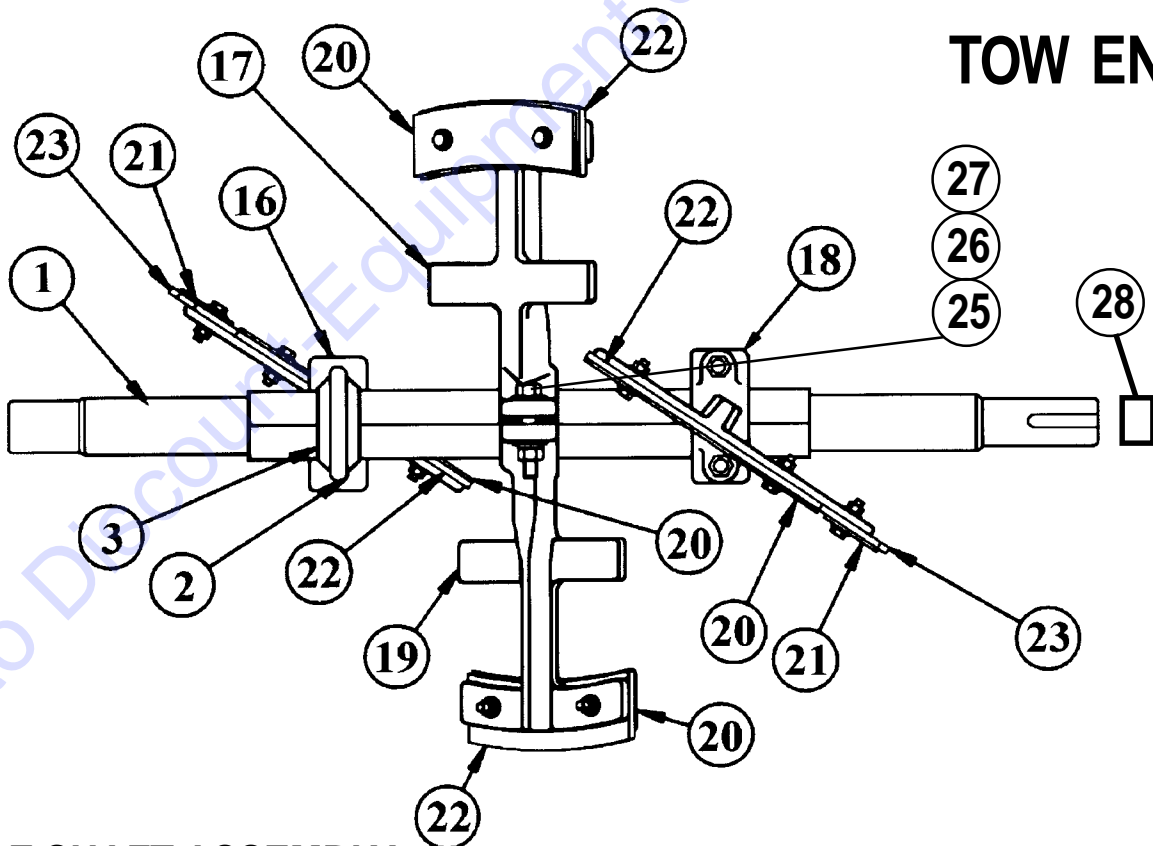

### PADDLE SHAFT ASSEMBLY

# WM-700S, 700P — DRUM HEAD AND PADDLE SHAFT ASSY

## DRUM HEAD & PADDLE SHAFT ASSEMBLY

### DRUM HEAD



NO.	PART NO.	PART NAME	QTY.	REMARKS
2	EM200297	U-BOLT	2	
	EM968011	NUT HEX ½-13	4	
3	EM200292	U-BOLT INSERT	4	
4	3249	DUST CAP .....	1	REPLACES 50017
5	EM902153	BEARING	2	
6	EM507720	BRACKET, DUMP BEARING .....	2	STARTING S/N 750180
6	500076	BRACKET, DUMP BEARING .....	2	S/N 750000 THRU 750105
7	EM916019	GREASE ZERK .....	2	REPLACES 491705
8	5028 B	COTTER PIN 1/8 X 2 .....	2	REPLACES 491690
9	8164	CASTLE NUT .....	2	REPLACES 502246
10	3047	SPACER .....	2	REPLACES 500089
11	3131	O-RING .....	2	REPLACES 491040
12*	13002	SEAL .....	2	REPLACES 504749
13	507719	DRUM HEAD, BEARING BOSS .....	2	STARTING S/N 750180
13	3291	DRUM HEAD, BEARING BOSS .....	2	S/N 750000, THRU 750105 REPLACES 500085
14	3024	SPRING .....	2	REPLACES 491930
15	3061	THIN SEAL SPACER .....	14	REPLACES 500088
29*	3019	SEAL .....	4	REPLACES 500086
30*	3494	SEAL URETHANE .....	2	REPLACES 500613
	3530	SEAL KIT, PADDLE SHAFT .....	1	INCLUDES ITEMS w/*

### PADDLE SHAFT ASSEMBLY

NO.	PART NO.	PART NAME	QTY.	REMARKS
1	EM507269	PADDLE SHAFT	1	
16	EM202899	PADDLE ARM-TOW END	1	
17	EM202897	PADDLE ARM-CENTER	1	
18	EM202898	PADDLE ARM-ENGINE END	1	
19	EM202896	PADDLE ARM-CENTER	1	
20*#	EM202928	TOP STEEL BLADE	4	
21*#	EM202927	DRUM END STEEL BLADE	2	
22*	EM202929	TOP RUBBER BLADE (STEEL) DRUM ONLY	4	
22#	EM507497	TOP PLASTIC BLADE (POLY) DRUM ONLY	4	
23#	EM507496	DRUM END PLASTIC BLADE (POLY) DRUM ONLY	2	
23*	EM202926	DRUM END RUBBER BLADE (STEEL) DRUM ONLY	2	
25	EM963110	BOLT ½-13 X 3 ¾	1	
26	6109180	LOCK WASHER ½ .....	1	REPLACES EM923638
27	EM968011	HEX NUT 1/2-13 .....	1	
28	507270	SPACER BULL GEAR	1	
	EM203010	BLADE KIT, (STEEL) DRUM ONLY .....	1	INCLS w/* AND MTG. & HDWR
	EM204624	BLADE KIT, (POLY) DRUM ONLY .....	1	INCLS w/# AND MTG. & HDWR
	EM203029	HARDWARE KIT, (RUBBER/POLY BLADES) .....	1	INCLUDED IN BLADE KITS



# STEEL DRUM

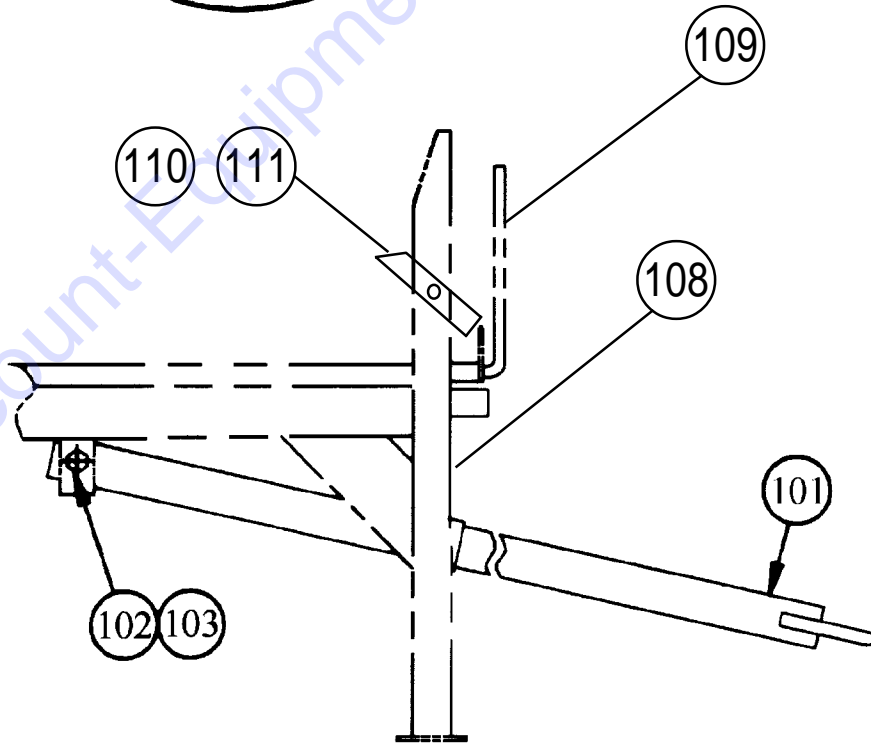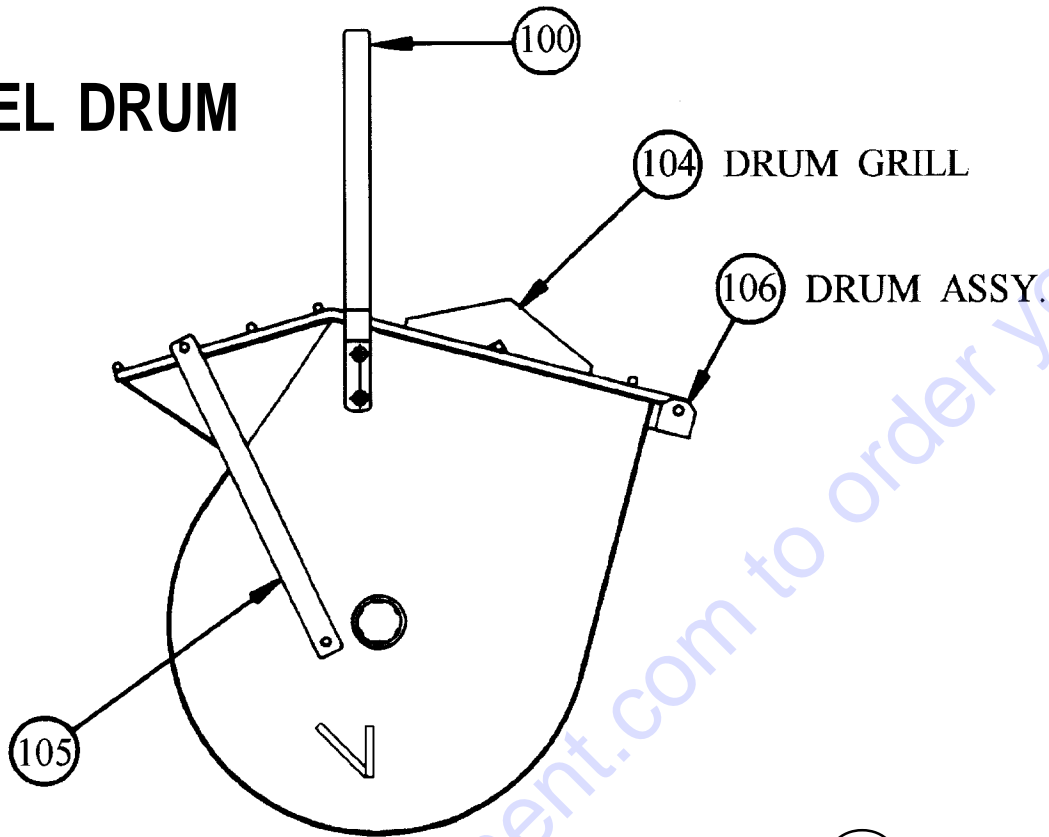


# WM-700S — STEEL DRUM

WM-700S - STEEL DRUM

NO.	PART NO.	PART NAME	QTY.	REMARKS
100*	EM201537	DUMP HANDLE	1	
101	ELC1	TOWING TONGUE (P. EYE) .....	1	NO LONGER AVAILABLE
101	EPC1	TOWING TONGUE (PIN HOLE) .....	1	CONTACT DISCOUNT-EQUIPMENT/ACCESSORY ITEM
101	EBC1	TOWING TONGUE (BALL HITCH) .....	1	CONTACT DISCOUNT-EQUIPMENT/ACCESSORY ITEM
102	EM963580	CAP SCREW .....	1	REPLACES 505067
103	EM969038	LOCK NUT .....	1	REPLACES 505069
104*	EM203333	DRUM GRILL	1	
105*	EM507271	GRILL OPEN BAR	1	
106+	508097	DRUM ASSY (STEEL) .....	1	INCLS. ITEMS w/*
	508098	DRUM & SHAFT ASSY. (COMPLETE)(STEEL) .....	1	INCLS. ITEMS w/+ AND DRUM HEAD & PADDLE SHAFT ASSY
108	EM506309	MAIN FRAME	1	
109	507264	CLUTCH LEVER	1	
110	EM507421	DUMP LATCH	1	
111	EM507835	CLEVIS PIN	1	
<input type="checkbox"/>	13363	SAFETY CHAIN	1	
<input type="checkbox"/>	01004	5/16" CONNECTOR LINK	2	
<input type="checkbox"/>	ILLUSTRATED ON PAGE 9			

Go to Discount-Equipment.com to order your parts

# WM-700P — POLYETHYLENE DRUM

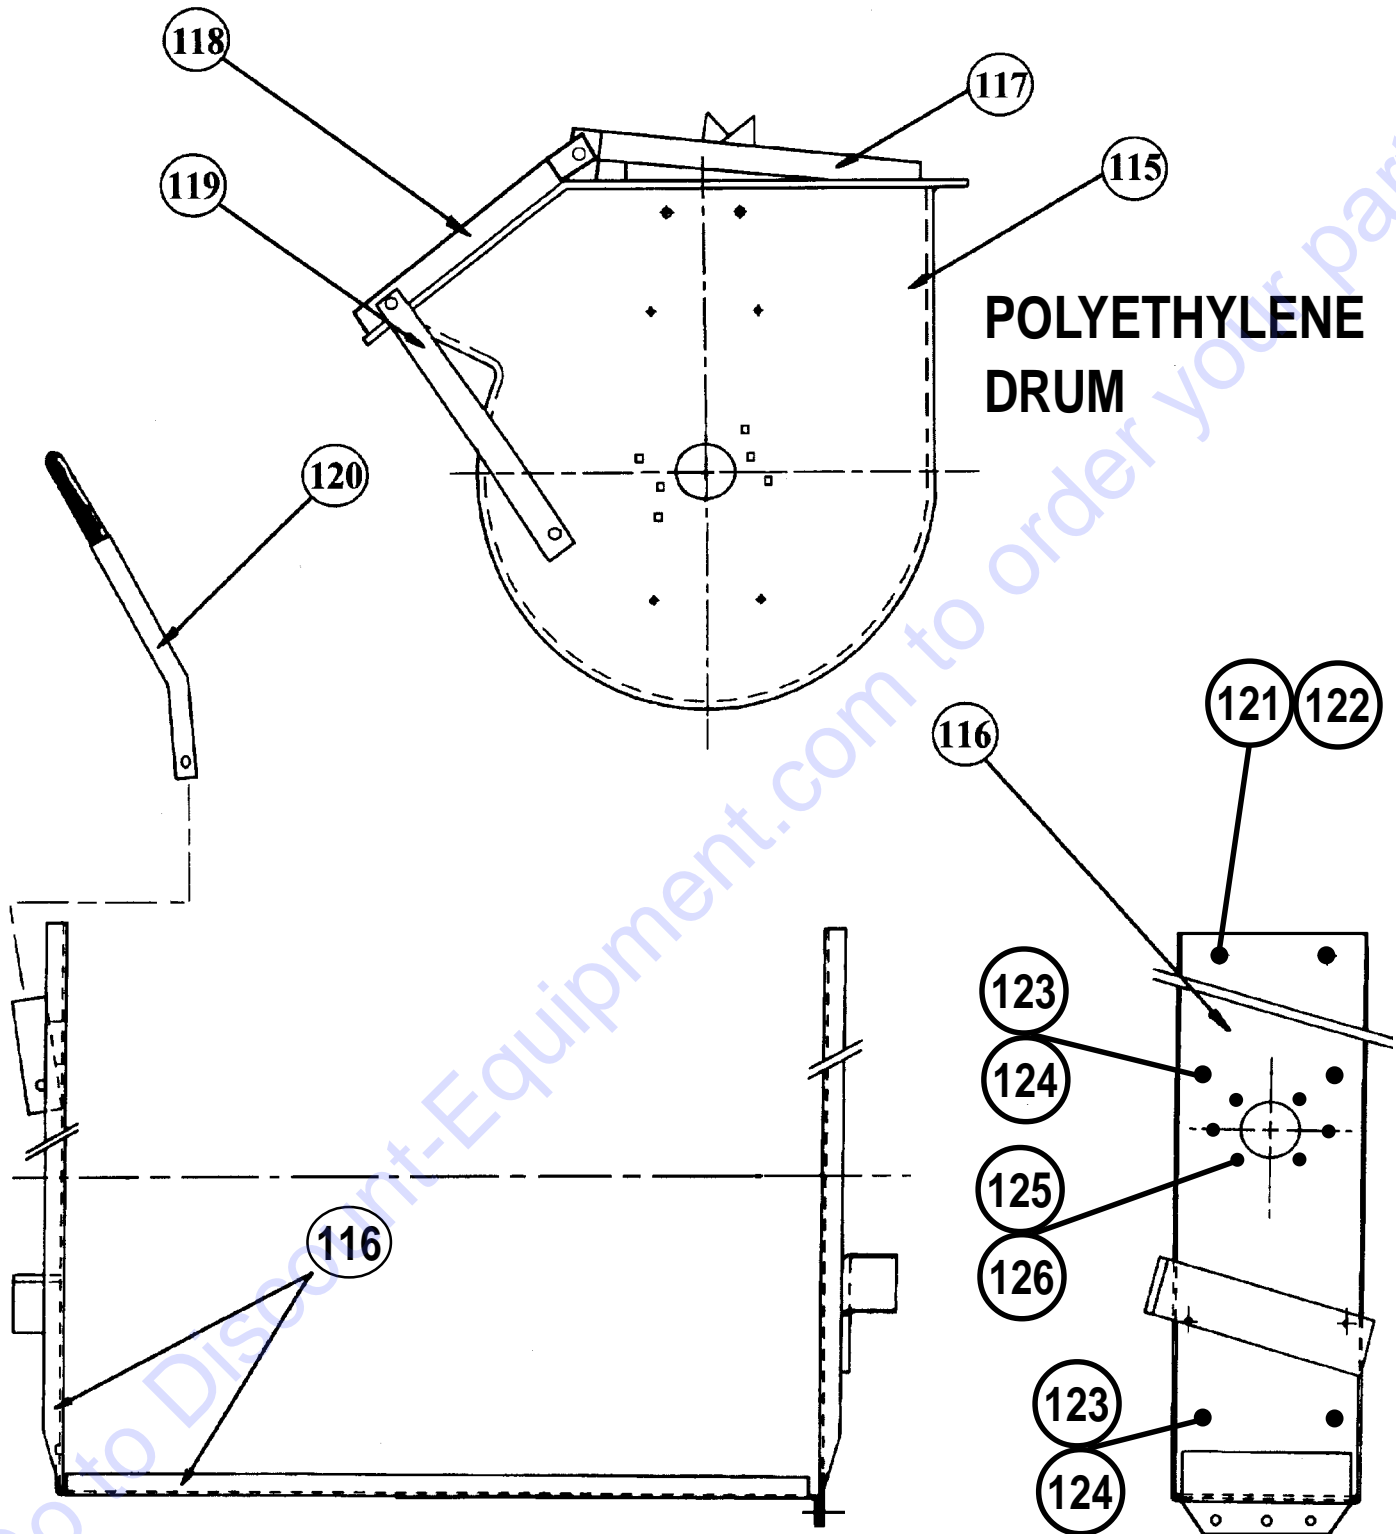

# WM-700P — POLYETHYLENE DRUM


POLYETHYLENE DRUM

## MODEL WM-700P

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
115*	13000	PLASTIC DRUM (W/O GRATES) .....	1 .....	REPLACES 504522
116	507495	SUPPORT DRUM	1	
117*	504534	STATIONARY GRATE	1	
118*	504535	MOVEABLE GRATE	1	
119*	507493	GRATE OPEN BAR	1	
120*	500083	DUMP HANDLE	1	
	508022	DRUM & SHAFT ASSY (COMPLETE) (POLY) .....	1 .....	INCLS ITEMS w/* AND DRUM HEAD & PADDLE SHAFT ASSY
121	EM963610	HHCS 3/8" NC X 1 1/4" G-5 .....	7 .....	REPLACES 492376
122	EM969013	LOCK NUT 3/8" NC .....	7 .....	REPLACES 492583
123	504987	FHCS 1/4" NC X 1" G-5	8	
124	EM969079	LOCK NUT 1/4" NC .....	8 .....	REPLACES 492581
125	504943	FHCS 3/8" NC X 2" G-5	12	
126	EM969013	LOCK NUT 3/8" NC .....	12 .....	REPLACES 492583

Go to Discount-Equipment.com to order your parts

# CAB ASSEMBLY

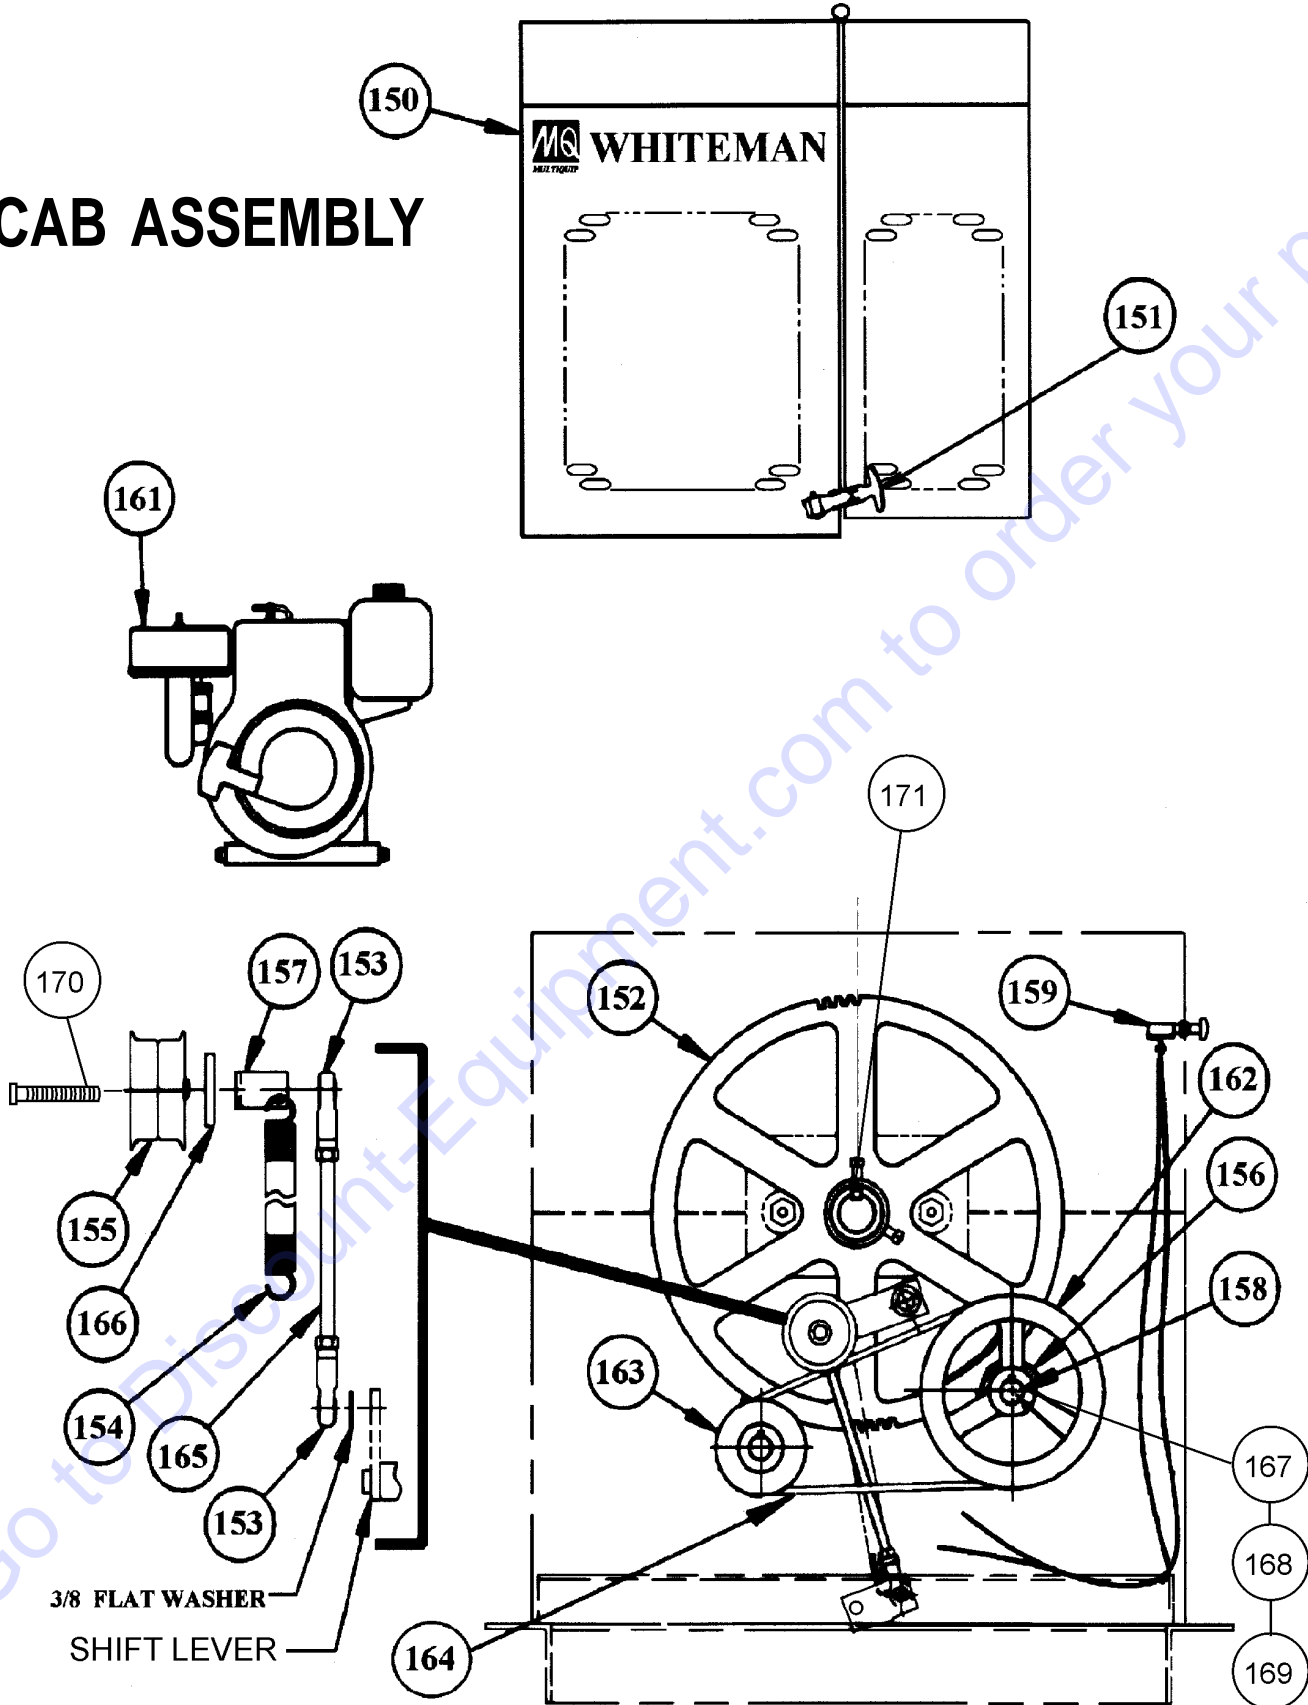

# WM-700S, 700P — GAS ENGINES, PULLEYS & CAB ASSEMBLY

GAS ENGINES, PULLEYS & CAB ASSEMBLY

## COMMON PARTS

NO.	PART NO.	PART NAME	QTY.	REMARKS
150	507158	CAB ASSEMBLY	1	
151	491010	LATCH ASSEMBLY .....	2	REPLACES 504744
152	502228	DRIVE GEAR 16-1/2 DIA.	1	
153	EM959080	ROD END	2	
154	EM102014	SPRING	1	
155	EM901515	IDLER PULLEY	1	
156	EM905016	PILLOW BLOCK BEARING	2	
157	EM203098	SPRING CLIP	1	
158	3351	DRIVEN PINION GEAR .....	1	REPLACES 500272
159	EM940734	SWITCH, ON/OFF	1	
167	502226	COUNTER SHAFT	1	
168	JISB2804C25	SNAP RINGS .....	2	REPLACES 490957
169	500214	KEY	1	
170	EM963064	BOLT 3/8 X16 X 3-1/4	1	
171	1141	KEY	1	

## MODEL WM 700 w/HONDA

NO.	PART NO.	PART NAME	QTY.	REMARKS
161	GX240K1HA2	HONDA ENGINE GX240 K1HA 8HP .....	1	REPLACES 493261
161	GX160K1HX2	HONDA ENGINE GX160 5.5HP ENG.	1	
162	492057	DRIVEN PULLEY-LARGE	1	
162	492055	DRIVE PULLEY-5.5 HP	1	
163	EM901074	DRIVE PULLEY-SMALL 1" BORE 8.0 HP	1	
164	EM505834	V-BELT	2	
165	EM507490	THREADED ROD	1	
166	EM507491	IDLER ARM	1	

## MODEL WM 700 w/WISCONSIN

NO.	PART NO.	PART NAME	QTY.	REMARKS
161	EM937171	ENGINE WISCONSIN BKN2-408472 .....	1	REPLACES 505208
162	EM505204	DRIVEN PULLEY	1	
163	505205	DRIVE PULLEY	1	
164	507775	V-BELT	2	
165	EM507771	THREADED ROD	1	
166	EM203352	IDLER ARM	1	

## MODEL WM 700 w/ROBIN


NO.	PART NO.	PART NAME	QTY.	REMARKS
161	W1280800466	ROBIN ENGINE 8HP EY-28 .....	1	UP TO OCTOBER, 1999
161	EH252YR0000	ROBIN ENGINE 8HP EH25-2 .....	1	STARTING OCTOBER, 1999, REPLACES 493260
162	492057	DRIVEN PULLEY-LARGE	1	
163	492054	DRIVE PULLEY-SMALL	1	
164	EM505834	V-BELT	2	
165	EM507490	THREADED ROD	1	
166	EM203352	IDLER ARM	1	

## MODEL WM-700 w/B&S

NO.	PART NO.	PART NAME	QTY.	REMARKS
161	1964521049	B&S ENGINE 8HP .....	1	REPLACES 493181
161	1352321036E1	B&S ENGINE 5HP	1	
162	492057	DRIVEN PULLEY-LARGE	1	
163	EM901074	DRIVE PULLEY-SMALL 1" BORE	1	
164	EM505834	V-BELT	2	
165	EM507490	THREADED ROD	1	
166	EM507491	IDLER ARM	1	



# CAB ASSEMBLY

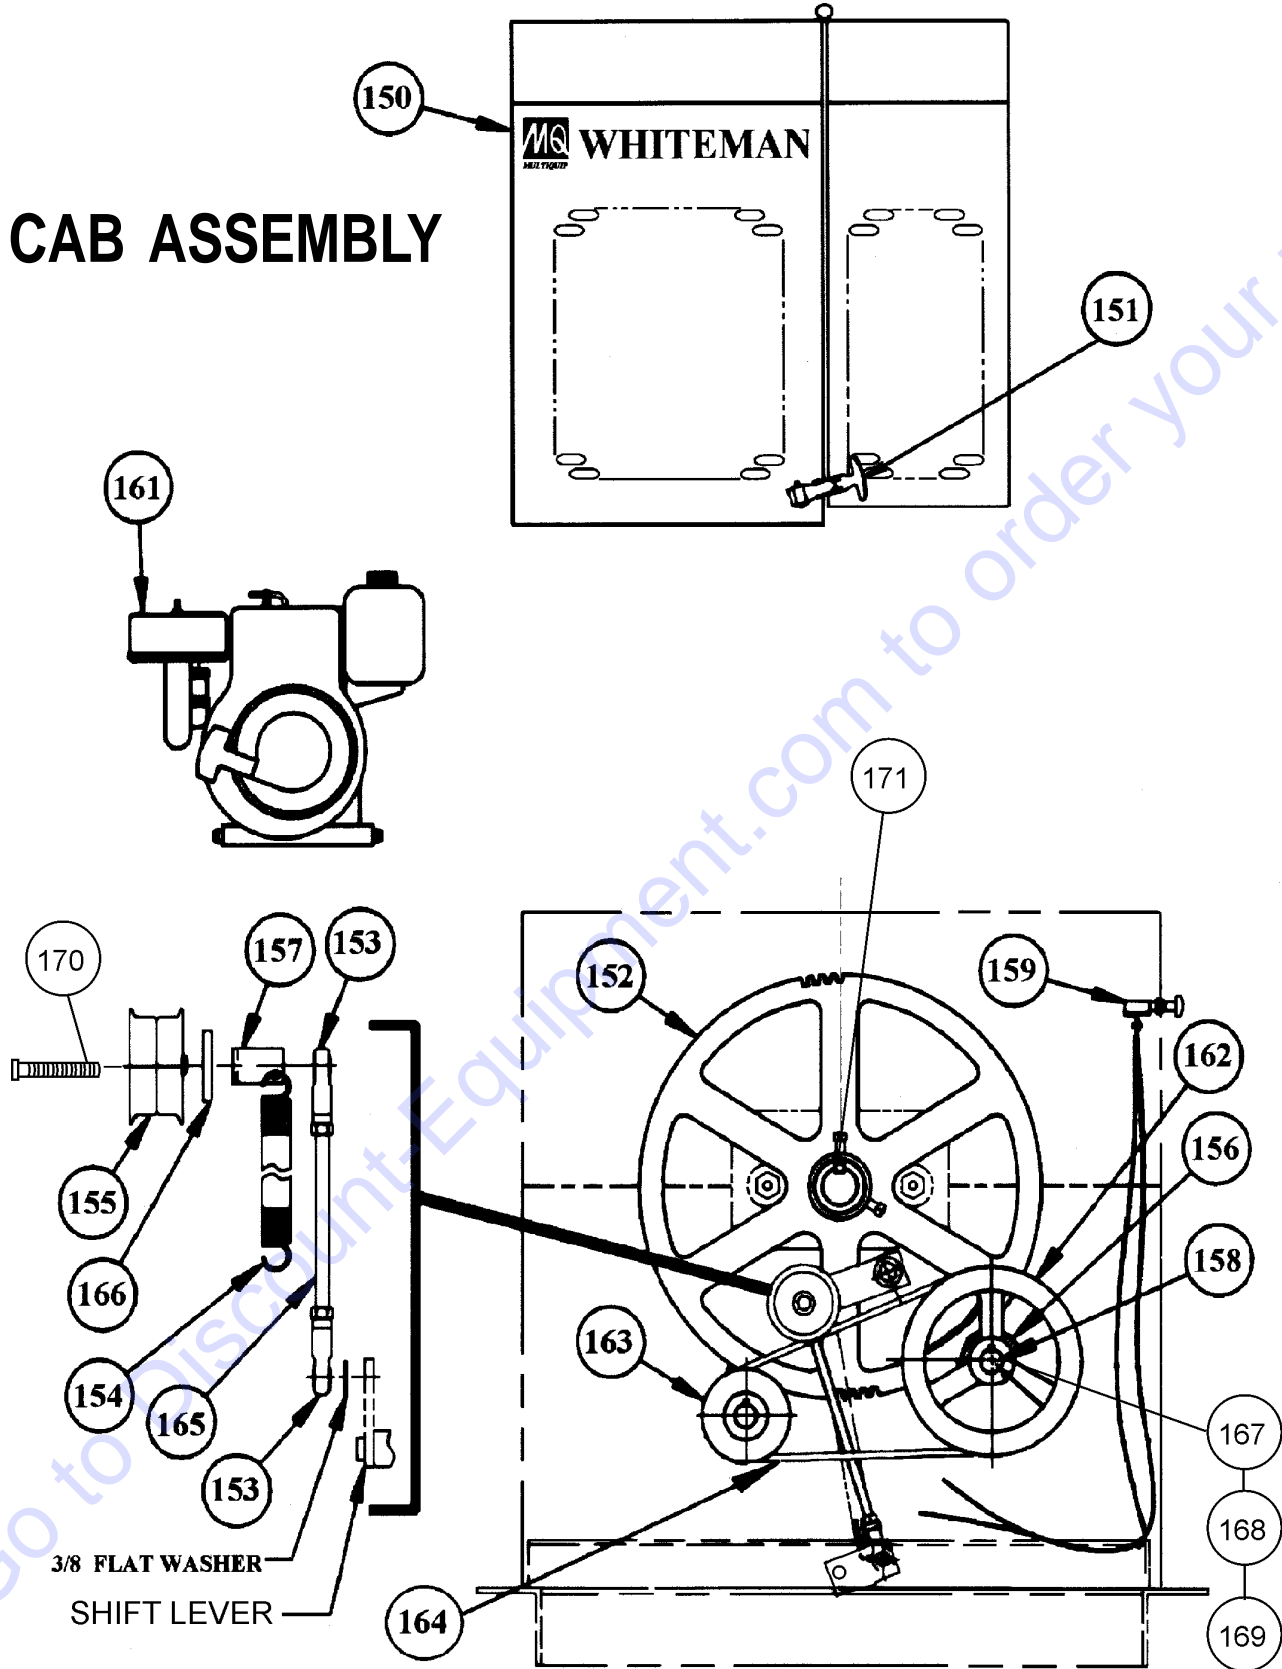

# WM-700S, 700P — ELECTRIC MOTOR & PULLEYS


## ELECTRIC MOTOR & PULLEYS

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
161	P145K17DB45A	ELECTRIC MOTOR 1.5 H.P .....	1 .....	REPLACES 939275 & 3197
162	EM505204	DRIVEN PULLEY	1	
163	502213	DRIVE PULLEY .....	1 .....	REPLACES 901019
164	EM507846	V-BELT	2	
165	EM507490	THREADED ROD	1	
166	EM507713	IDLER ARM	1	
	507715	GUIDE, V-BELT .....	1 .....	NOT ILLUSTRATED

FOR COMMON PARTS SEE PAGE 21

Go to Discount-Equipment.com to order your parts

# WM-700S, 700P — AXLE & WHEEL GROUP

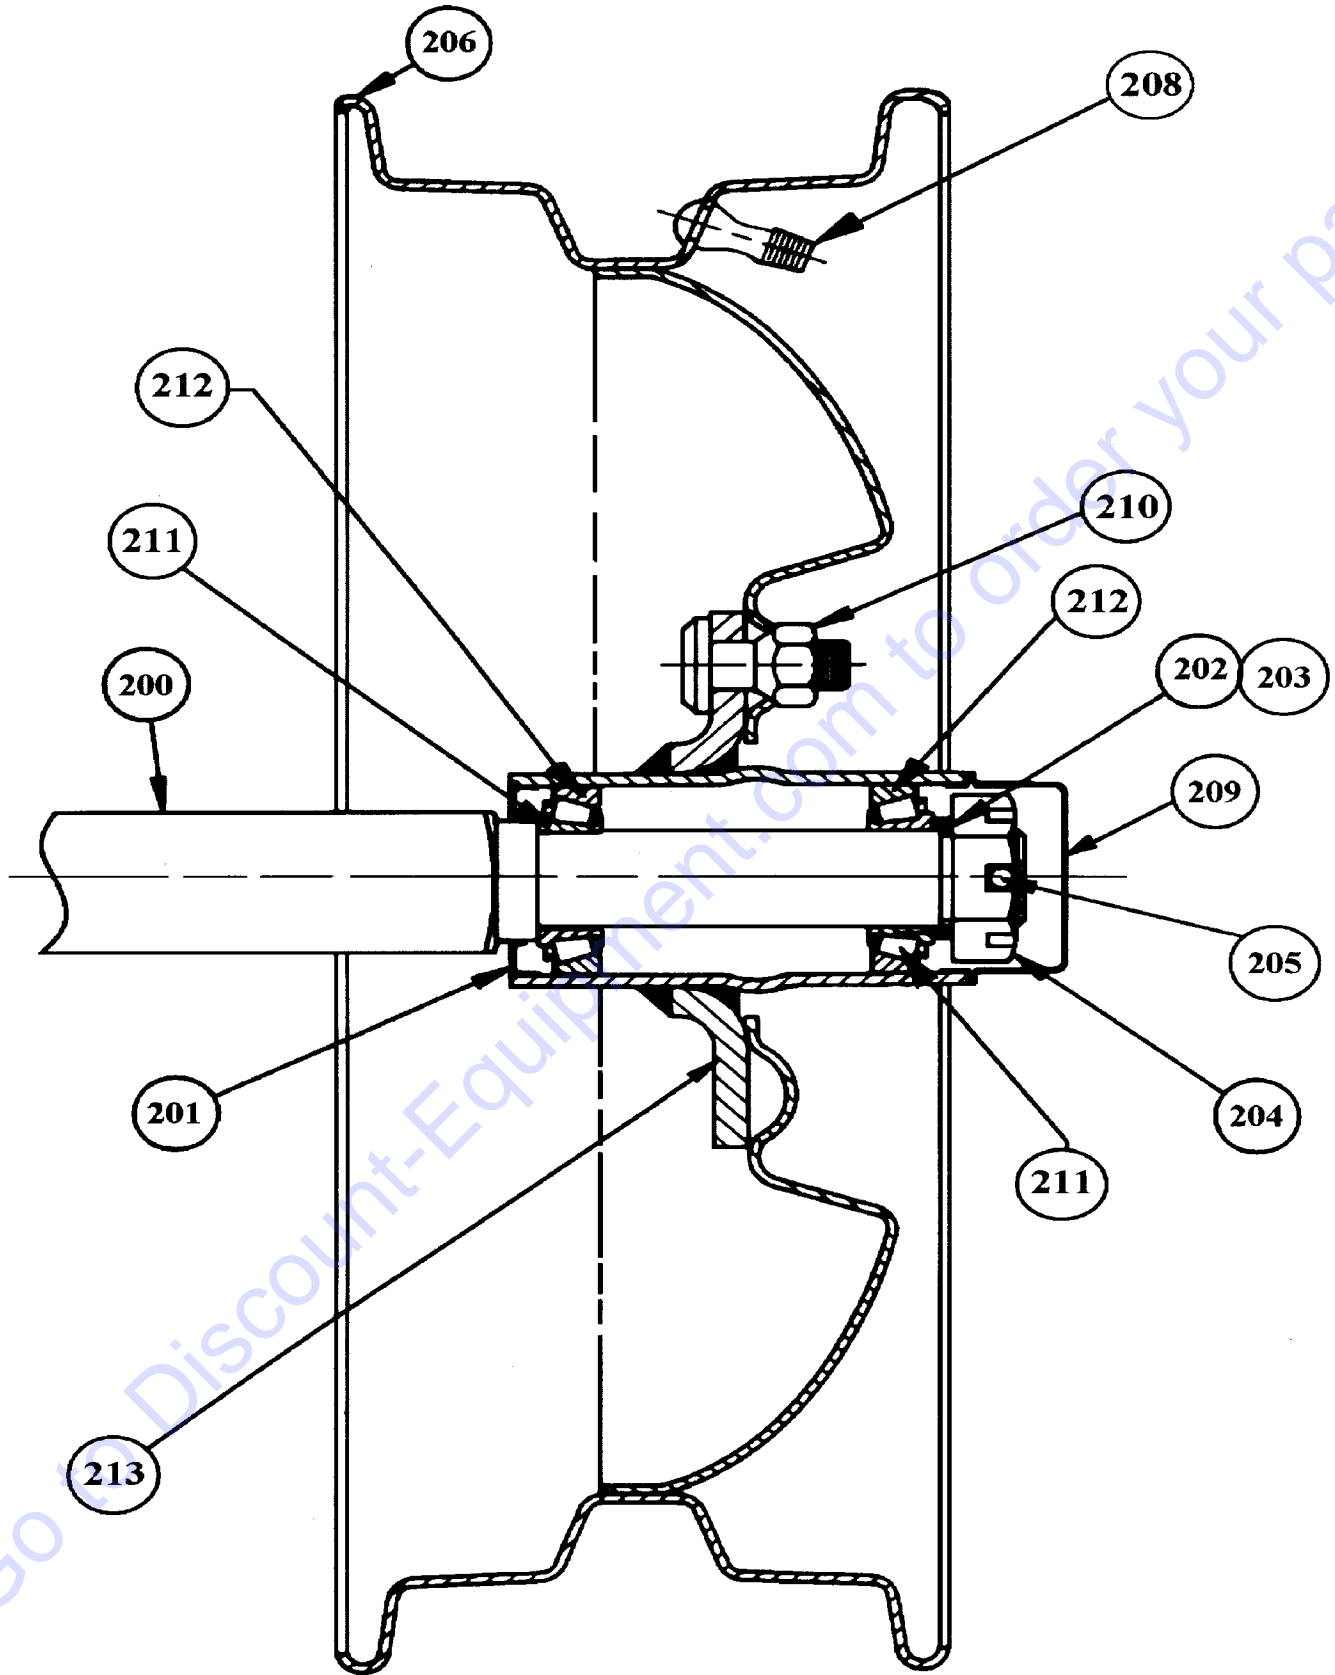

# WM-700S, 700P — AXLE & WHEEL GROUP

## AXLE & WHEEL GROUP

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
200	EM507407	AXLE .....	1 .....	UP TO S/N HL60000
200	511334	AXLE .....	1 .....	STARTING S/N JA00000
201*#	EM914288	SEAL	2	
202	EM501299	THICK SPACER .....	2 .....	1" INSIDE DIAMETER
203	EM511159	THIN SPACER .....	2 .....	1" INSIDE DIAMETER
204	3068	AXLE NUT .....	2 .....	UP TO S/N HL60000
204	8164	AXLE NUT .....	2 .....	STARTING S/N JA00000
205	0183	COTTER PIN	2	
206	3005	RIM & TIRE ONLY	2	
207	3469	GREASE CAP	1	
208	EM942000	VALVE STEM .....	1 .....	REPLACES 942052
209*#	3469	DUST CAP	2	
210*#	8115	LUG NUT	8	
211*	EM903049	BEARING CONE .....	2 .....	UP TO S/N HL60000
211#	EM903113	BEARING CONE .....	2 .....	STARTING S/N JA00000
212*#	EM903012	BEARING CUP	2	
213	3504	HUB W/CUPS .....	2 .....	UP TO S/N HL60000, INCLUDES ITEM w/*
213	EM941306	HUB W/CUPS .....	2 .....	STARTING S/N JA00000, INCLUDES ITEM w/#



# PARTS FINDER

**Search Website  
by Part Number**



**Search Manual  
Library For Parts  
Manual & Lookup Part  
Numbers – Purchase  
or Request Quote**

**Search Manuals**

Enter your information to help us find the right parts manual for your machine.

\* Brand:

\* Model:

\* Serial:

\* Part Number:

SEARCH

**Can't Find Part or  
Manual? Request Help  
by Manufacturer,  
Model & Description**

**Parts Order Form**

Please fill in the following information to help us find the right part for your machine.

Manufacturer:	<input type="text"/>
Model:	<input type="text"/>
Description:	<input type="text"/>
Part Number:	<input type="text"/>
Quantity:	<input type="text"/>
Notes:	<input type="text"/>

Submit

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

**Need parts?**

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar