


# Broce Broom PARTS MANUAL

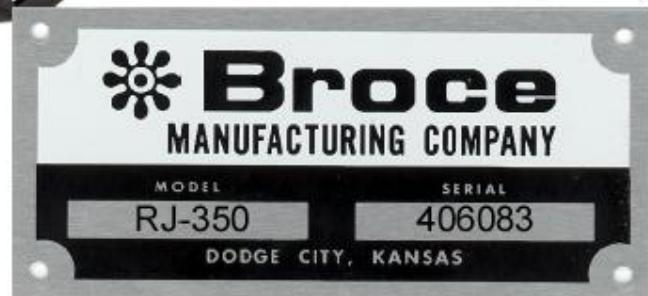

**MODELS**  
**350 Series**

**Serial Numbers**  
**407638 thru 408093**



THE  LEADER



[www.discount-equipment.com](http://www.discount-equipment.com)

# BROCE BROOM MODEL 350

## ESTIMATED DIMENSIONS

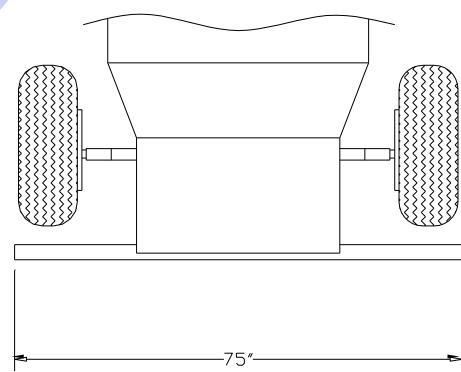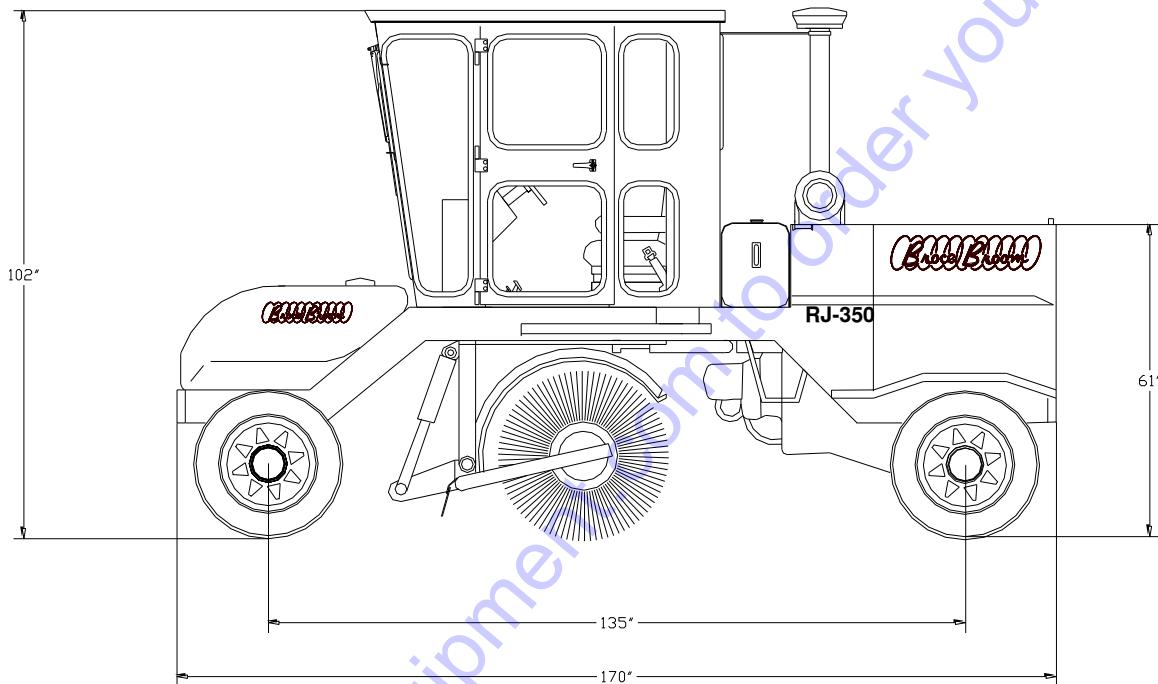

Go to Discount-Equipment.com to order your parts

# TABLE OF CONTENTS

Main Frame Component Parts .....	1-2
Instrument Panel & Components .....	3-4
Seat and Suspension .....	5-6
Brake Control Assemblies .....	7-8
Hydrostatic Control Assemblies .....	9-10
Circle Frame and Components .....	11-12
Direct Drive Core Assembly .....	13-14
Chain Drive Core Assembly .....	15-16
Broom Core Wafers and Spacers .....	17-18
Bolster Assembly .....	19-20
Front Axle Parts and Steering .....	21-22
Front Brake Assembly .....	23-24
Rear Axle & Drive Assembly .....	25-26
Rear Brake Assembly .....	27-28
Two Speed Gear Box .....	29-30
Model 44 Industrial Axle .....	31-32
Tow Bar Assembly .....	33-34
Cab Assembly .....	35-36
Roll Over Protection Structure & Related Parts .....	37-38
Fuel Tank Assembly .....	39-40
Decal Kit .....	42
<b>HYDRAULIC SYSTEM DETAILS .....</b>	<b>44-54</b>
Hydraulic System Components – Front Section .....	45-46
Hydraulic System Components – Cab/Valve Section .....	47-48
Hydraulic System Components – Variable Speed Option .....	49-50
Hydraulic System Components – Rear Section .....	51-52
Hydrostatic Drive System .....	53-54

# TABLE OF CONTENTS (Cont.)

## HYDRAULIC SYSTEM DETAILS (Cont.)

Core Rotation Valve Assembly .....	55-56
Joystick Valve Assembly .....	57-58
Optional Down Pressure Limiter .....	59-60

## ELECTRICAL SYSTEM & ACCESSORIES.....62-76

Gauges & Senders .....	63-64
Windshield Wipers & Washer .....	65-66
Misc. Switches, Fuses, Etc.....	67-68
Lights & Horns .....	69-70
Heater/Defroster.....	71-72
Air Conditioning System.....	73-76

## BROOM ACCESSORY SYSTEMS .....77-89


Water System Illustrations .....	79-80
Scraper Blade Illustrations .....	81-82
Scraper Blade Hydraulics .....	83-84
Curb Sweeper Illustrations .....	85-86
Curb Broom Hydraulics .....	87-88

## ENGINES AND RELATED PARTS .....89-122

RCT-350 EXPORT Engine .....	91-98
RCT-350 USA/CANADA Tier 4i Engine .....	99-108
RJT-350 Engine.....	109-118
KR-350 Engine .....	119-120
CR-350 .....	121-122

## MAINTENANCE, SPECIFICATIONS AND SCHEMATICS .....123+


# MAIN FRAME COMPONENT PARTS

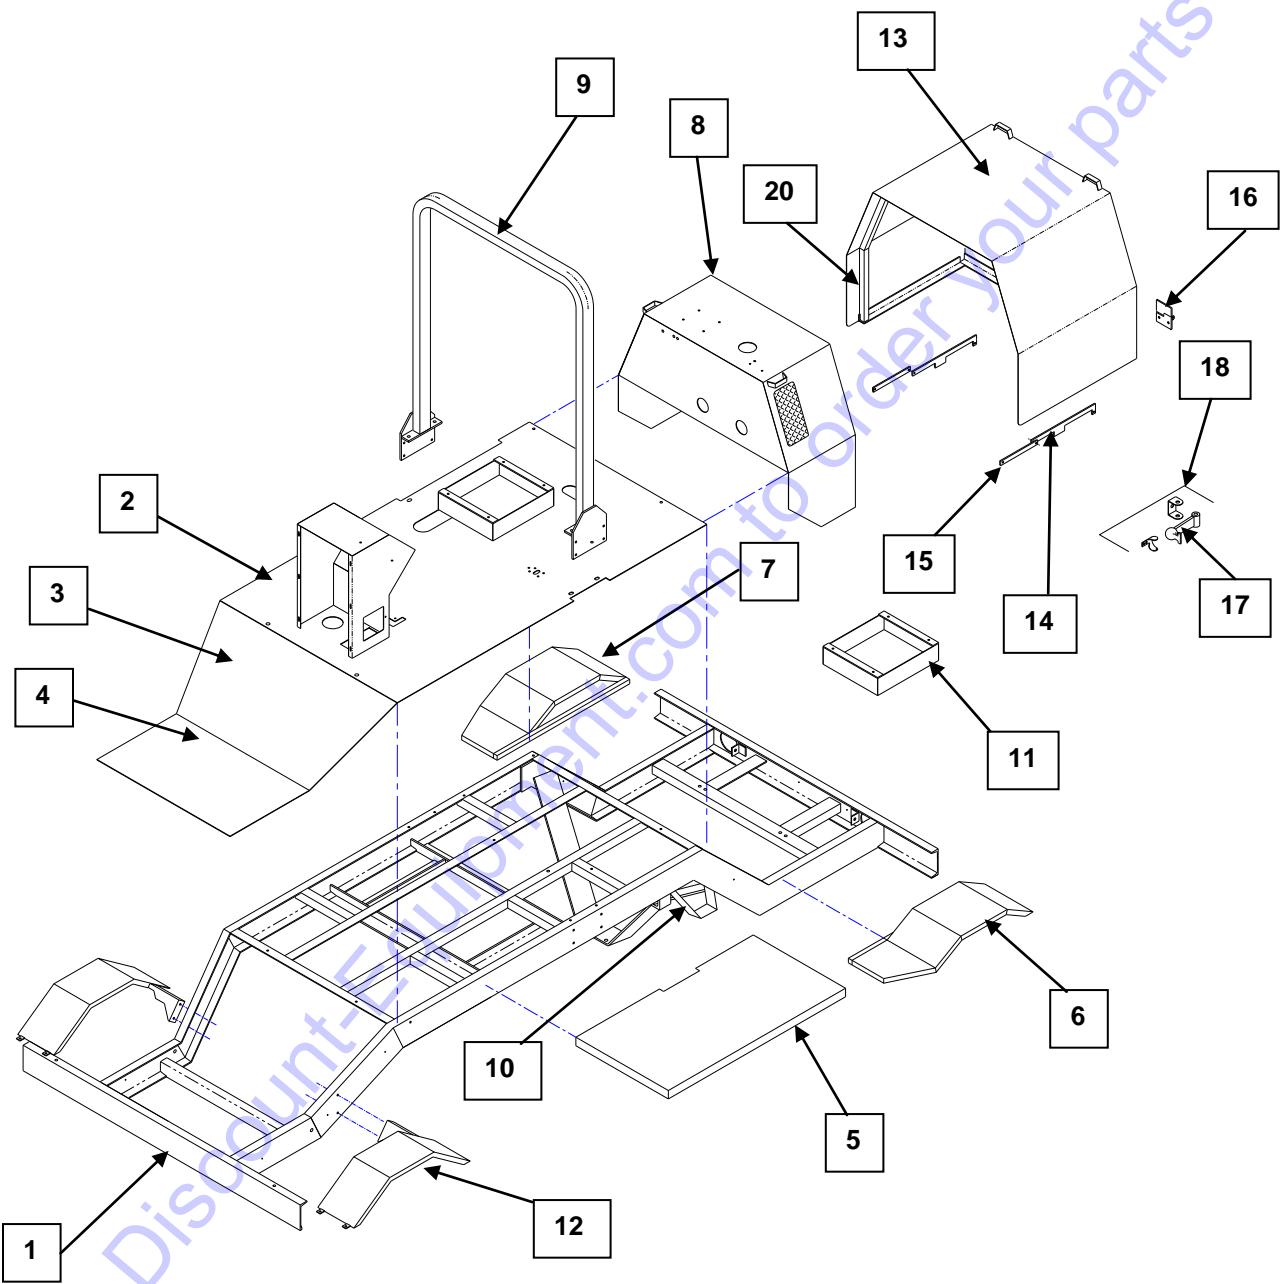

# MAIN FRAME COMPONENT PARTS

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	F-201-R .....	Main Frame w/ Decking .....	1
2.....	F-206-RS.....	Main Deck (Smooth) .....	1
	F-206-R .....	Main Deck (Diamond Tread) .....	1
3.....	F-205-R .....	Diagonal Deck (w/o Water System) .....	1
	F-205-RW .....	Diagonal Deck (w/ Water System) .....	1
4.....	F-204-R .....	Front Deck (w/o Water System) .....	1
	F-204-RW .....	Front Deck (w/ Water System) .....	1
5.....	F-209-EX .....	Deck Step (Expanded Metal) .....	1
	F-209-R .....	Deck Step (Diamond Tread) .....	1
6.....	850073 .....	Rear Fender, LH .....	1
7.....	850072 .....	Rear Fender, RH .....	1
8.....	852049-C .....	Fire Wall .....	1
9.....	See Roll Over .....	Roll Bar (2 Post) Protection .....	1
10.....	F-202 .....	Frame Step .....	1
11.....	203138 .....	Seat Support Base (Non-suspension) .....	1
12.....	F-826 .....	Front Fenders (pair) .....	1
13.....	VF-208-C .....	Hood Assembly .....	1
14.....	203274 .....	Hood Support Linkage .....	1
15.....	001687 .....	Hood Support Linkage .....	1
16.....	VF-317-B .....	Hinge, (Set of 2) .....	1
17.....	VF-803-R .....	Hood Catch (Rubber Strap only) .....	2
18.....	VF-319-RA .....	Catch Assembly (Complete) .....	2
19.....	F-811-R .....	Rock Guard .....	1
20.....	304009 .....	Rubber Hood Molding .....	1


# INSTRUMENT PANEL AND COMPONENTS

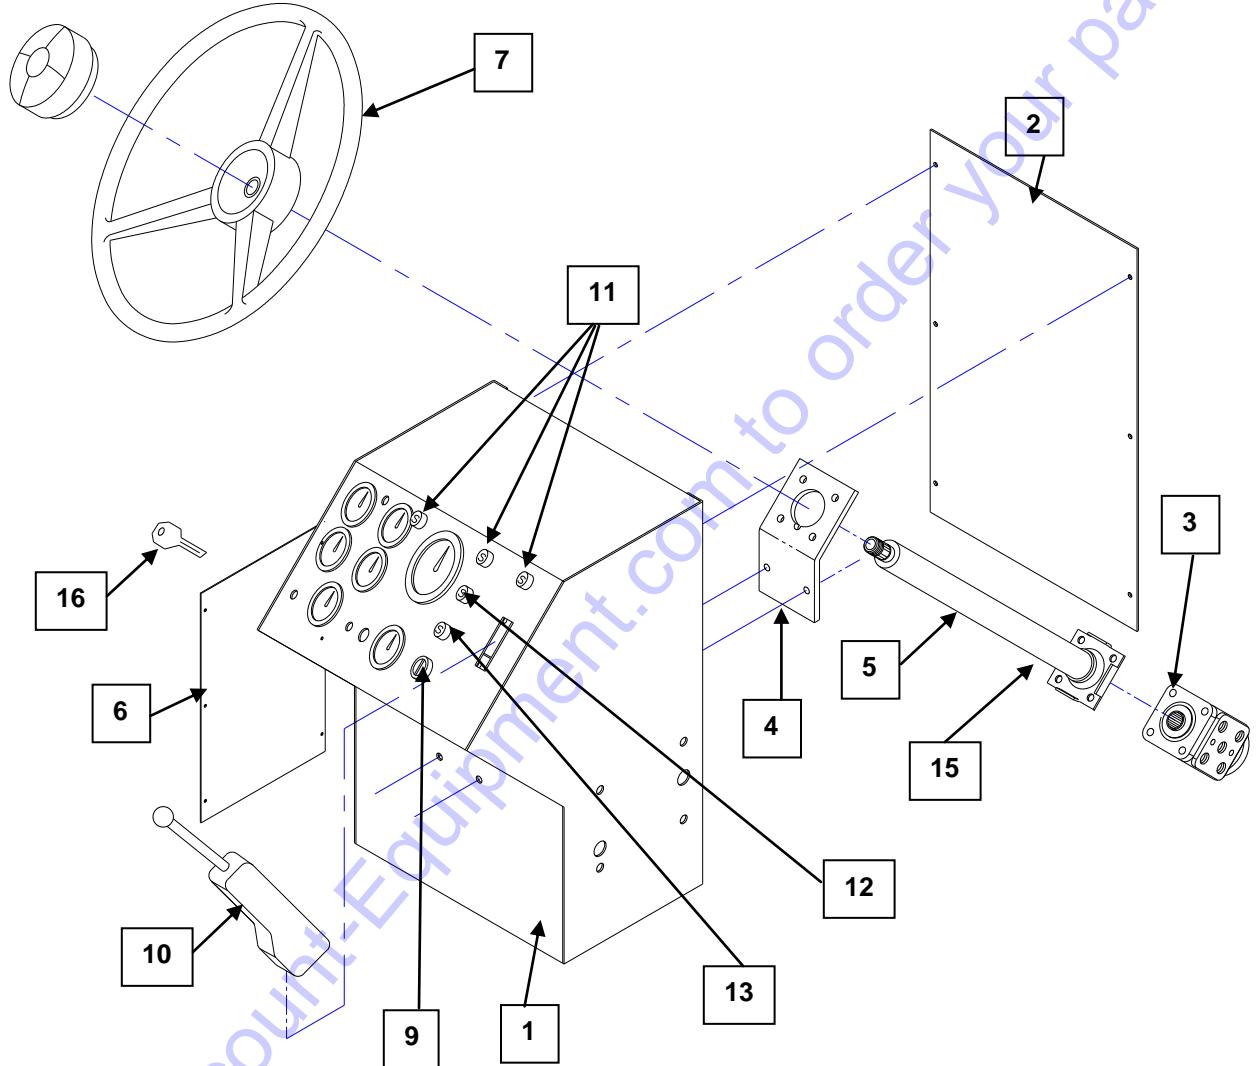

# INSTRUMENT PANEL AND COMPONENTS

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	I-217-AR.....	Dash Housing .....	1
2.....	I-218-R .....	Dash Back Cover .....	1
3.....	See Hydraulic .....	Power Steering Unit System – Front Section	1
4.....	SM-249-D.....	Power Steering Unit Mount .....	1
5.....	305945 .....	Steering Column.....	1
	305950.....	Tilt Steering Column (No Conversion) .....	1
6.....	205169 .....	Access Cover .....	1
7.....	S-253-R .....	Steering Wheel/Horn Assembly .....	1
9.....	See Electrical .....	Ignition Switch..... Section	1
10.....	HS-230-A .....	Shifter Assembly (2 Speed).....	1
	HS-231-A.....	Shifter Cable (Not Shown) .....	1
11.....	See Electrical.....	Universal Accessory Switch .....	3
	Section		
	See Electrical .....	Lighted Rocker Switch (Not Shown) .....	1
	Section		
12.....	See Electrical.....	Wiper Switch .....	1
	Section		
13.....	See Heater/.....	Heater Switch (2 Speed)..... Defroster	1
15.....	N/A.....	Horn Sender (Replace Column) .....	1
16.....	See Electrical.....	Spare Key (pair) .....	1
	Section		

# SEAT AND SUSPENSION COMPONENTS

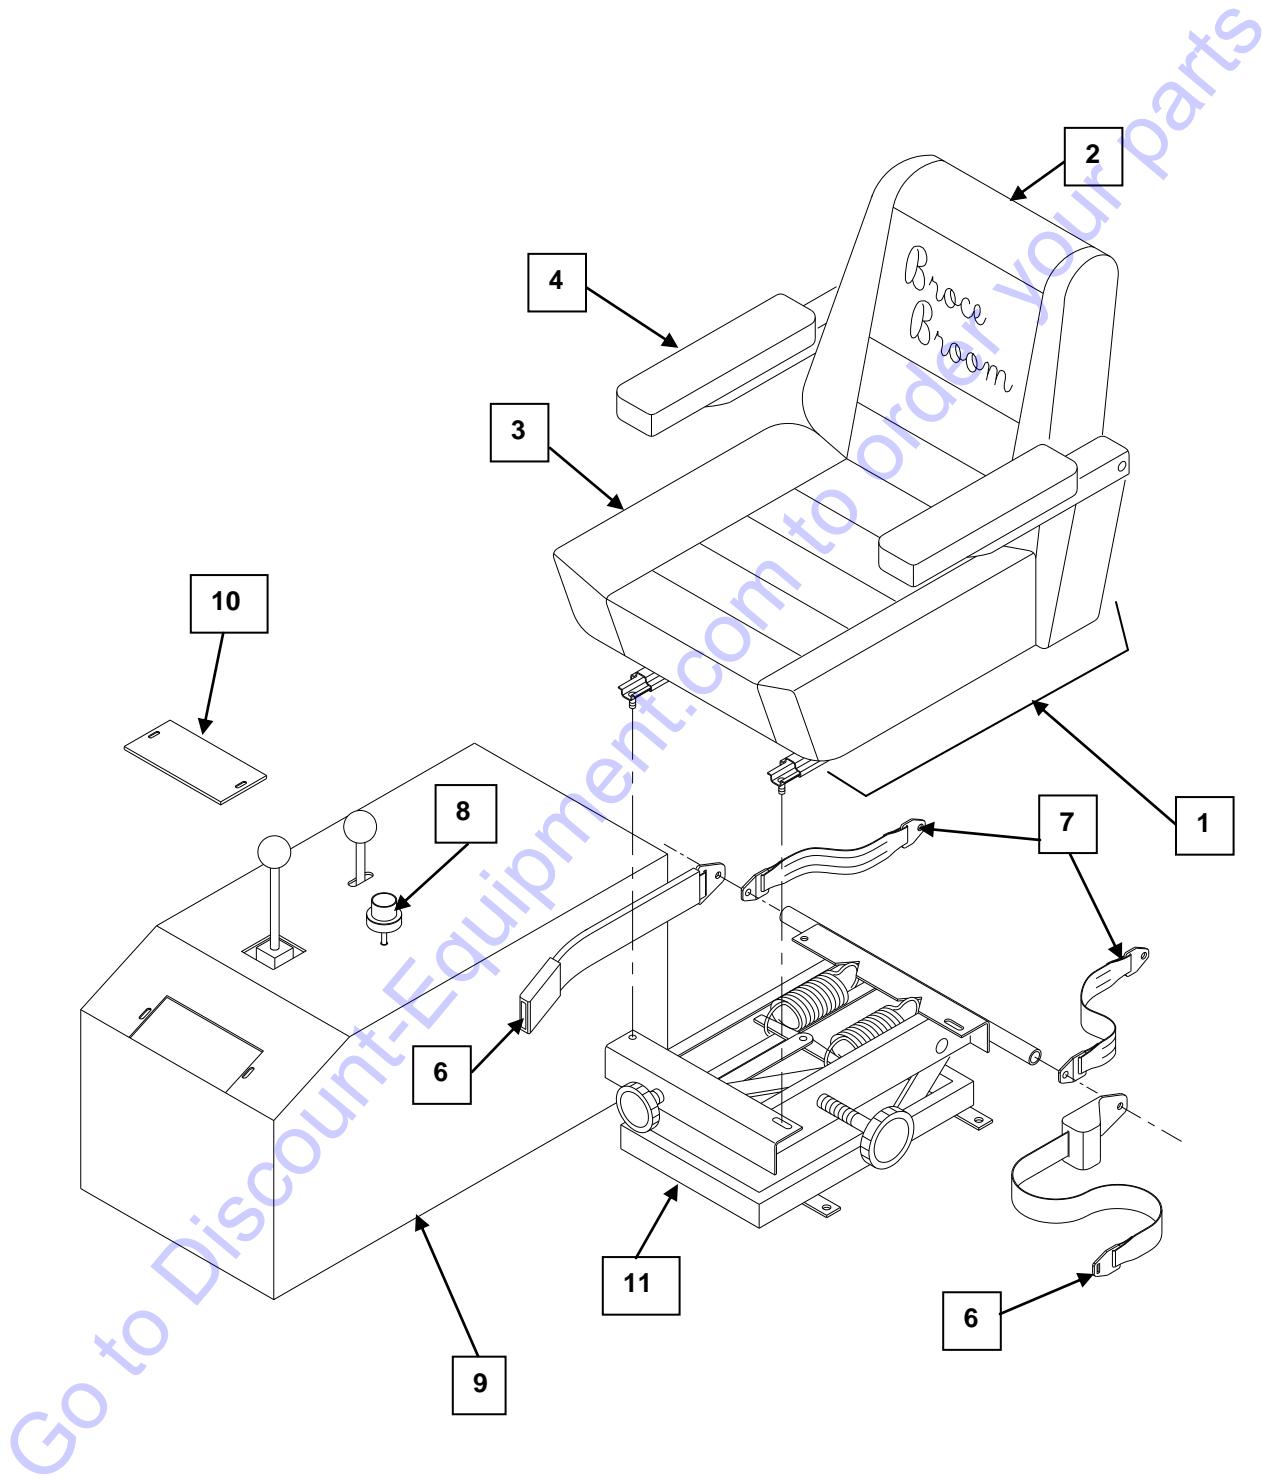


## SEAT AND SUSPENSION COMPONENTS

Reference	Part No.	Description	Qty.
1.....	BS-1050 .....	Seat Assembly .....	1
2.....	BS-1051 .....	Back Rest .....	1
3.....	BS-1052 .....	Seat Cushion.....	1
4.....	BS-1053L+R .....	Arm Rest Pad .....	2
6.....	C-211.....	Retractable Seat Belt (Shown) .....	1
	C-211-SH.....	Retractable Seat Belt w/ Shoulder Harness (Not Shown).....	1
7.....	C-211-RT .....	Tether Strap Set (for use w/ Suspension Seat).....	1
8.....	T-213-R .....	Throttle Cable .....	1
9.....	203436 .....	Hydraulic Control Cabinet .....	1
10.....	203183 .....	Valve Box Cover .....	1
11.....	BS-1054 .....	Suspension Assembly .....	1
Not Shown.....	203181 .....	Hydraulic Control Cover Back .....	1
Not Shown.....	309456 .....	Throttle Cable (Cat Engine) .....	1

Go to [Discount-Equipment.Com](http://Discount-Equipment.Com) to order your parts


# BRAKE CONTROL ASSEMBLIES

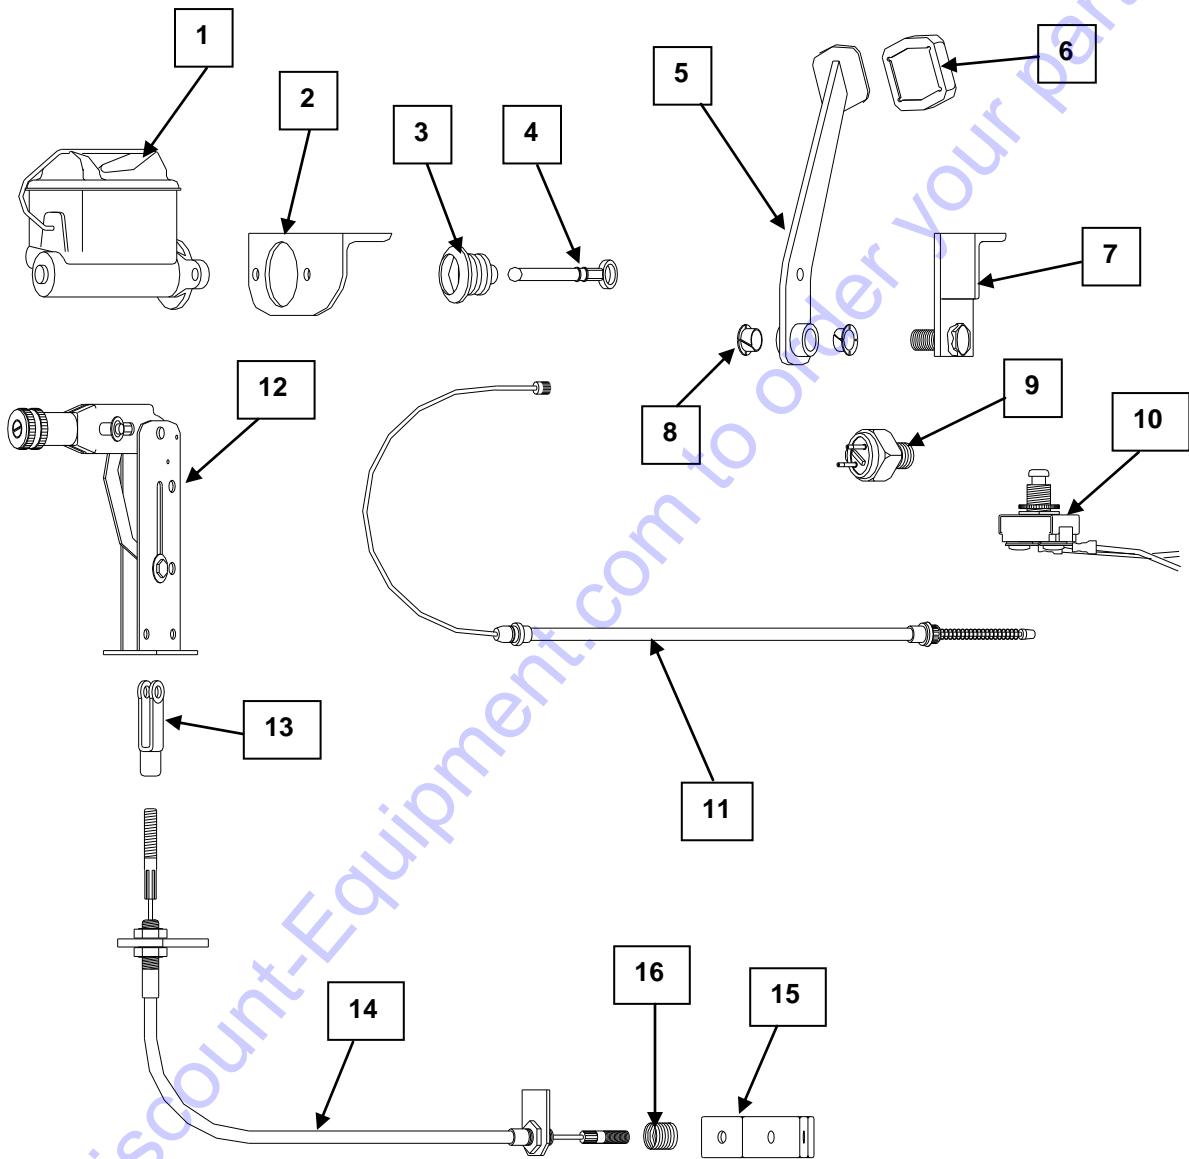

# BRAKE CONTROL ASSEMBLIES

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	B-240-B.....	Dual Master Cylinder.....	1
2.....	BM-245-R.....	Master Cylinder Mount.....	1
3.....	B-284.....	Rubber Boot.....	1
4.....	K00001.....	Push Rod.....	1
5.....	B-238-R.....	Brake Pedal .....	1
6.....	B-241-R.....	Brake Pedal Pad .....	1
7.....	BM-244-R.....	Pedal Mount .....	1
8.....	B-242-R.....	Pedal Bushing.....	2
9.....	BLS-15.....	Brake Light Switch.....	1
10.....	PBS-13.....	Parking Brake Switch.....	1
11.....	PB-237.....	Parking Brake Cable.....	2
12.....	PB-233-C .....	Brake Lever Assembly .....	1
13.....	PB-229-C .....	Clevis (3/8" Fine Thread) .....	1
14.....	PB-235-C .....	Primary Parking Brake Cable .....	1
15.....	202091 .....	Parking Brake Adjuster .....	1
16.....	344105 .....	Tension Spring .....	1
Not Shown .....	F97935 .....	Master Cylinder Repair Kit .....	1

# HYDROSTATIC CONTROL ASSEMBLIES

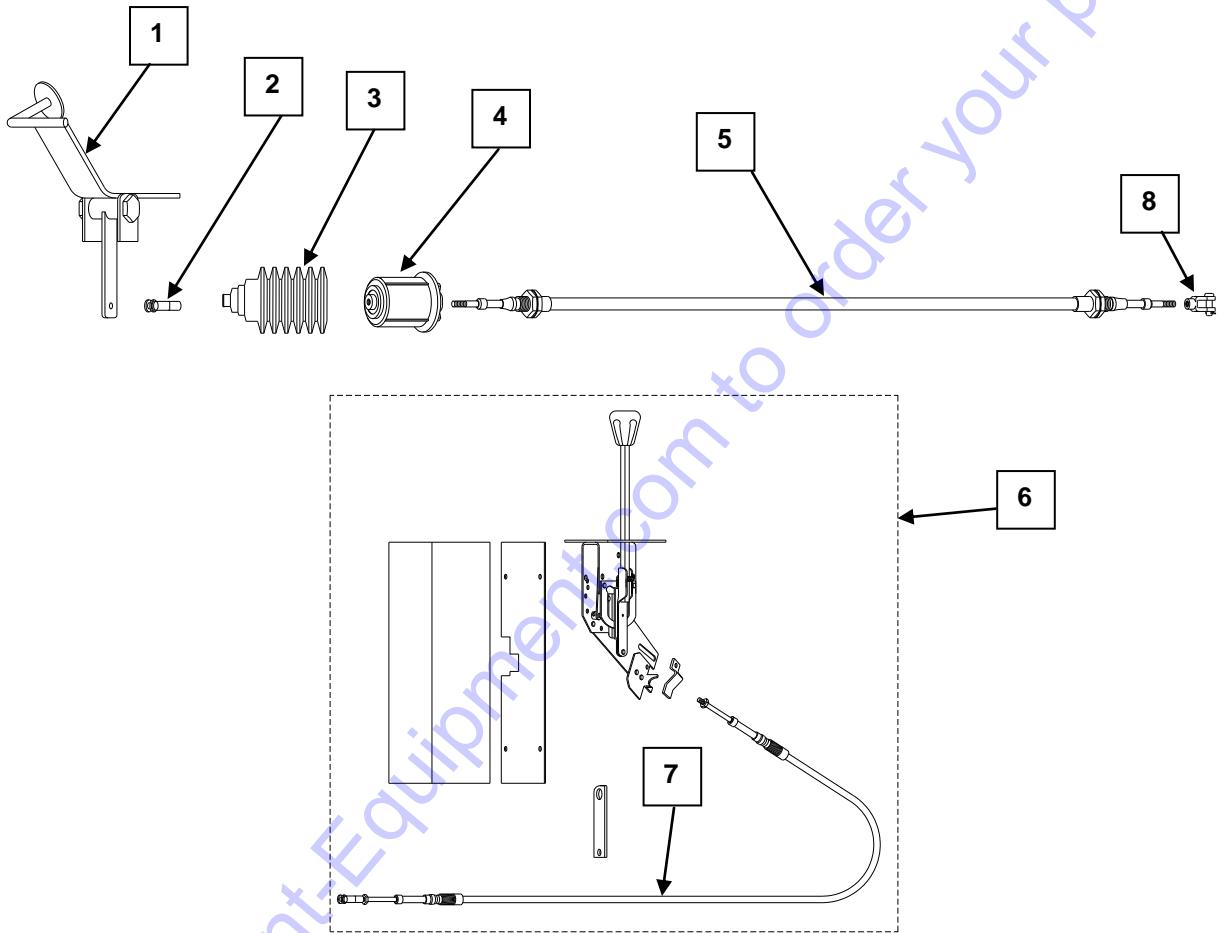


## HYDROSTATIC CONTROL ASSEMBLIES

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	HC-226-R .....	Control Pedal Assembly .....	1
2.....	HC-229-B .....	1/4" Clevis w/ Pin (Note: Control Cable) .....	1
3.....	HC-228-B .....	Hydro-Back Boot .....	1
4.....	HC-228-HB .....	Hydro-Back Device .....	1
5.....	HC-228-E .....	Hydro-Back Cable .....	1
6.....	HC-226-HA .....	Hand Control Kit (Note: Converts Foot Control to Hand Control) .....	1
7.....	HC-228-OH .....	Hand Control Cable .....	1
8.....	309466 .....	Heims End .....	1

Go to [DiscountEquipment.com](http://DiscountEquipment.com) to order your parts

# CIRCLE FRAME & COMPONENTS

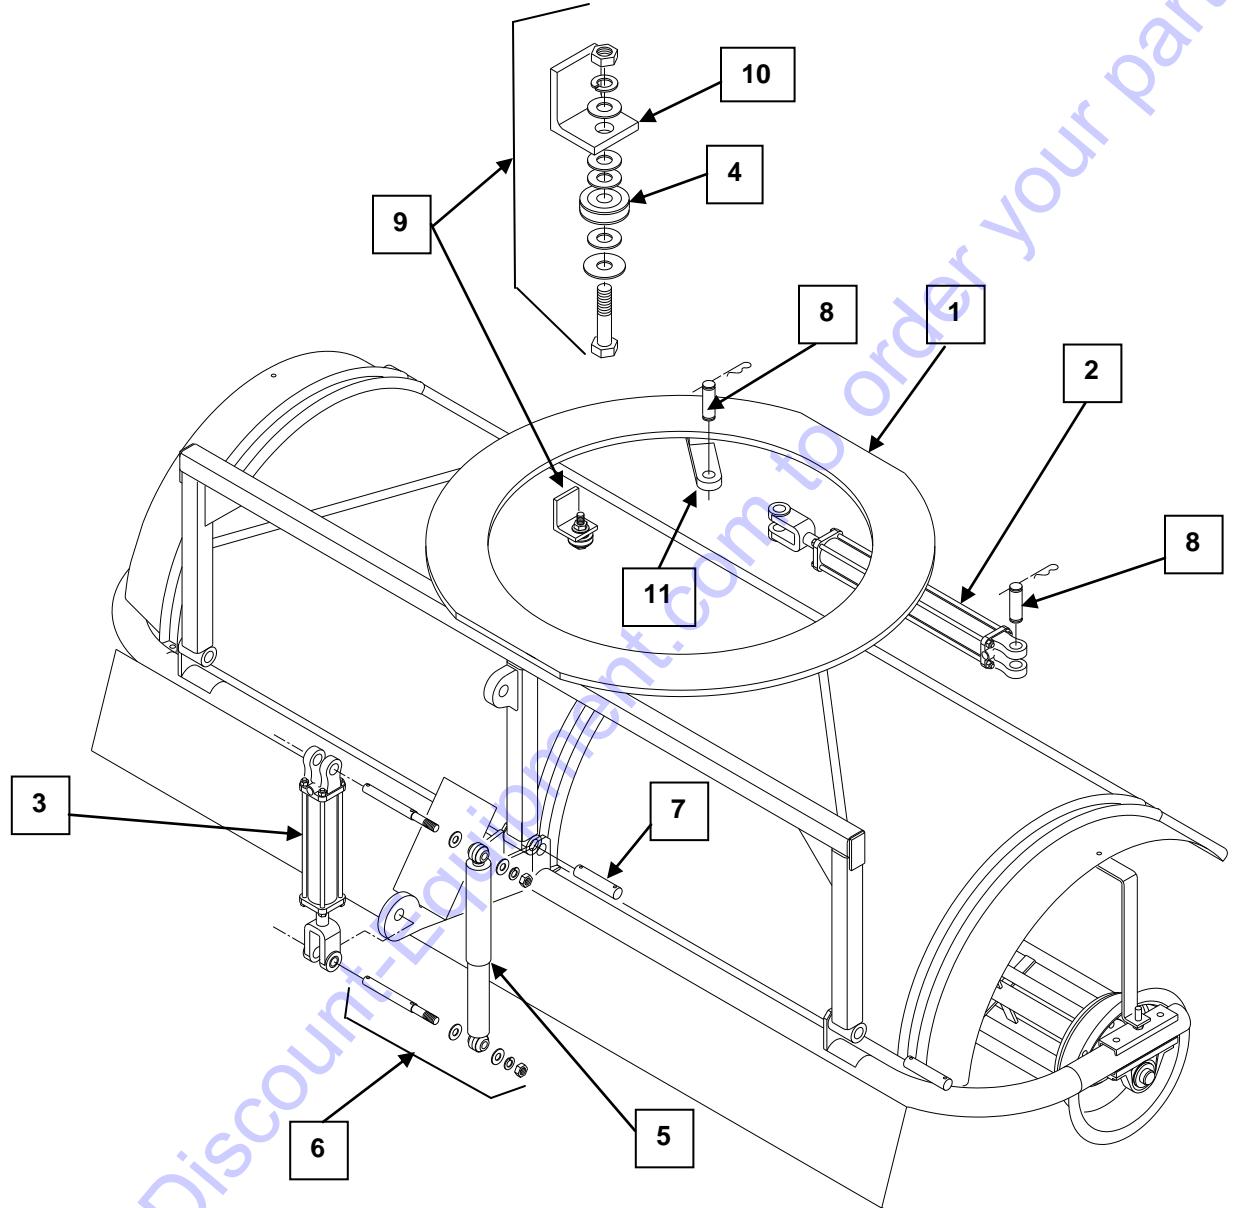


Go to [Discount-Engagement.com](http://Discount-Engagement.com) to order your parts

# CIRCLE FRAME & COMPONENTS

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	C-102.....	Circle Frame.....	1
1a.....	C-102A.....	Circle Frame w/Curb Broom Mount Bracket..	1
2.....	See Hydraulic .....	Shift Cylinder .....	1
3.....	See Hydraulic .....	Lift Cylinder.....	1
4.....	B-103.....	Circle Bearing .....	9
5.....	D-20-R.....	Shock Absorber .....	1
6.....	D-21-R.....	Shock Pin .....	2
7.....	C-109.....	Hinge Pin .....	3
8.....	RC-19.....	Cylinder Pin.....	2
9.....	B-105.....	Bearing Bracket Assembly (qty as required)	
10.....	B-104.....	Bearing Bracket .....	5
11.....	850006 .....	Circle Cylinder Lug.....	1

Go to [Discount-Equipment.Com](http://Discount-Equipment.Com) to order your parts

# DIRECT DRIVE CORE ASSEMBLY

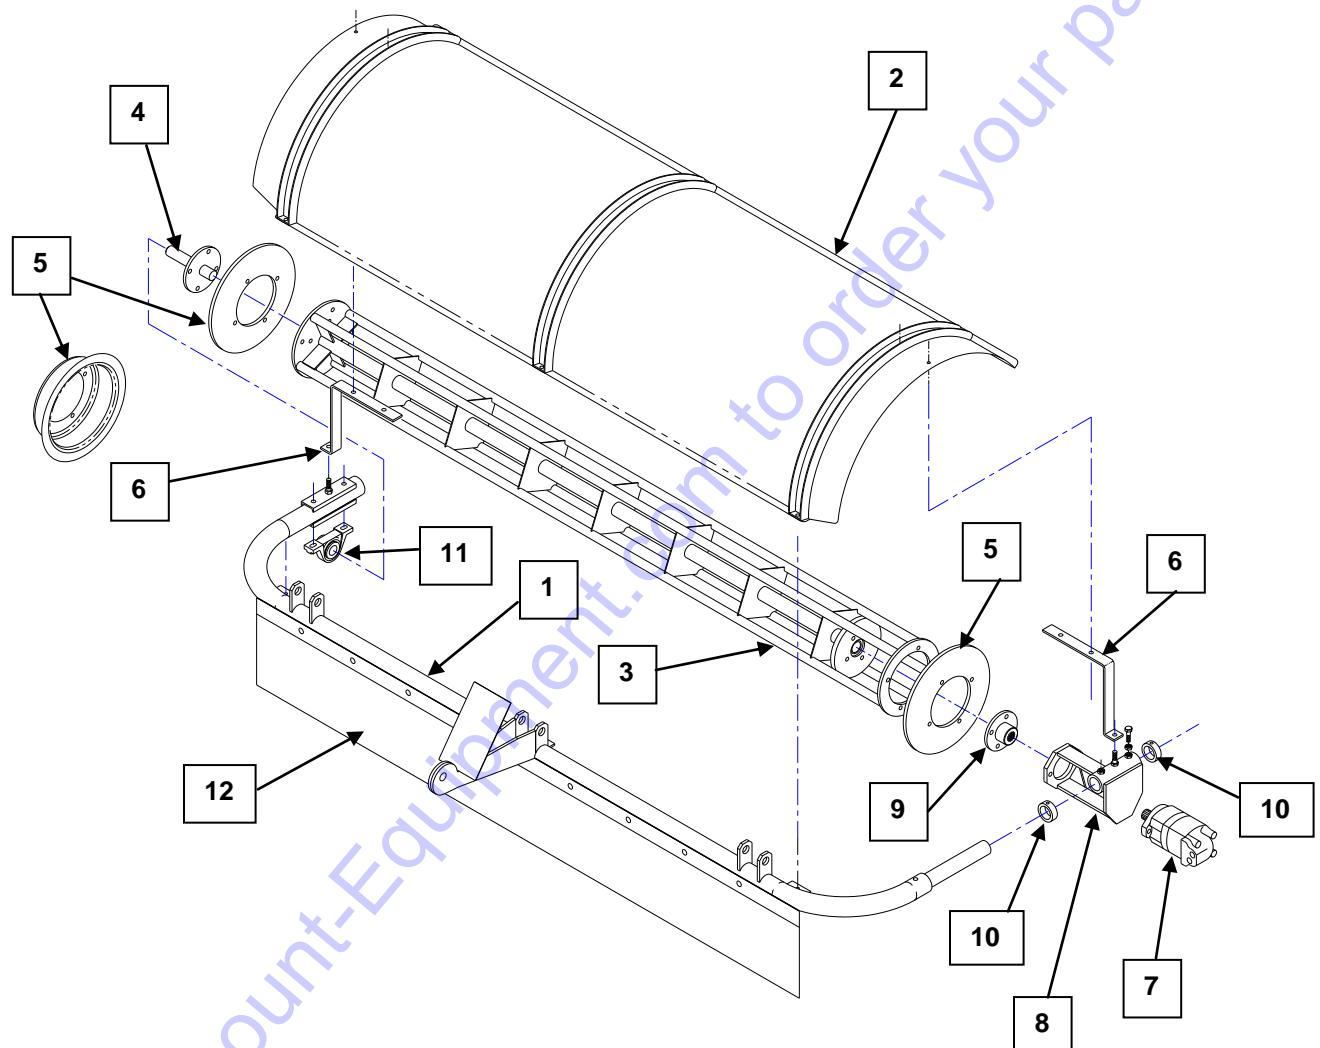


## DIRECT DRIVE CORE ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1	C-108-SPC	Core Support	1
2	D-12-8	Core Cover	1
3	D-15-SPCA	Core w/ Flat End Caps	1
	D-15-SPC	Core w/ Formed End Caps	1
4	D-17	Spindle	1
5	203010	End Cap (Flat – Standard Equipment)	2
	D-16	End Cap (Formed – Optional)	2
6	D-11	Support Bracket	2
7	See Hydraulic Section	Hydraulic Motor (Core)	1
8	MR-16-SPC	Hydraulic Motor Mount (Core)	1
9	DD-257-R	Splined Hub	1
10	MR-16-LR	Lock Ring	2
11	D-13	Pillow Block Bearing	1
12	304129	Core Rock Guard	1

Go to Discount-Equipment.com to order your parts

# CHAIN DRIVE CORE ASSEMBLY

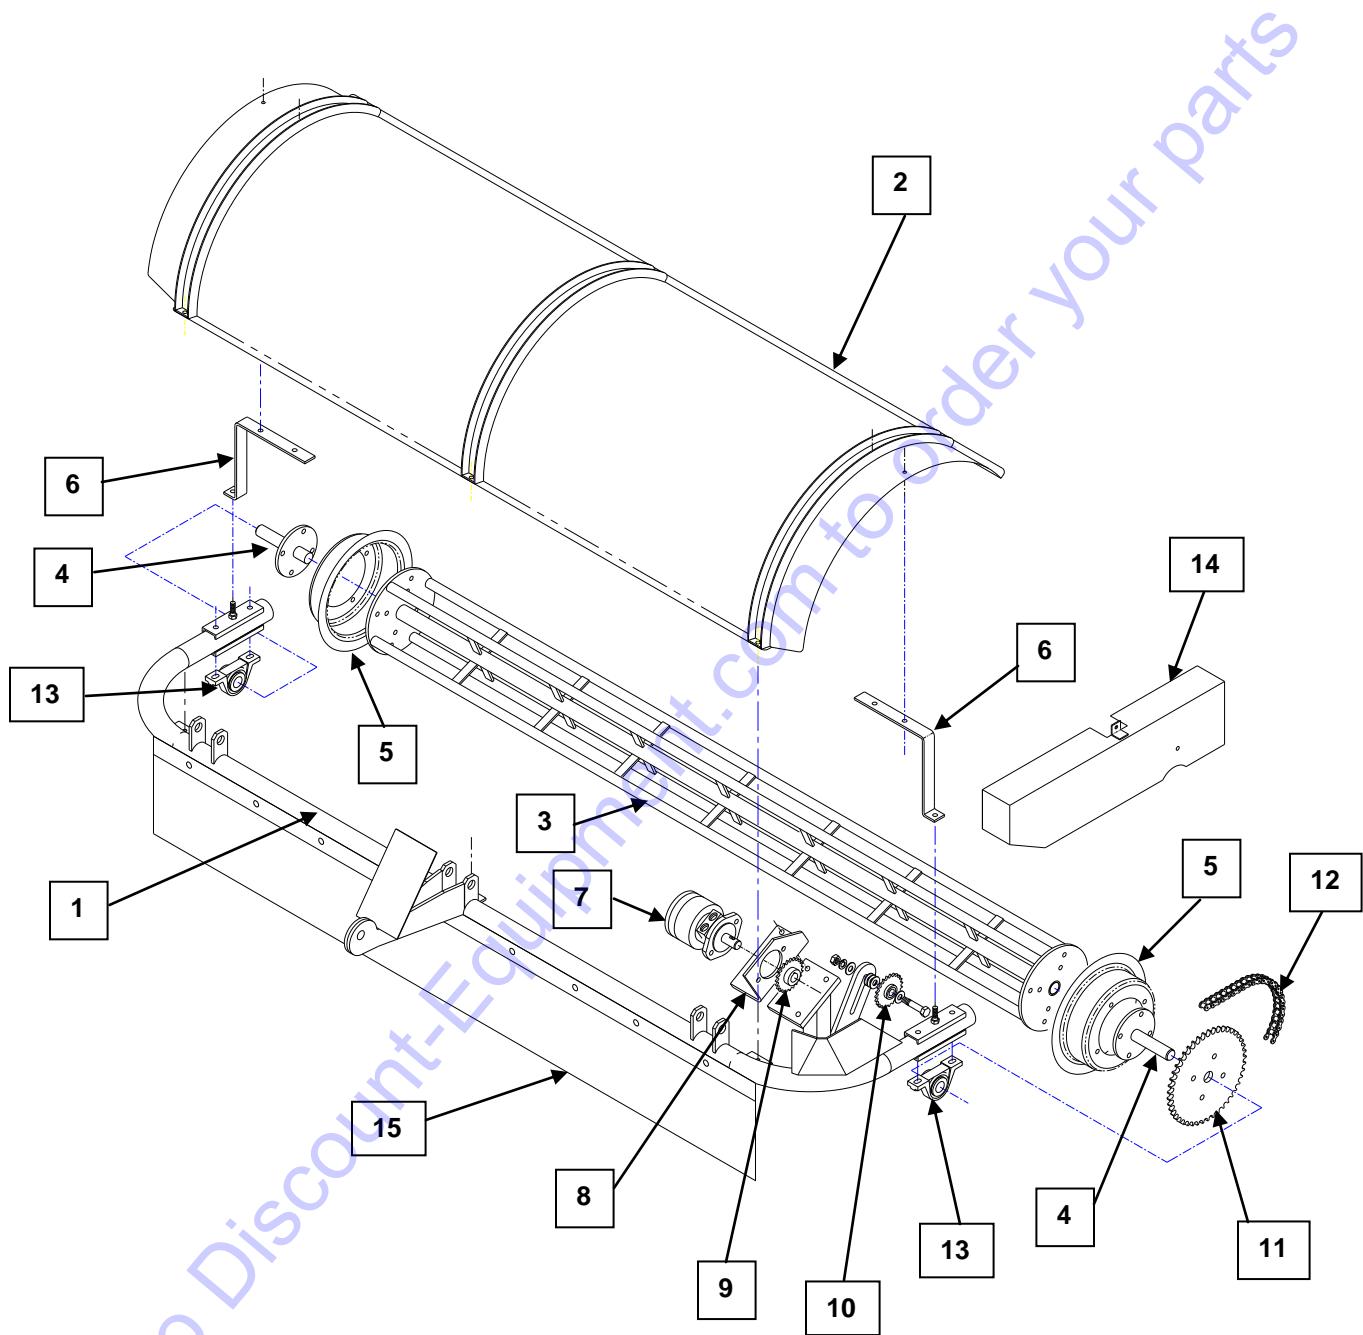


# CHAIN DRIVE CORE ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	C-108-R .....	Core Support.....	1
2.....	D-12-8 .....	Core Cover .....	1
3.....	D-15-8 .....	Core.....	1
4.....	D-17.....	Spindle.....	2
5.....	D-16.....	End Cap .....	2
6.....	D-11.....	Support Bracket.....	2
7.....	MAB-16-B .....	Hydraulic Motor (Core).....	1
8.....	MR-16-AR .....	Hydraulic Motor Mount (Core).....	1
9.....	C-111.....	Sprocket (Drive).....	1
10.....	C-109-AR .....	Sprocket (Idler).....	1
11.....	C-110.....	Sprocket (Driven).....	1
12.....	D-14-R.....	Roller Chain .....	1
13.....	D-13.....	Pillow Block Bearing .....	2
14.....	D-18-R .....	Chain Guard .....	1
15.....	304129 .....	Core Rock Guard .....	1

Go to Discount-Equipment.com to order your parts

# BROOM CORE WAFER & SPACERS

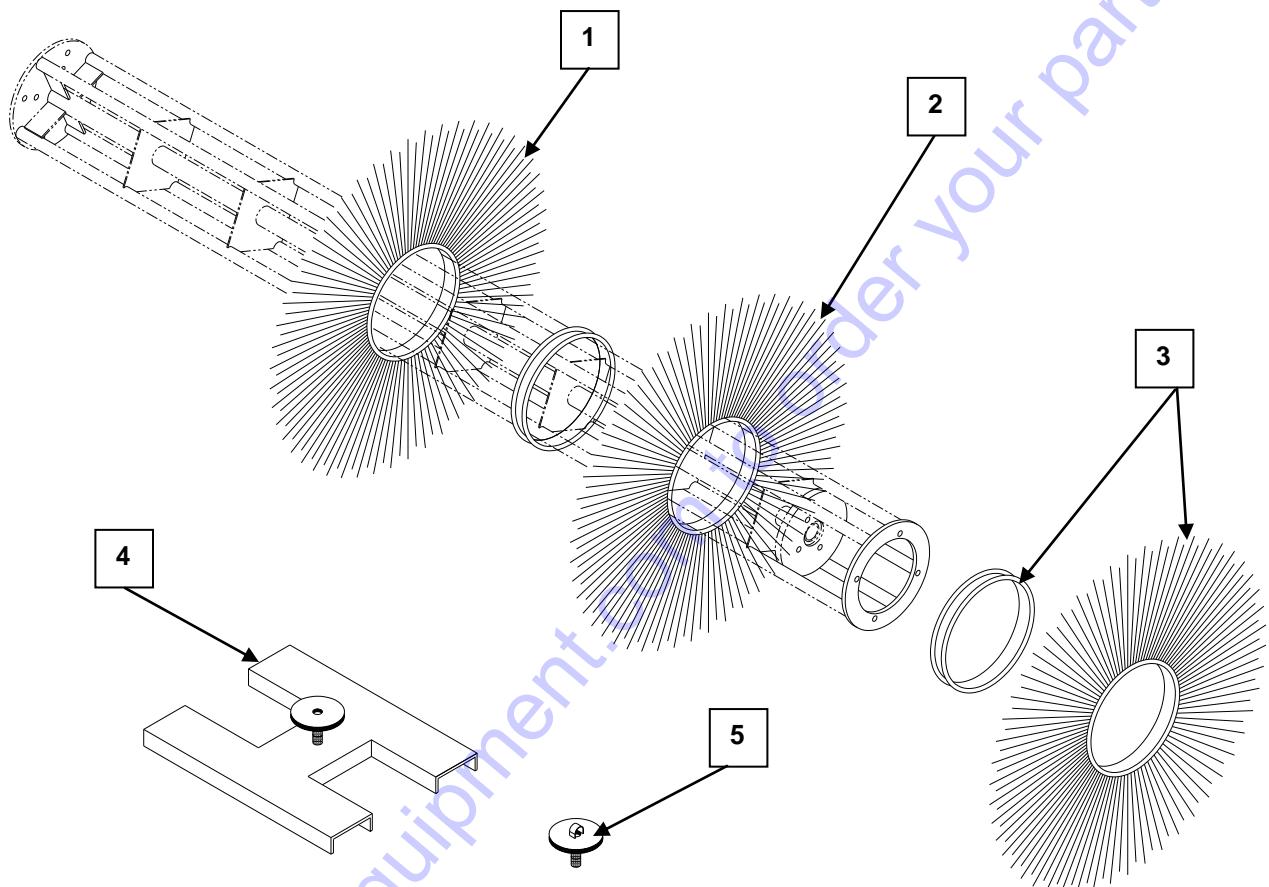


Go to Discount-Equipment.com  
Order your parts

## BROOM CORE WAFER & SPACERS

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	RW-503 .....	10" x 32" Poly Wafer .....	1
2.....	RW-504 .....	10" x 32" Wire Wafer .....	1
3.....	RW-500 .....	8' Set, Poly Wafers w/Spacers .....	1
	RW-502 .....	8' Set, ½ Poly, ½ Wire w/Spacers.....	1
4.....	CS-01 .....	Core Service Stand.....	1
5.....	CS-02 .....	Core Service Ring.....	1
Not Shown.....	304290 .....	Tube Brush Poly Brush.....	1
	304289 .....	Tube Brush ½ Poly, ½ Wire Brush.....	1
Not Shown.....	852427 .....	Strip Brush Mandrel .....	1
	304298 .....	Strip Brush Poly Brush (8' Set – 2 req'd) .....	1

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

# BOLSTER ASSEMBLY

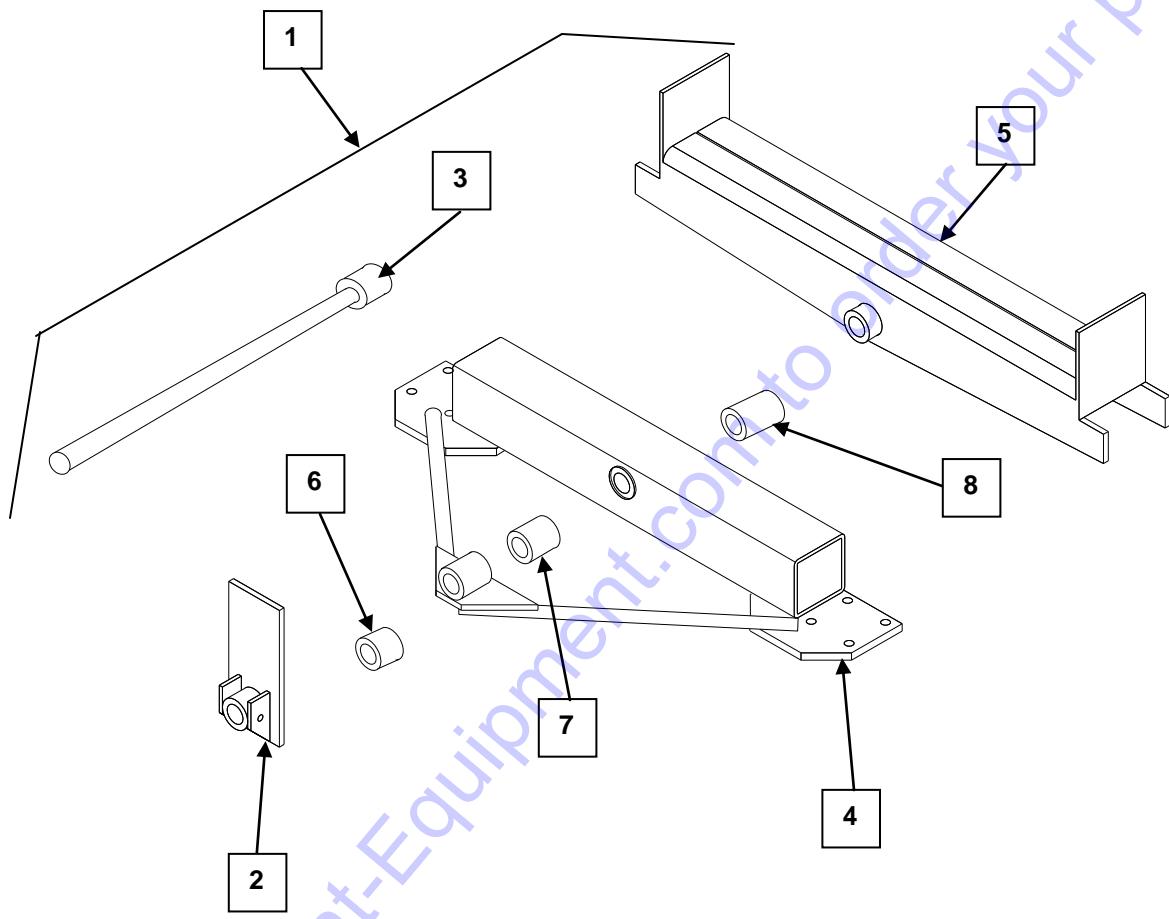


Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

## BOLSTER ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	752002 .....	Bolster Assembly, Complete..... Serial Number 402415 and Higher	1
2.....	852001 .....	Bolster Brace .....	1
3.....	203002 .....	Bolster Pin.....	1
4.....	852002 .....	Bolster A-Frame Assembly .....	1
5.....	852003 .....	Bolster Support .....	1
6.....	309507 .....	Oil Light Bushing (1 1/4" x 1 1/2" x 1 1/2")....	1
7.....	309505 .....	Oil Light Bushing (1 1/4" x 1 1/2" x 2").....	1
8.....	309506 .....	Oil Light Bushing (1 1/4" x 1 1/2" x 2 1/4")....	1

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to Order your parts


# FRONT AXLE ASSEMBLY

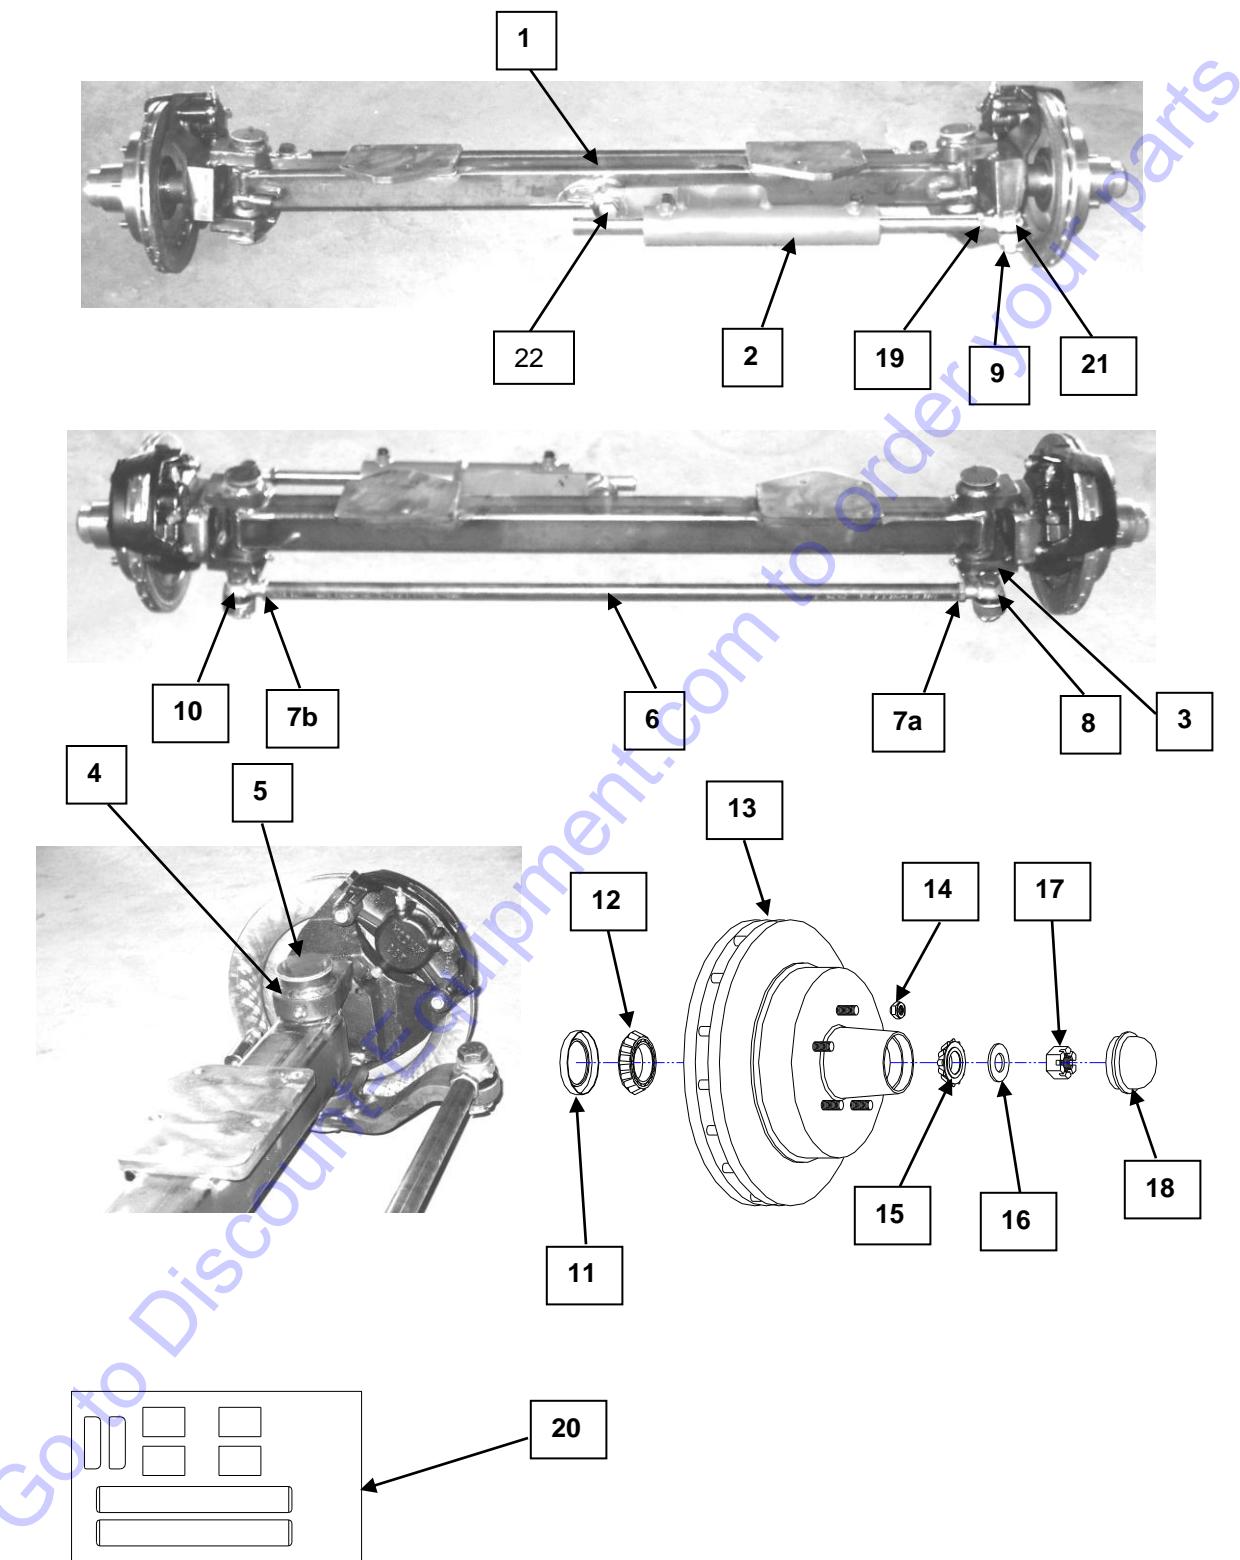

# FRONT AXLE ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	403090 .....	Front Axle Assembly (6 Lug x 5 1/2).....	1
2.....	203526 .....	Steering Cylinder Assembly.....	1
4.....	403091 .....	Knuckle w/Spindle, LH .....	1
	403092 .....	Knuckle w/ Spindle, RH.....	1
5.....	BF4454.....	King Pin Cap .....	2
6.....	403093 .....	Tie Rod Tube .....	1
7a.....	BF4470.....	Jam Nut, RH Thread .....	1
7b.....	BF4471.....	Jam Nut, LH Thread.....	1
8.....	BF4465R .....	Tie Rod End, LH Thread.....	1
9.....	203523 .....	Lock Nut .....	1
10.....	BF4465L .....	Tie Rod End, RH Thread .....	1
11.....	BF4460.....	Seal .....	2
12.....	BF4461X .....	Inner Bearing Kit (w/Race).....	2
13.....	203544 .....	Hub Assembly, (6 Lug x 5 1/2) .....	2
14.....	69957B.....	Lug Nut .....	10
15.....	752547 .....	Outer Bearing Kit (w/Race).....	2
16.....	400195 .....	Washer.....	2
17.....	203549 .....	Lock Nut .....	2
18.....	203550 .....	Hub Cap.....	2
19.....	BF4470.....	Jam Nut, RH Thread .....	1
20.....	BF4455.....	King Pin Kit .....	1
21.....	203520 .....	Steering Cylinder Heims End .....	1
22.....	203556.....	Bolt (3/4-16 UNF-2A) Grade 8 (2-1/2" x 3/4 ).....	1
Not Shown .....	203553 .....	Steering Cylinder Seal Kit .....	1
Not Shown .....	304039 .....	Wheel – 6 Lug .....	1


## 5200-6000 LB FRONT BRAKE ASSEMBLY

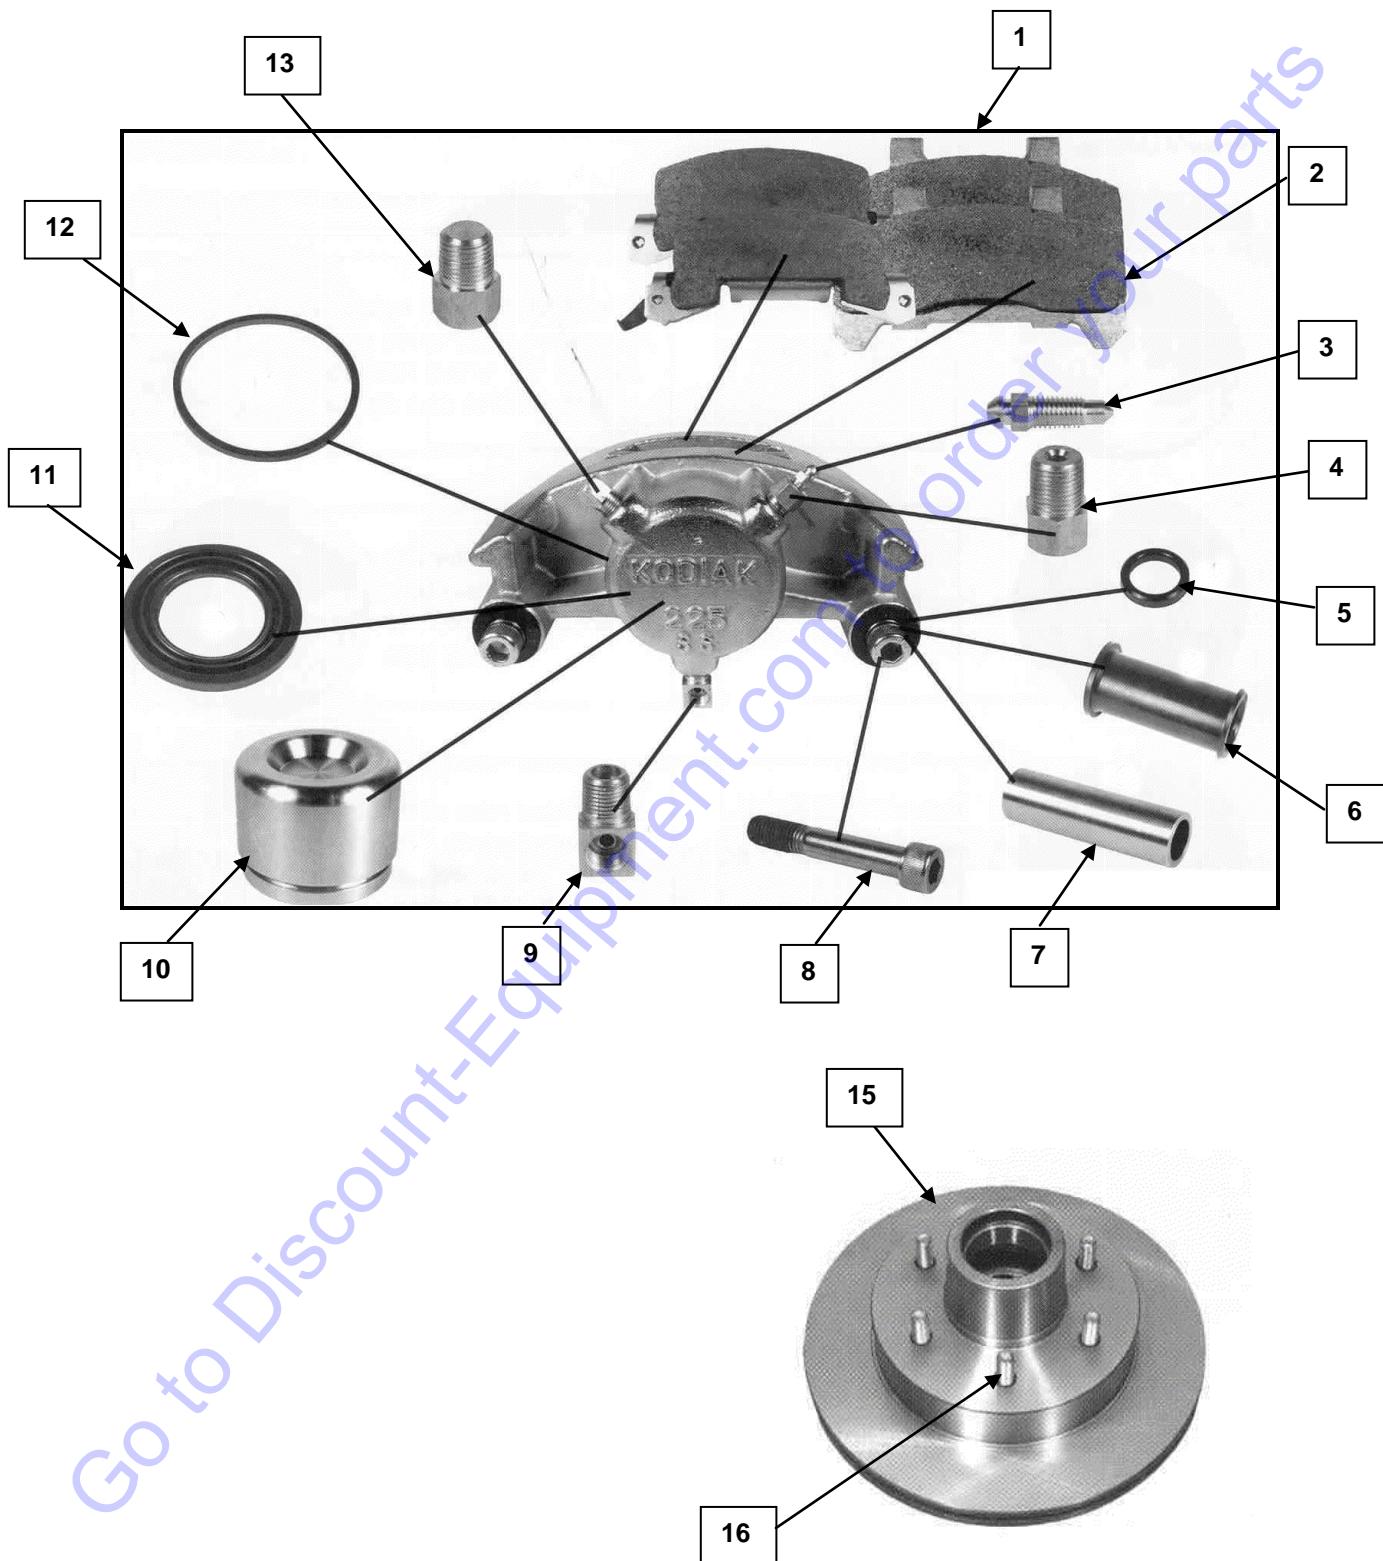

## 5200-6000 LB FRONT BRAKE ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	203554 .....	Complete Caliper Assembly w/ Pads .....	1
2.....	203530 .....	Friction Pads (Organic).....	1
3.....	203531 .....	1/4" – 28 Brass Bleed Screw .....	1
4.....	203532 .....	1/8" Brass Bleed Screw Adapter.....	1
5.....	203533 .....	Guide Bolt Sleeve O-ring .....	1
6.....	203534 .....	Guide Bolt Rubber Sleeve .....	1
7.....	203535 .....	Guide Bolt Stainless Steel Sleeve .....	1
8.....	203536 .....	Guide Bolt (M11 x 1.5) w/ Thread Locker .....	1
9.....	203537 .....	90° 1/8" NPT to 3/16" F.I.F. .....	1
10.....	203538 .....	Caliper Piston 2 1/4" Stainless Steel .....	1
11.....	203539 .....	Rubber Dust Boot.....	1
12.....	203540 .....	Piston Rubber Seal.....	1
13.....	203541 .....	1/8" NPT Brass Plug .....	1
15.....	203543 .....	12" Integral Rotor w/ Hub (5 Lug x 5 1/2) .....	1
	203544.....	12" Integral Rotor w/ Hub (6 Lug x 5 1/2) .....	1
16.....	203555 .....	Wheel Stud .....	5 or 6
Not Shown.....	FA-306-R .....	Brake Hose.....	2

# REAR AXLE & DRIVE ASSEMBLIES

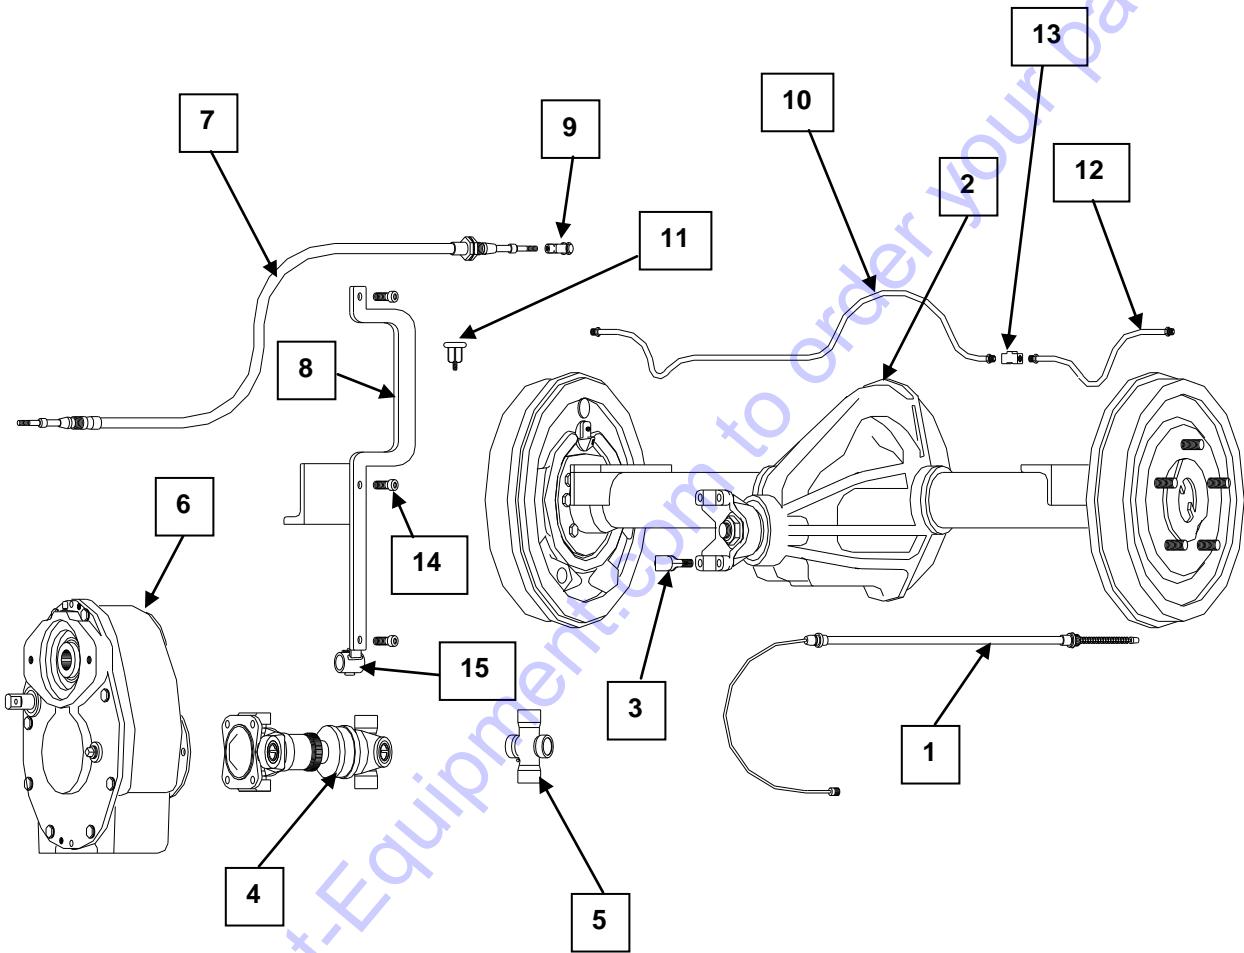


Go to [Discount-Equipment.com](http://Discount-Equipment.com) to Order Your Parts

## REAR AXLE & DRIVE ASSEMBLIES

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1	PB-237	Parking Brake Cable.....	2
2	RA-293-R	Rear Axle Assembly Dana 44 (5 Lug).....	1
	RA-293-RA	Rear Axle Assembly Dana 44 (6 Lug).....	1
	RA-293-60	XHD Rear Axle Assembly (Optional – 5 Lug) Dana Model 60 .....	1
	RA-293-60A	XHD Rear Axle Assembly (Optional – 6 Lug) Dana Model 60 .....	1
3	403083	Cap U-Joint Dura-Axles .....	2
4	DS-299-C	Drive Line Assembly (Complete) .....	1
5	DS-298-R	Universal Joint Assembly.....	2
6	TS-302-C	2-Speed Gearbox .....	1
	TS-302-CR	2-Speed Gearbox (Reconditioned) Subject to Availability .....	1
7	HS-231-A	Shift Cable .....	1
8	203109	Hydraulic Shift Linkage.....	1
9	HC-229-R	3/8" Clevis Assembly w/ Pin.....	1
10	BL-296-R	Brake Line Assembly .....	1
11	RA-294-R	Breather .....	1
12	BL-297-R	Brake Line Assembly .....	1
13	RA-295-C	Union Tee .....	1
14	???????	Shoulder Bolt .....	3
15	850013	Shift Linkage Couple W/A.....	1

Go to [Discount-Equipment.Com](http://Discount-Equipment.Com) to Order your parts

# REAR BRAKE ASSEMBLY

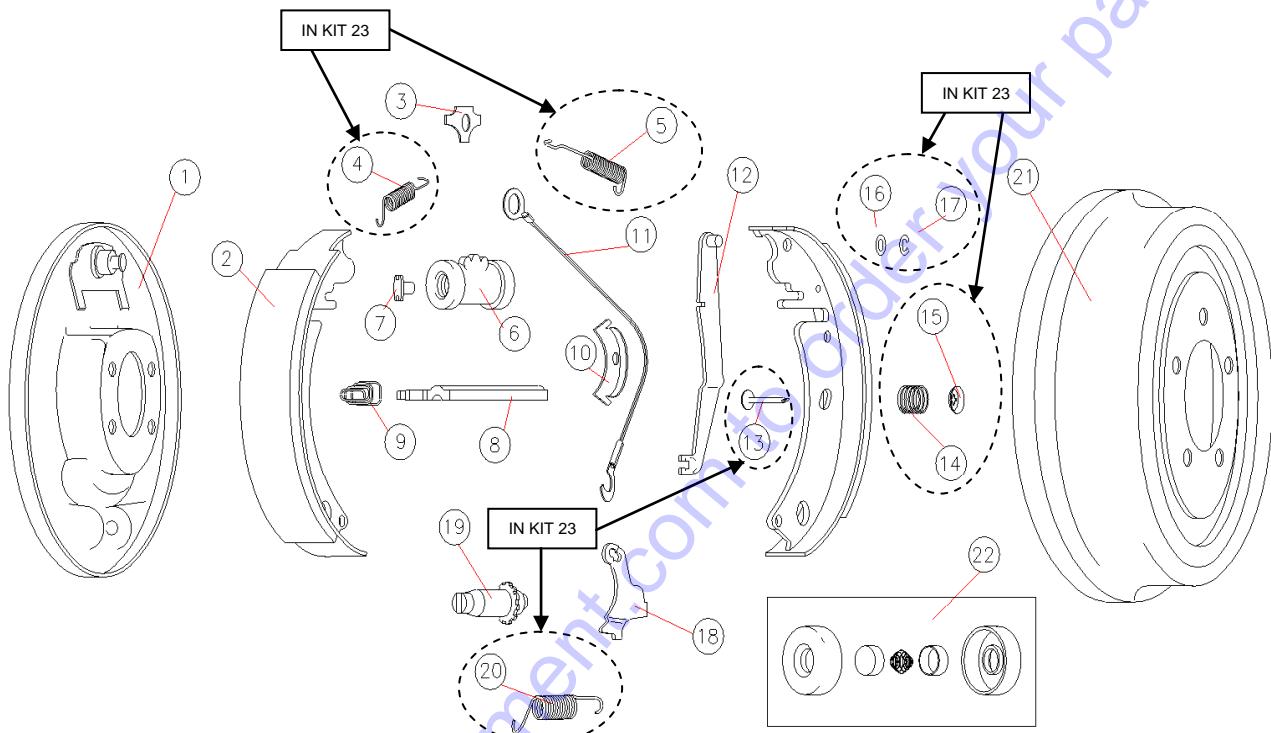


Go to [Discount-Equipment.com](http://Discount-Equipment.com) Order Your Parts

## REAR BRAKE ASSEMBLY

Reference	Part No.	Description	Qty.
1 .....	4402AL.....	Backing Plate Assembly (Left).....	1
	4402AR .....	Backing Plate Assembly (Right) .....	1
2 .....	4414A.....	Shoe Set (Set of 4).....	1
3 .....	4408A.....	Anchor .....	1
4 .....	See Ref 23 .....	Return Spring (Front).....	1
5 .....	See Ref 23 .....	Return Spring (Rear) .....	1
6 .....	4406L .....	Wheel Cylinder (Left).....	1
	4406R.....	Wheel Cylinder (Right).....	1
7 .....	4407A.....	Push Rod.....	2
8 .....	4411A.....	Strut (Left) .....	1
	4411AR .....	Strut (Right).....	1
9 .....	4410 .....	Spring .....	1
10 .....	4418 .....	Guide.....	1
11 .....	4415 .....	Cable .....	1
12 .....	4413AL.....	Parking Brake Lever (Left).....	1
	4413AR .....	Parking Brake Lever (Right) .....	1
13 .....	See Ref 23 .....	Pin, Shoe Hold Down .....	2
14 .....	See Ref 23 .....	Hold Down Spring .....	2
15 .....	See Ref 23 .....	Cup, Hold Down .....	2
16 .....	See Ref 23 .....	Spacer.....	1
17 .....	See Ref 23 .....	Retainer .....	1
18 .....	4419L .....	Adjusting Lever, (Left) .....	1
	4419R .....	Adjusting Lever, (Right).....	1
19 .....	4423L .....	Adjusting Screw Assembly, (Left) .....	1
	4423R .....	Adjusting Screw Assembly, (Right).....	1
20 .....	See Ref 23 .....	Spring .....	1
21 .....	4404A.....	Brake Drum (5 Lug) .....	1
	403082.....	Brake Drum (6 Lug) .....	1
22 .....	4427 .....	Wheel Cylinder Repair Kit .....	A/R
23 .....	4409 .....	Kit (Contains Ref 4, 5, 13, 14, 15, 16, 17, 20) ..	1
Not Shown .....	4400AL.....	Complete Assembly, (Left) .....	1
Not Shown .....	4400AR .....	Complete Assembly, (Right) .....	1

## TS-302-C TWO SPEED GEARBOX

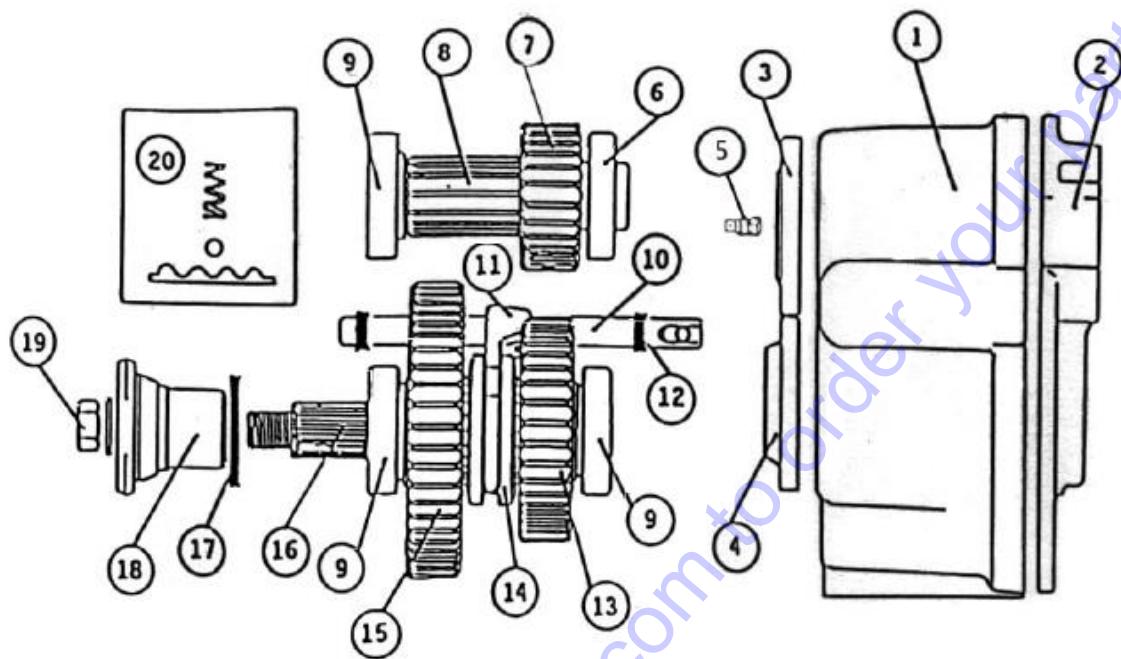


Go to [Discount-Equipment.com](http://Discount-Equipment.com) to Order Your Parts

## TS-302-C TWO SPEED GEARBOX

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	2S-11A.....	Main Housing .....	1
2.....	2S-12.....	Housing Cover .....	1
3.....	2S-13.....	Bearing Cap .....	1
4.....	2S-14.....	Bearing & Seal Cap .....	1
5.....	2S-15.....	Vent Plug .....	1
6.....	2S-16.....	Bearing Assembly .....	1
7.....	2S-17.....	Pinion Gear w/ Key .....	1
8.....	2S-18.....	Input Shaft .....	1
9.....	2S-19.....	Bearing Assembly .....	3
10.....	2S-20.....	Shift Rail .....	1
11.....	2S-21.....	Shift Fork .....	1
12.....	2S-22.....	Seal, Shift Rail .....	2
13.....	2S-23.....	Gear, High Range .....	1
14.....	2S-24.....	Sliding Collar .....	1
15.....	2S-25.....	Gear, Low Range .....	1
16.....	2S-26.....	Output Shaft .....	1
17.....	2S-27.....	Seal, Output Shaft .....	1
18.....	2S-28.....	Output Flange .....	1
19.....	2S-29.....	Jam Nut .....	1
20.....	2S-30.....	Detent Kit .....	1
Not Shown.....	2S-31.....	Shim Kit .....	1

## Model 44

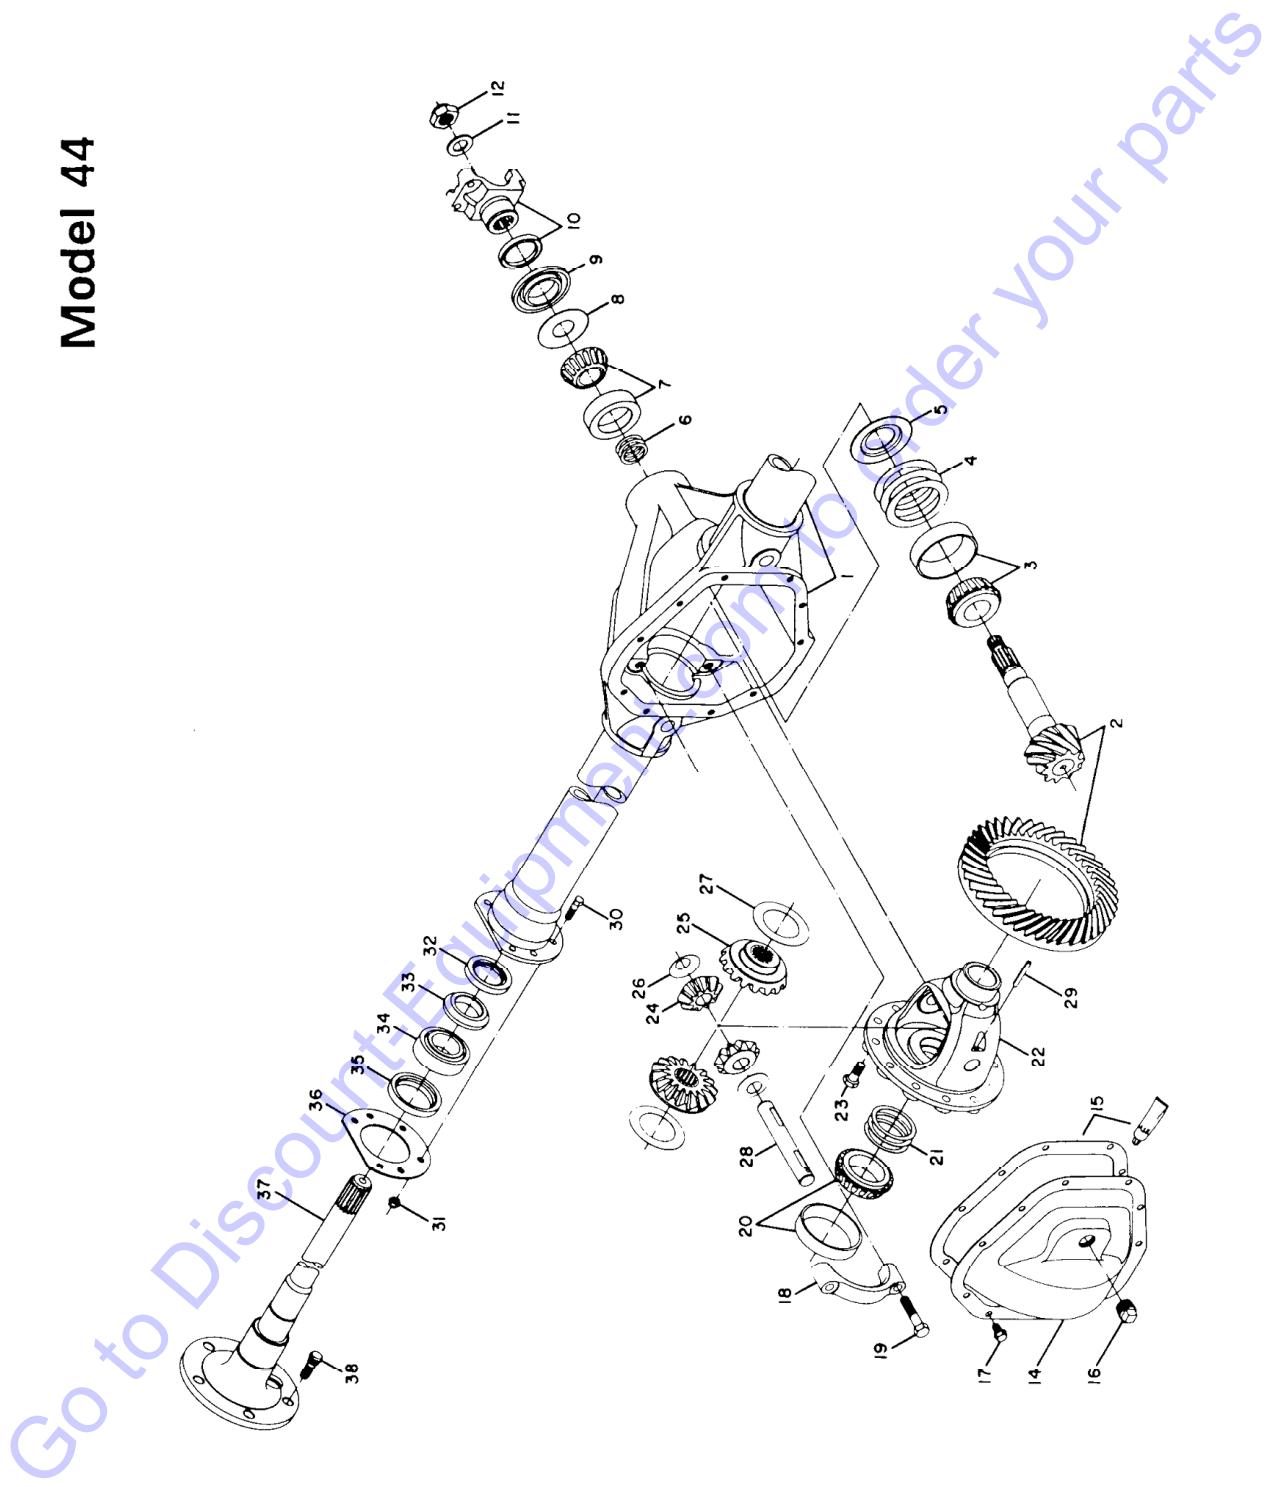

# MODEL 44 INDUSTRIAL AXLE

Reference	Part No.	Description	Qty.
1	459109 C94	Axle Housing	1
2*	NSS	Gear & Pinion Set	1
3*	706031X	Inner Pinion Bearing	1
4*	NSS	Shim – Drive Pinion	1
5*	30765	Baffle – Pinion Bearing	1
6*	NSS	Shim – Pinion Bearing	1
7*	706030X	Outer Pinion Bearing	1
8	30784	Slinger	1
9*	35723	Pinion Seal	1
10	3-4-5761X	End Yoke Assembly	1
11*	30186	Washer – Pinion Nut	1
12*	30185	Pinion Nut	1
14	343825	Cover – Carrier	1
15**	34685	Gasket – Carrier Cover	1
16	36472	Plug – Cover	1
17	34279	Bolt – Cover (source locally)	
18	NSS	Cap – Differ Bearing	1
19	NSS	Bolt – Differ Bearing Cap	4
20	706032XA	Differ Bearing Kit	1
21	NSS	Shim – Differ Bearing	1
22	32684	Differ Case	1
23**	30187	Bolt – Drive Gear	10
24**	NSS	Pinion – Differ	1
25**	NSS	Differ – Gear	1
26**	NSS	Thrust Washer – Differ Pinion	1
27**	NSS	Thrust Washer – Differ Gear	1
28**	NSS	Differ Shaft	1
29**	13449	Lock – Differ Shaft	1
30	34616-1	Bolt – Brake Mounting	8
31	35704	Nut – Brake Mounting	8
32	34419	Seal – Shaft Inboard	2
33***	36797	Retaining Ring – Wheel Bearing	2
34***	565903	Bearing Assembly	2
35***	35239	Seal – Shaft Outboard	2
36***	35490A	Retainer – Oil Seal	2
37***	26726A	Shaft – Axle Flange (5 Lug)	2
	403081	Shaft – Axle Flange (6 Lug)	2
38	35491A	Bolt – Wheel	5 or 6

\* Included in Kit Number 7066139X


\*\* Included in Kit Number 706027X

\*\*\* Included in Kit Number 26726A

\*\*\* Included in Kit Number 403081

**NSS – Not Sold Separately**

# TOW BAR ASSEMBLIES

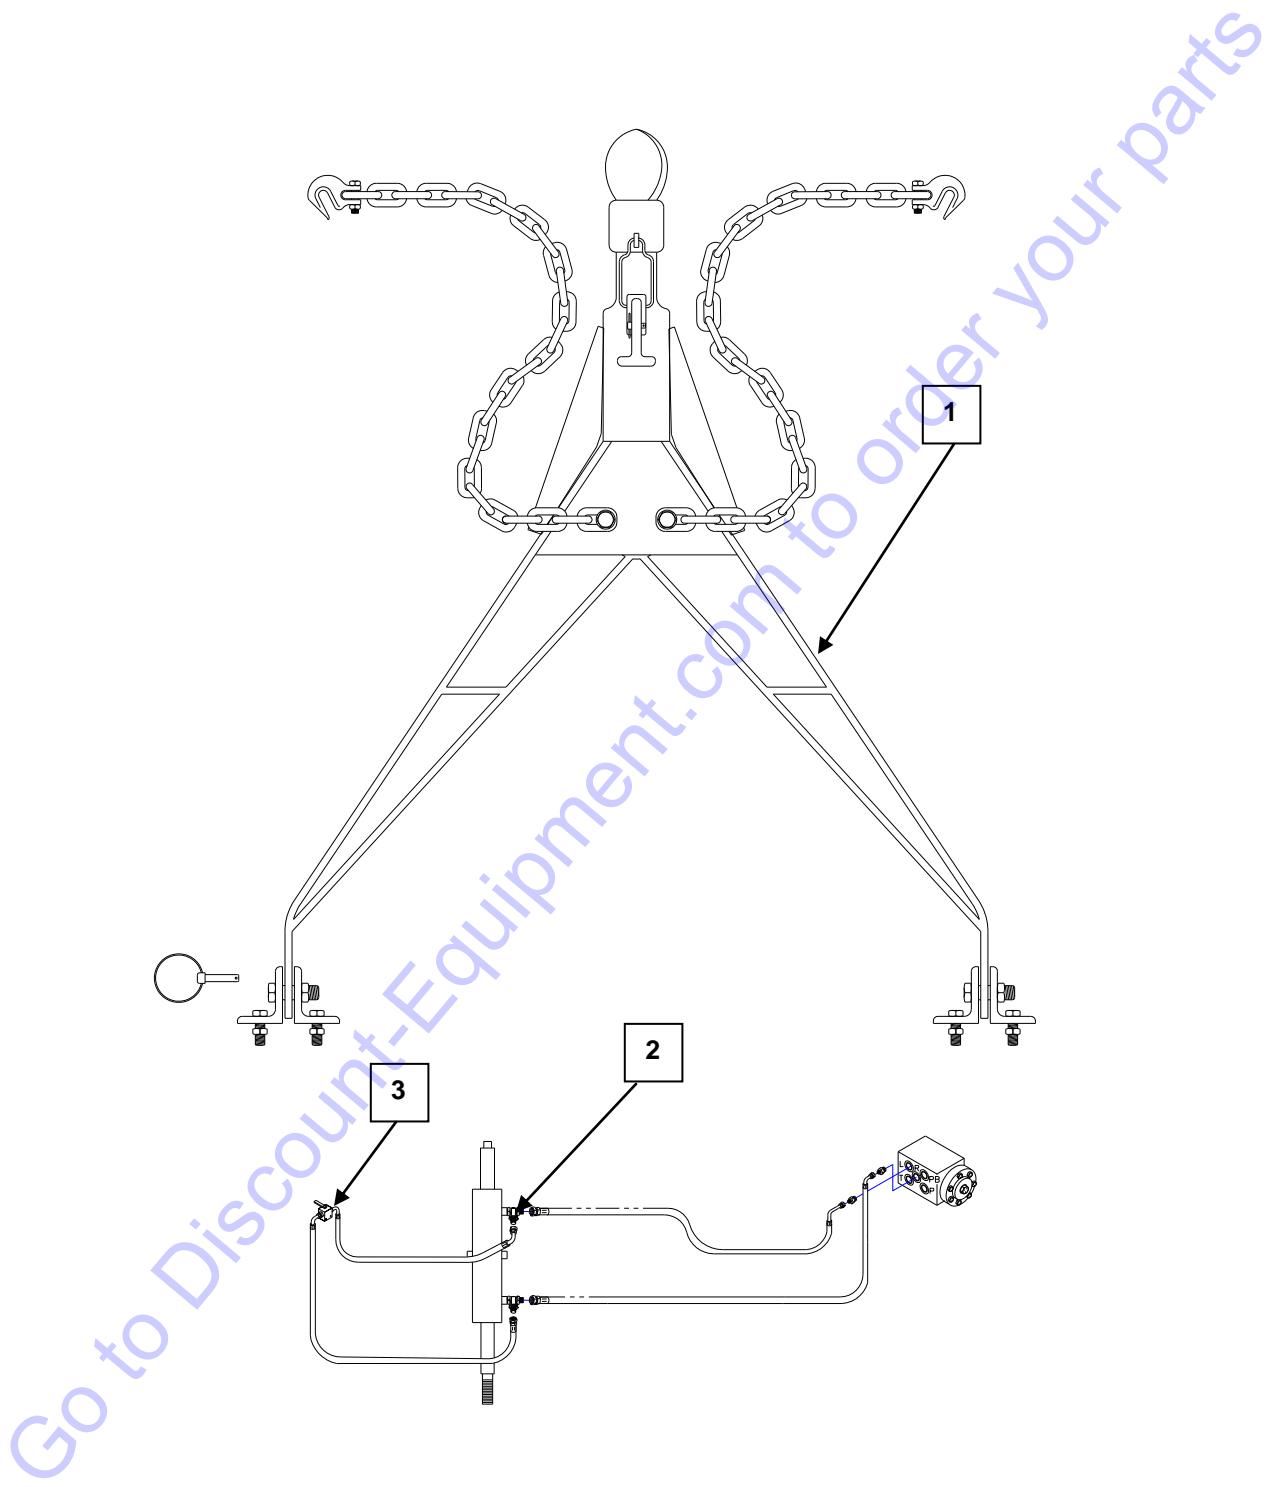


## TOW BAR ASSEMBLIES

Reference	Part No.	Description	Qty.
1	4201P	Tow Bar w/ 3" Pintle	1
	4201B	Tow Bar w/ 2 5/16" Receiver	1
2	K00003	Hitch, Shutoff Assembly Kit (Valve, Hoses, and Fittings)	1
3	305025	Tow Valve	1

**Note:** Tow bars come as complete kit. Kit includes Mounts, Chains, and Pin. Hitch Shutoff Assembly is separate. The Hitch Shutoff is for a safer and easier way of towing the broom. All Broce Brooms are towable as long as the Gearbox is in neutral, the Parking Brake is released, and the Shutoff Valve is engaged.

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

# CAB ASSEMBLY

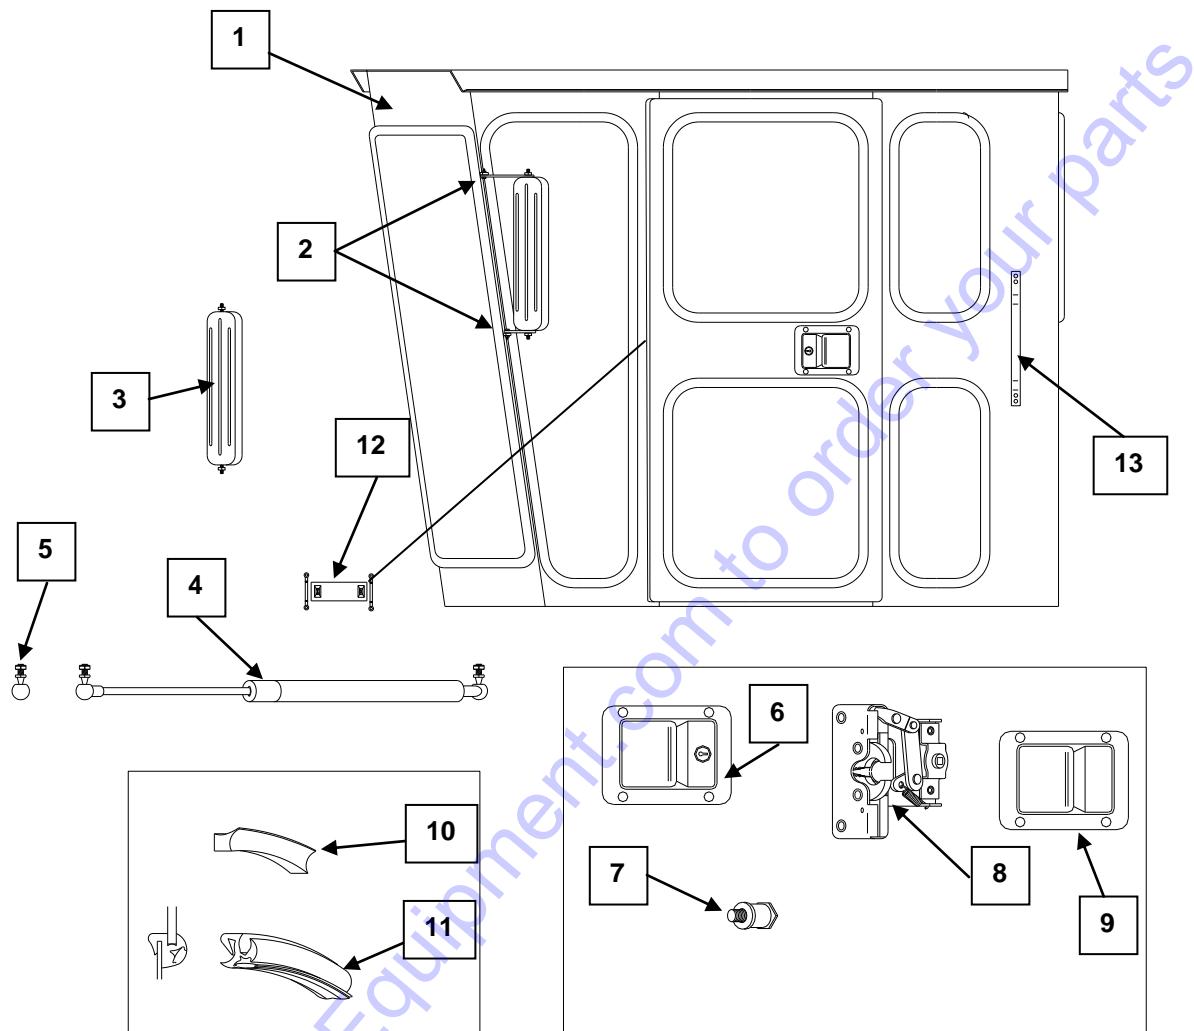


# CAB ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	P-315-B .....	Cab Assembly, Complete .....	1
	345055.....	Cab Keys, (Sold as a Pair) .....	1
2.....	202116 .....	Mirror Bracket, (2 per Side) .....	4
3.....	P-353-R .....	West Coast Style Mirror (1 per Side) .....	2
4.....	P-352-B .....	Strut, (1 per Side).....	2
5.....	309406 .....	Ball for Strut.....	2
6.....	345051 .....	Outside Door Handle (Paddle Style).....	2
7.....	P-320-B .....	Striker Assembly .....	2
8.....	345053 .....	Latch Assembly .....	2
9.....	345050 .....	Inside Door Handle (Paddle Style).....	2
10.....	304089 .....	Door Seal, 14' per door .....	1
11.....	P-325-R .....	Window Rubber Molding, (As Required).....	1
	P-316-R .....	Floor Mat, 5' x 4' Blank.....	1
12.....	K00002.....	Door Tether Strap, Inside (1 per Side).....	2
13.....	B239920C .....	Outside Grab Handle.....	1
Not Shown .....	345052 .....	Inside Grab Handle.....	2
Not Shown .....	344075 .....	Cab Mounting Springs .....	4
Not Shown .....	AC-708-R .....	Air Cleaner Assembly .....	1
Not Shown .....	AC-785-R .....	Air Cleaner Bonnet (Top Cap) .....	1
Not Shown .....	P10-3113.....	Air Cleaner End Cap .....	1
Not Shown .....	P00-3951 .....	Air Cleaner Clamp .....	2
Not Shown .....	110-20027 .....	Air Cleaner Flex Hose .....	1
Not Shown .....	P10-2114.....	Air Cleaner Vent.....	1
Not Shown .....	AC-709-R .....	Air Cleaner Filter.....	1

Note: Items 10 & 11 are sold by the foot. Floor mat is a "Cut to Fit" item.

# ROLL OVER PROTECTION STRUCTURE & RELATED PARTS

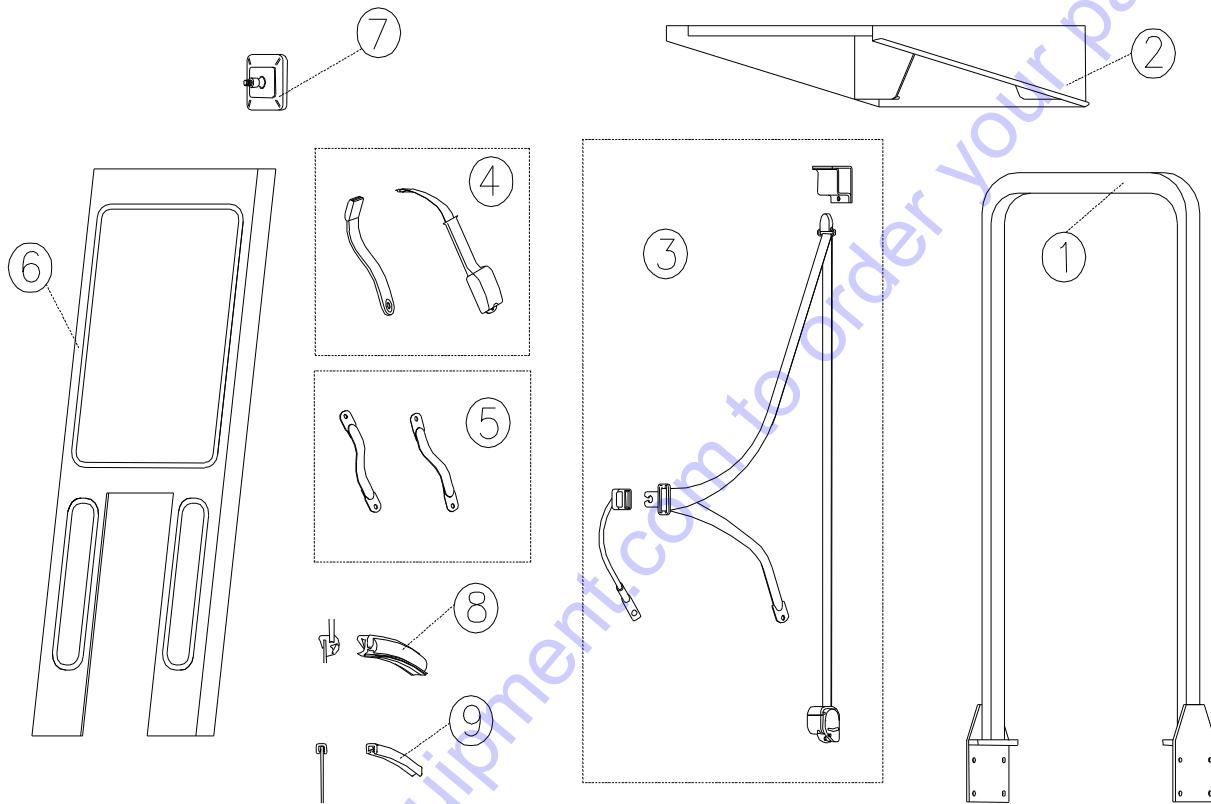

Go to [Discount-Equipment.Com](http://Discount-Equipment.Com) to Order your parts


# ROLL OVER PROTECTION STRUCTURE & RELATED PARTS

Reference	Part No.	Description	Qty.
1	P-310-R	Two-Post Roll Bar	1
2	852057	Canopy	1
3	See Seat & Suspension	Seat Belt w/ Shoulder Harness (Optional) Suspension	1
4	See Seat & Suspension	Retractable Seat Belt (Standard)	1
5	C-211-RT	Tether Strap Set (For use w/ Suspension Seat)	1
6	P-312-R	Windshield Frame w/ Molding (Safety Glass Not Included. See Note)	1
7	P-356-R	Rear View Mirror	1
8	P-325-R	Offset Rubber Molding	1
9	P-355-R	Rubber Trim	1

**Note:**

1. Due to the abundant availability of automotive safety glass from local vendors and the likelihood of breakage during shipment, the windshield frame is sold w/o glass.
2. Seat belt tether straps MUST be used on suspension seats.
3. Items 8 & 9 are sold by the foot.

## FUEL TANK ASSEMBLY

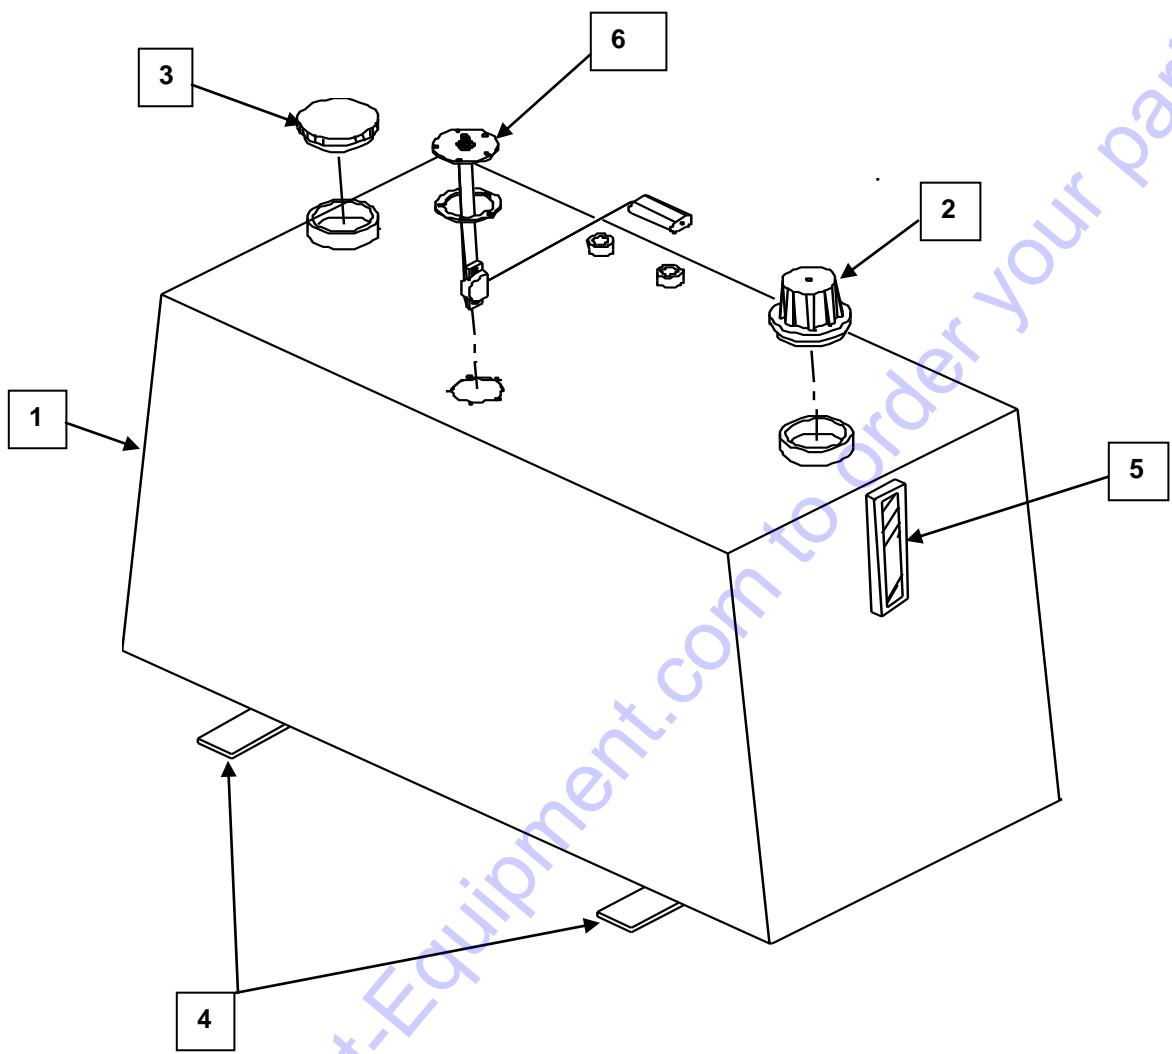


Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

## FUEL TANK ASSEMBLY


<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	852454 .....	Fuel & Hydraulic Tank.....	1
2.....	T-703-BA .....	Hydraulic Cap .....	1
3.....	T-702-B .....	Fuel Cap .....	1
4.....	T-805-R .....	Rubber Tank Pad .....	2
5.....	550-5 .....	Sight Glass .....	1
6.....	344175 .....	Fuel Gauge Assembly .....	1

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

# DECAL KIT

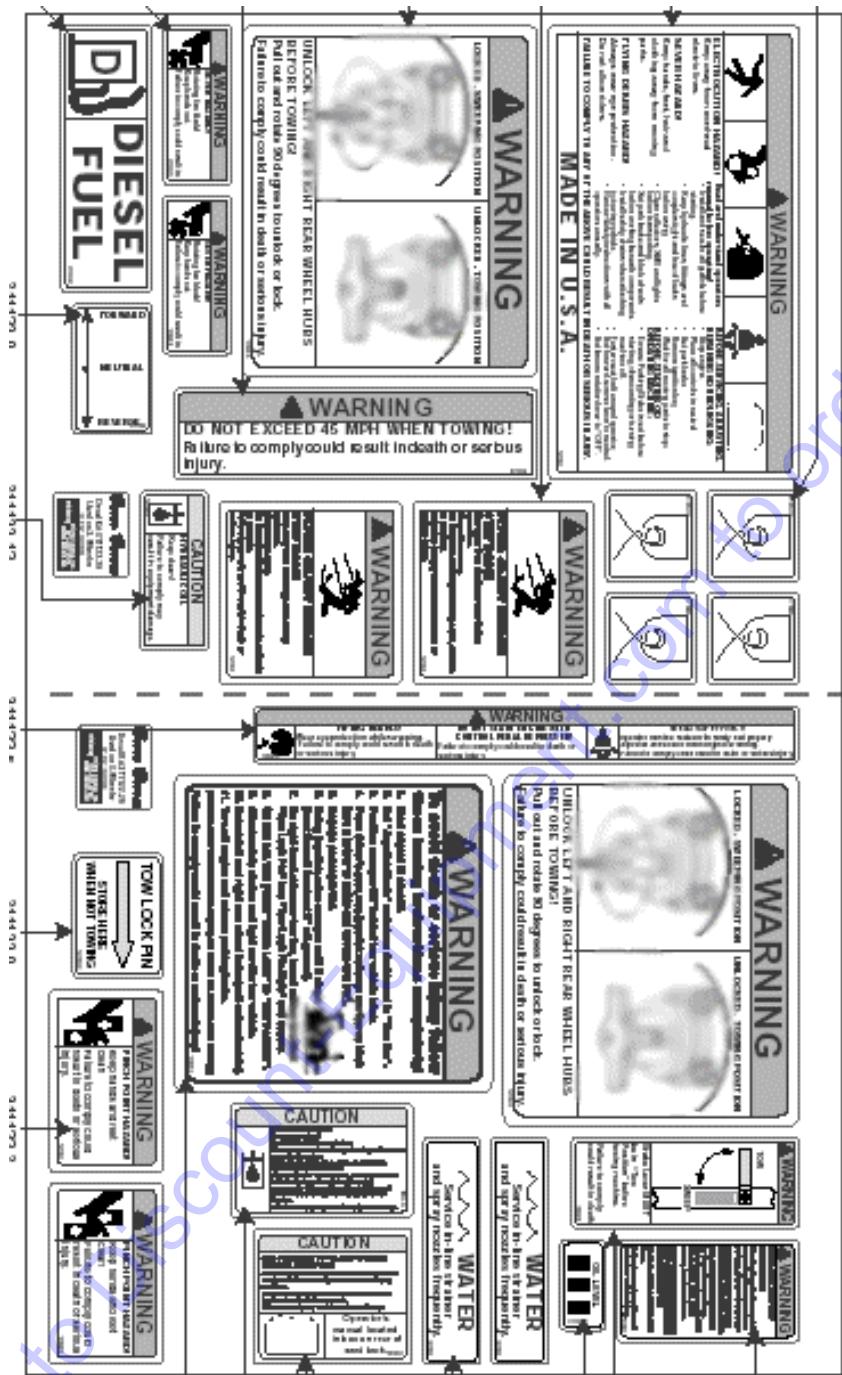

A vertical stack of two coiled metal springs. The word "Braam" is printed vertically along the left side of the top spring, and the word "Braam" is printed vertically along the right side of the bottom spring.

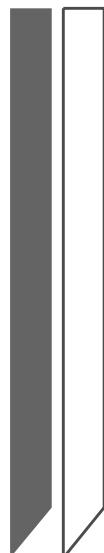


<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	VL-833-R.....	Decal Kit w/ Stripes and Broce Logos*	1

## **4W BROOM HYDRAULIC SYSTEM DETAILS**

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

# 4W BROOM HYDRAULIC SYSTEM COMPONENTS

(Front Section)

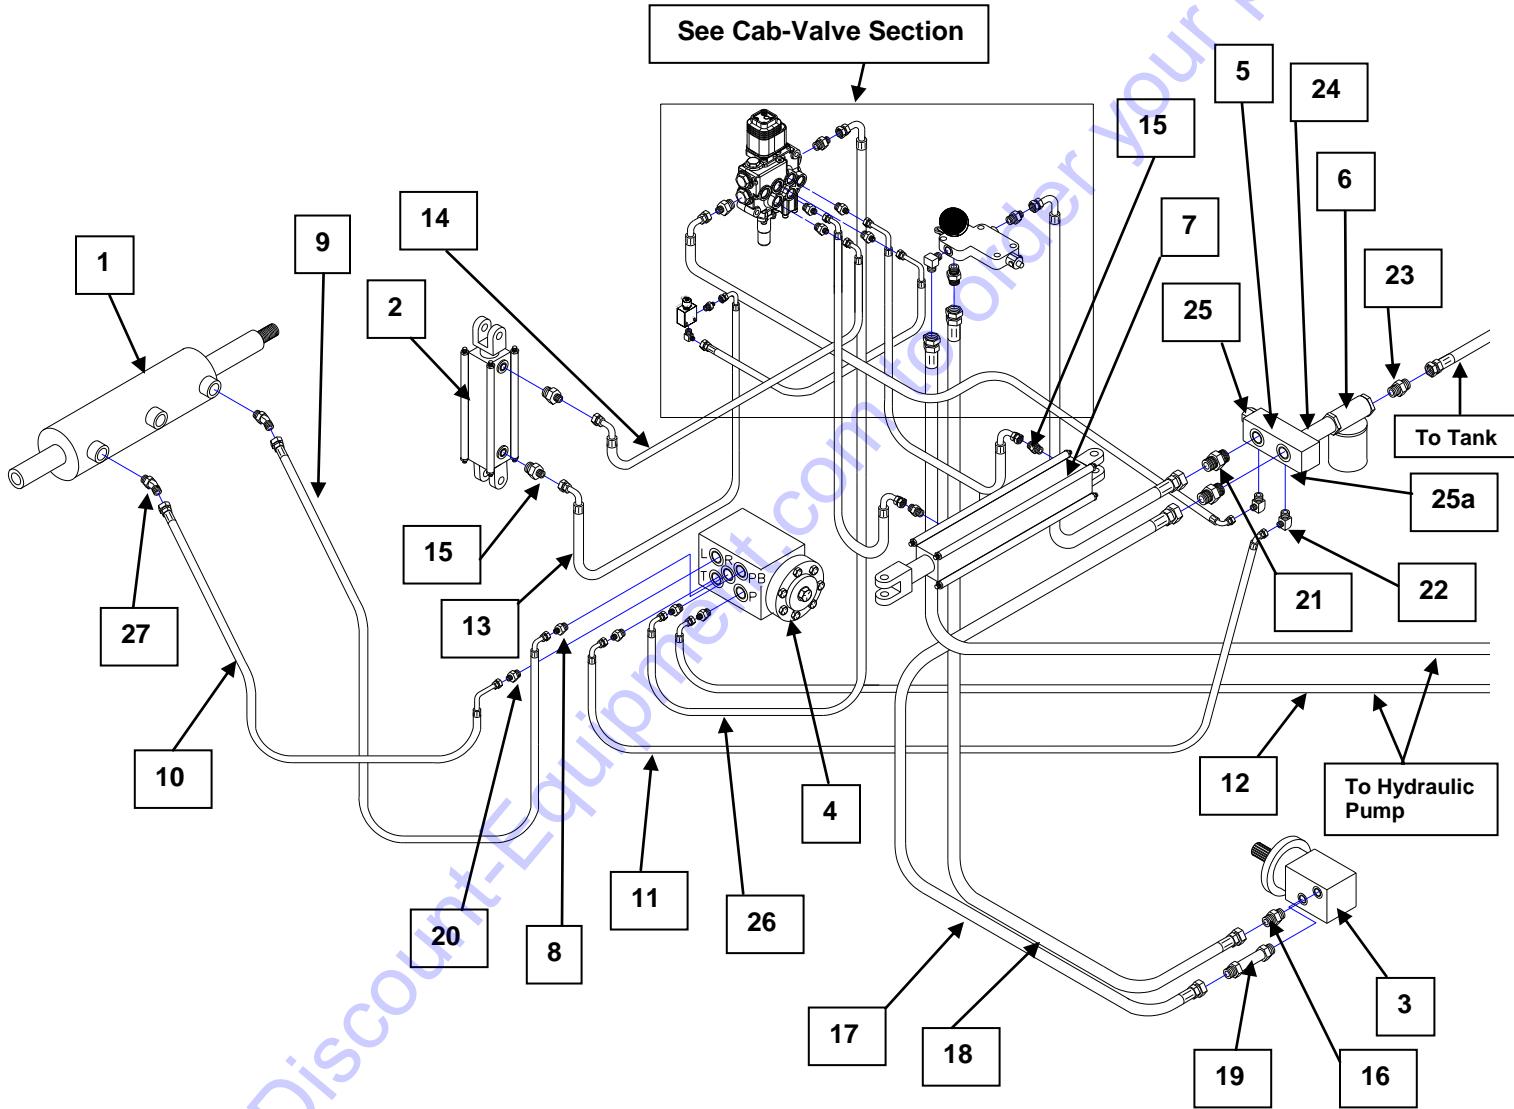

# 4W BROOM HYDRAULIC SYSTEM COMPONENTS


## (Front Section)

Reference	Part No.	Description	Qty.
1 .....	203526 .....	Steering Cylinder, 10"	1
2 .....	208 .....	Lift Cylinder .....	1
3 .....	305943 .....	Core Motor, Direct Drive.....	1
	305972 .....	Seal Kit for Direct Drive Core Motor.....	1
	MAB-16-B.....	Core Motor, Chain Drive .....	1
	SK000092.....	Seal Kit, Chain Drive Motor .....	1
4 .....	305944 .....	Steering unit .....	1
5 .....	305525 .....	Hydraulic Manifold.....	1
6 .....	HF-278-R .....	Filter Element .....	1
	HF-278-RAF25 .....	Filter Assembly .....	1
7 .....	216 .....	Shift Cylinder.....	1
	216A .....	Shift Cylinder for Curb & Gutter Models.....	1
8 .....	305829 .....	Hydraulic Fitting, FF1852T06-06 .....	1
9 .....	N/A.....	Hydraulic Hose Assembly, 30"-1AA6FR6 & 1AAGFRB6.....	1
10 .....	N/A.....	Hydraulic Hose Assembly, 30"-1AA6FR6 & 1AA6FRCG.....	1
11 .....	N/A.....	Hydraulic Hose Assembly, 35"-1AA6FRB6 & 1AA6FRA6.....	1
12 .....	N/A.....	Hydraulic Hose Assembly, 76"-1AA6FR64 & 1AA6FRB6 .....	1
13 .....	N/A.....	Hydraulic Hose Assembly, 40"-1AA4FRB4 (2).....	1
14 .....	N/A.....	Hydraulic Hose Assembly, 32"-1AA4FRB4 & 1AA4FRC4.....	1
15 .....	305818 .....	Hydraulic Fitting, FF1852T04-06 .....	4
16 .....	305871 .....	Hydraulic Fitting, FF1852T12-10 .....	1
17 .....	N/A.....	Hydraulic Hose Assembly, 94.5"-1AA12FR12 (2) .....	1
18 .....	N/A.....	Hydraulic Hose Assembly, 94.5"-1AA12FR12 (2) .....	1
19 .....	305841 .....	Hydraulic Fitting, Caterpillar 3E-7420 .....	1
20 .....	305827 .....	Hydraulic Fitting, FF1852T06-08 .....	6
21 .....	305824 .....	Hydraulic Fitting, FF1852T12-12 .....	2
22 .....	305837 .....	Hydraulic Fitting, FF1868T06-08 .....	2
23 .....	N/A.....	Hydraulic Fitting, FF1852T16-20 .....	2
24 .....	305198 .....	Hydraulic Fitting, 3474-20-20 .....	1
25 .....	305177 .....	Hydraulic Fitting, 900598-12 .....	1
25a .....	305177 .....	Hydraulic Fitting, 900598-8 .....	1
26 .....	N/A.....	Hydraulic Hose Assembly, 56"-1AA6FRB6 (2).....	1
27 .....	305864 .....	Hydraulic Fitting, FF2068T06-06 .....	2
Not Shown.....	RC-19 .....	Clevis Pin (Shift Cylinder) .....	2
Not Shown.....	D-21-R .....	Shock Pin (Lift Cylinder) .....	2
Not Shown.....	IC-4244 .....	Seal Kit, Replaces P/N RC-20 .....	1
Not Shown.....	203553 .....	Seal Kit – Steering Cylinder .....	1

Note: If Steering Cylinder Rod becomes damaged or broken, it is not economically feasible to replace.  
Therefore the entire cylinder must be replaced.

# 4W BROOM HYDRAULIC SYSTEM COMPONENTS

(Cab-Valve Section)

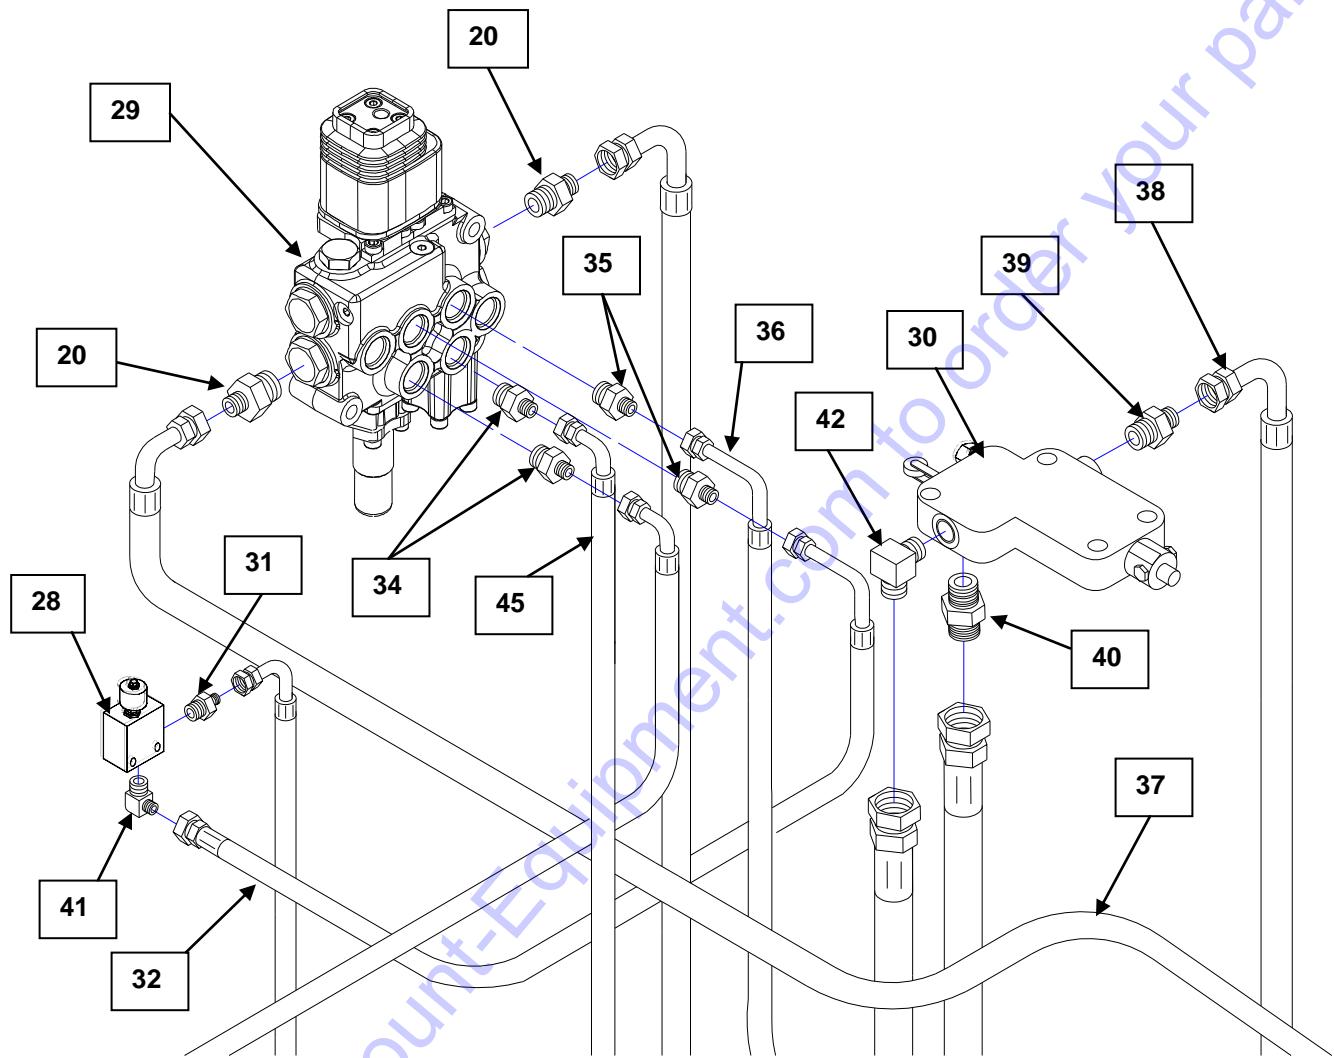

# 4W BROOM HYDRAULIC SYSTEM COMPONENTS


## (Cab-Valve Section)

Reference	Part No.	Description	Qty.
20	305827	Hydraulic Fitting, FF1852T06-08	6
28	305763	Core Lock Solenoid	1
29	See Valve	Control Valve Section	1
30	See Valve	Rotation Valve Section	1
31	305818	Hydraulic Fitting, FF1852T04-06	1
32	N/A	Hydraulic Hose Assembly, 8" 1AA4FR4 & 1AA4FRC4	1
34	305827	Hydraulic Fitting, FF1852T0408S	2
35	305827A	Hydraulic Fitting, FF1852T0408S with 0.05 orifice	2
36	N/A	Hydraulic Hose Assembly, 50"-1AA4FRB4 & 1AA4FRC4	1
37	N/A	Hydraulic Hose Assembly, 27"-1AA6FRB6 & 1AA6FRA6	1
38	N/A	Hydraulic Hose Assembly, 20"-1AA12FR12 & 1AA12FRB12	1
39	305871	Hydraulic Fitting, FF1852T12-10	1
40	305840	Hydraulic Fitting, FF1852T12-08	1
41	305836	Hydraulic Fitting, FF1868T04-06	1
42	305872	Hydraulic Fitting, FF1868T12-10	1
45	N/A	Hydraulic Hose Assembly, 54"-1AA4FRB44 (2)	1

# 4W BROOM HYDRAULIC SYSTEM COMPONENTS

## VARIABLE SPEED OPTION

(Cab-Valve Section)

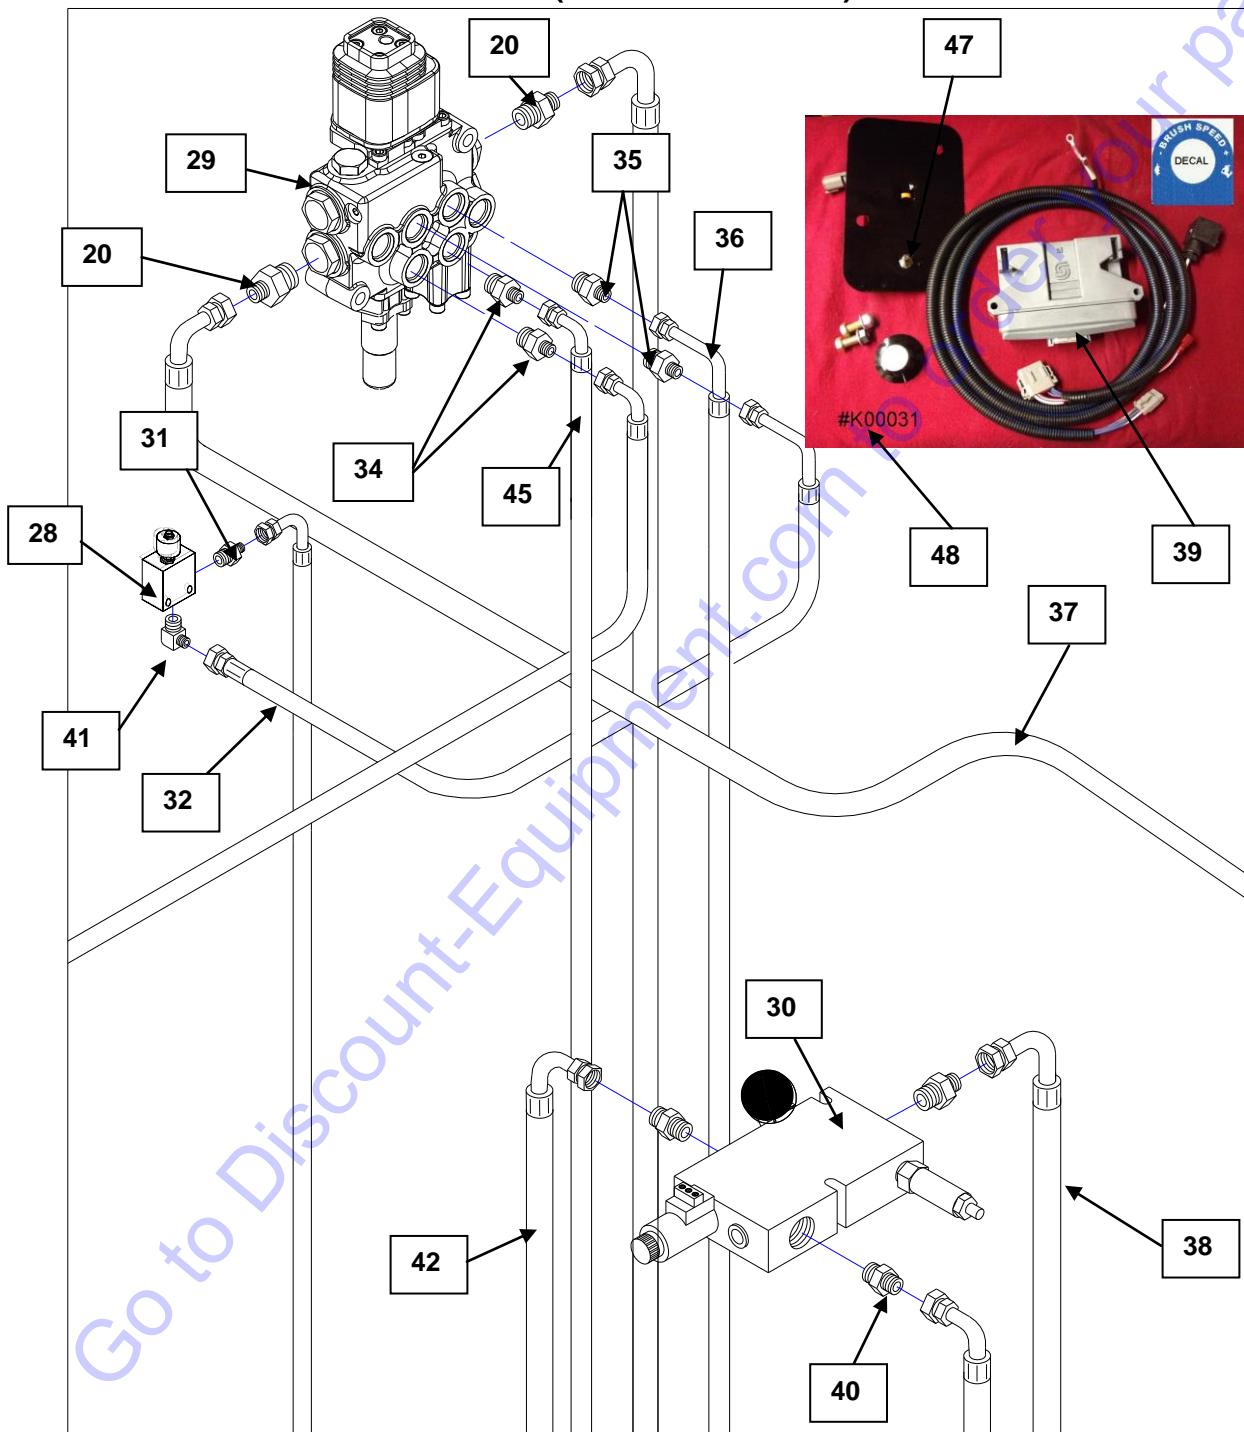

# 4W BROOM HYDRAULIC SYSTEM COMPONENTS

## VARIABLE SPEED OPTION


(Cab-Valve Section)

Reference	Part No.	Description	Qty.
20	305827	Hydraulic Fitting, FF1852T06-08	6
28	305763	Core Lock Solenoid	1
29	See Valve	Control Valve Section	1
30	305981	Rotation Valve, Variable Speed	1
31	305818	Hydraulic Fitting, FF1852T04-06	1
32	N/A	Hydraulic Hose Assembly, 8" 1AA4FR4 & 1AA4FRB4	1
34	305827	Hydraulic Fitting, FF1852T0408S	2
35	305827A	Hydraulic Fitting, FF1852T0408S with 0.05 orifice	2
36	N/A	Hydraulic Hose Assembly, 50"-1AA4FRB4 & 1AA4FRB4	1
37	N/A	Hydraulic Hose Assembly, 27"-1AA6FRB6 & 1AA6FRA6	1
38	N/A	Hydraulic Hose Assembly, 28"-1AA12FRB12 (2)	1
39	307525	Variable Speed Controller	1
40	305840	Hydraulic Fitting, FF1852T12-10	3
41	305836	Hydraulic Fitting, FF1868T04-06	1
42	N/A	Hydraulic Hose Assembly, 80"-1AA12FRB12	1
45	N/A	Hydraulic Hose Assembly, 54"-1AA4FRB44 (2)	1
46	N/A	Hydraulic Hose Assembly, 36"-1AA12FRB12	1
47	307450	Potentiometer	1
48	K00031	Variable Speed Kit	1

Note: Item #30 Replaces Rotation Valve on standard broom and is located under cab.  
Hydraulic Hose Items #38, #42, and #46 replace Items #19, #38, and #72 of standard broom hydraulic illustrations shown in this section.

# 4W BROOM HYDRAULIC SYSTEM COMPONENTS

(Rear Section)

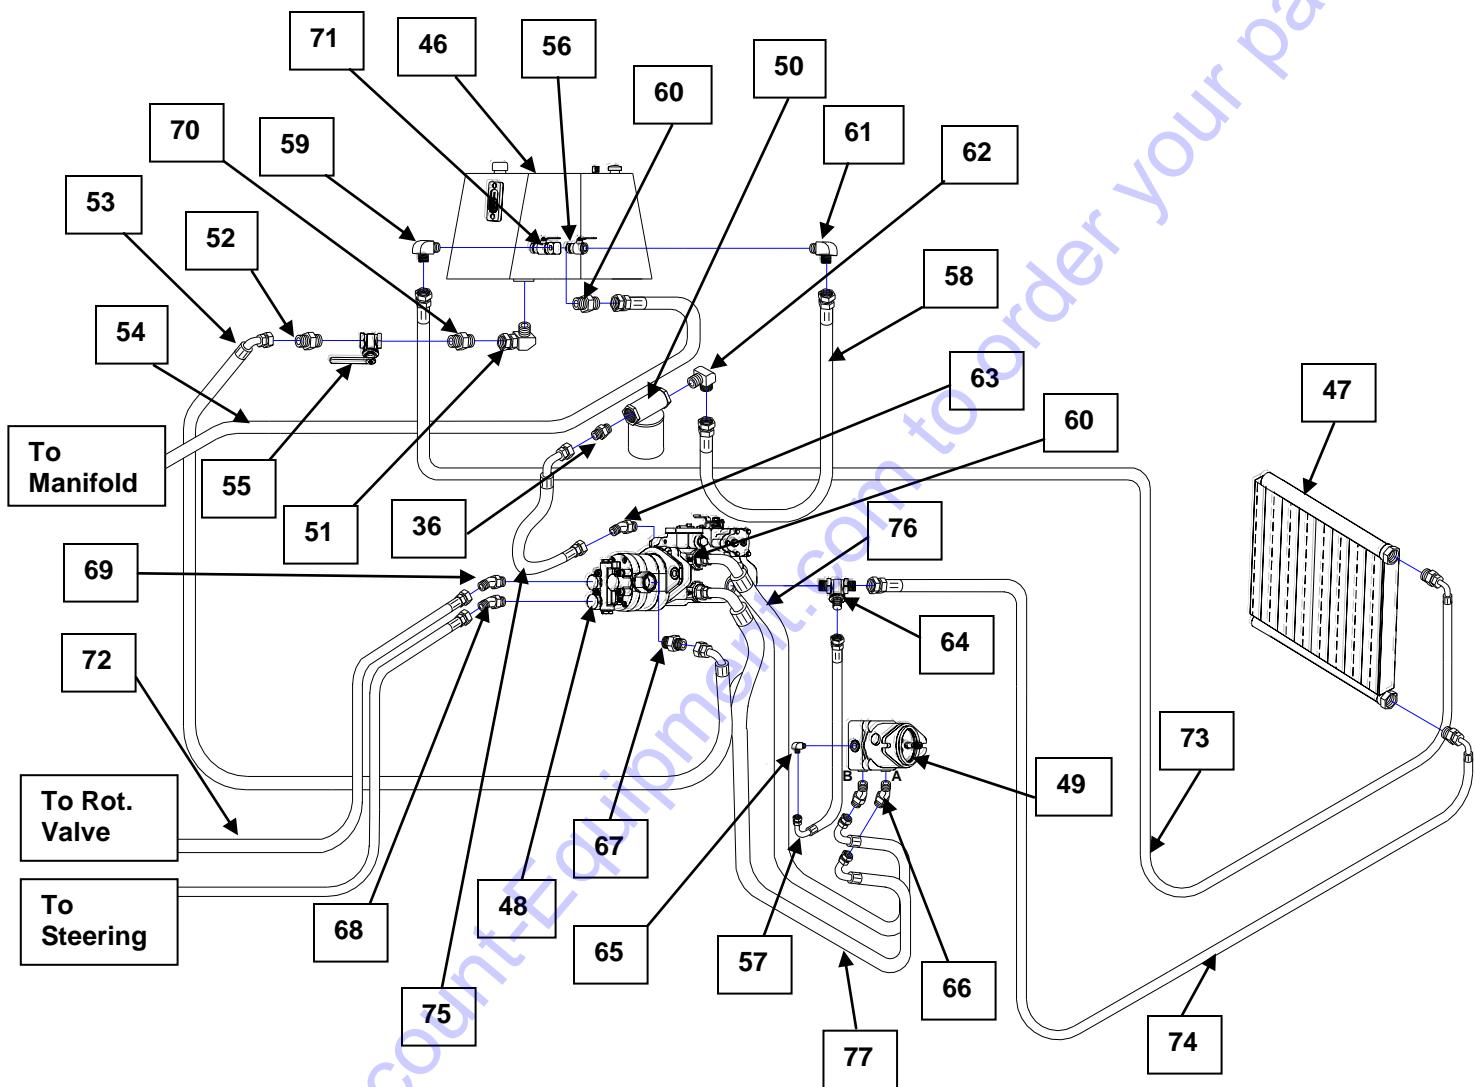


# 4W BROOM HYDRAULIC SYSTEM COMPONENTS

## (Rear Section)

Reference	Part No.	Description	Qty.
46 .....	See Fuel Tank.....	Fuel Tank & Hydraulic Tank.....	1
	Assembly		
47 .....	305767 .....	Oil Cooler, RJ & RCT .....	1
	305766 .....	Oil Cooler, CR	
	305768 .....	Oil Cooler, RC	
48 .....	See Next .....	Hydraulic Pump.....	1
	Section		
49 .....	See Next.....	Fix Motor .....	1
	Section		
50 .....	HF-278-R .....	Filter Element .....	2
	HF-278-RAF03 .....	Filter Assembly, 3 psi.	1
51 .....	305680 .....	Hydraulic Fitting, 6805-20-20 .....	1
52 .....	305843 .....	Hydraulic Fitting, FF2031T20-20 .....	1
53 .....	N/A.....	Hydraulic Hose Assembly, 24"-1GA20FRA20 (2) .....	1
54 .....	N/A.....	Hydraulic Hose Assembly, 27"-1GA16FR16 .....	1
55 .....	306538 .....	1 1/4" Ball Valve .....	1
56 .....	H-227-R .....	1" Ball Valve .....	2
57 .....	N/A.....	Hydraulic Hose Assembly, 21"-1AA12FR8 & 1AA8FRB8 .....	1
58 .....	N/A.....	Hydraulic Hose Assembly, 16.5"-1GA16FR16 (2) .....	1
59 .....	305869 .....	Hydraulic Fitting, FF1868T12-16 .....	1
60 .....	305825 .....	Hydraulic Fitting, FF1852T16-16 .....	3
61 .....	N/A.....	Hydraulic Fitting, FF2032T16-16 .....	1
62 .....	305849 .....	Hydraulic Fitting, FF1868T16-20 .....	1
63 .....	305806 .....	Hydraulic Fitting, FF2068T16-16 .....	1
64 .....	N/A.....	Hydraulic Fitting, FF1865T12-12 .....	1
65 .....	N/A.....	Hydraulic Fitting, FF1868T8-10 .....	1
66 .....	305880 .....	Hydraulic Fitting, FF2068T16-12 .....	2
67 .....	N/A.....	Hydraulic Fitting, FF1852T20-16 .....	1
68 .....	N/A.....	Hydraulic Fitting, FF2068T06-08 .....	1
69 .....	305840 .....	Hydraulic Fitting, FF1852T12-08S .....	1
70 .....	N/A.....	Hydraulic Fitting, 2083-20-20 .....	1
71 .....	305199 .....	Hydraulic Fitting, 6401-16-16 .....	1
72 .....	N/A.....	Hydraulic Hose Assembly, 30.5"-1AA12FR12 & 1AA12FRB12 ..1	1
73 .....	N/A.....	Hydraulic Hose Assembly, 52"-1AA12FR12 & 1AA12FRB12 ....1	1
74 .....	N/A.....	Hydraulic Hose Assembly, 70"-1AA12FR12 & 1AA12FRB12 ....1	1
75 .....	N/A.....	Hydraulic Hose Assembly, 12"-1GA16FR16 & 1GA16FRB16 ....1	1
76 .....	N/A.....	Hydraulic Hose (JD/CAT), 20"-1BA16FRA16 & 1BA16FRB16 ....1	1
		Hydraulic Hose (CUM.), 25"-1BA16FRA16 & 1BA16FRB16 .....	1
77 .....	N/A.....	Hydraulic Hose (JD/CAT), 19"-1BA16FRA16 & 1BA16FRB16 ...1	1
		Hydraulic Hose (CUM.), 24"-1BA16FRA16 & 1BA16FRB16 .....	1

# HYDROSTATIC DRIVE SYSTEM

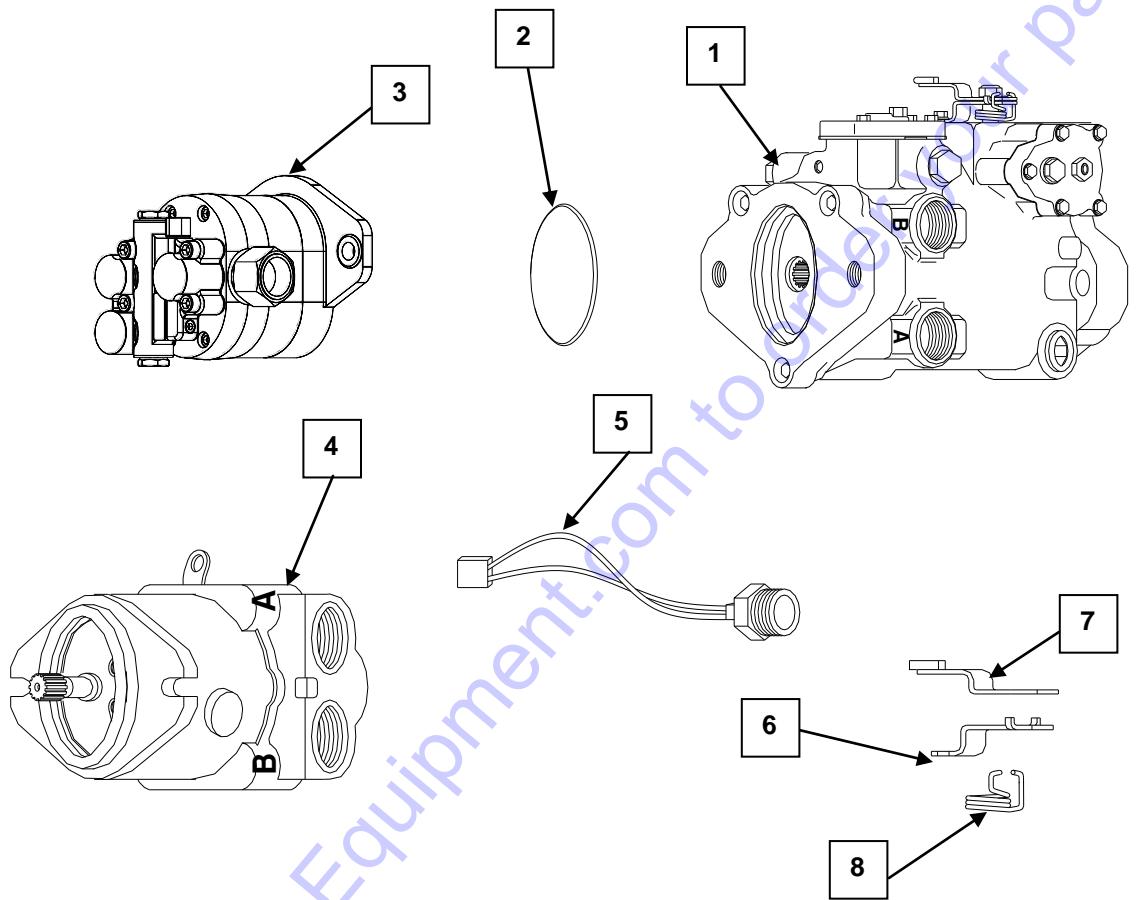


Go to [Discount-Equipment.com](http://Discount-Equipment.com) to **order your parts**

## HYDROSTATIC DRIVE SYSTEM

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	305997 .....	Variable Displacement Pump .....	1
2.....	1508 .....	O-Ring.....	1
3.....	355011 .....	Hydraulic Pump .....	1
	355025.....	Hydraulic Pump for Machines with Curb Brooms .....	1
4.....	305975 .....	Fixed Displacement Motor.....	1
5.....	305957 .....	Neutral Safety Switch.....	1
6.....	1216 .....	Bracket .....	1
7.....	1215 .....	Lever .....	1
8.....	1214 .....	Centering Spring .....	1
Not Shown .....	0301 .....	Front Seal (Same for Item 1 or 4) .....	1
Not Shown .....	4510017 .....	Seal Kit for 305997.....	1

Note: Rebuilt Components Subject to Availability.

# CORE ROTATION VALVE ASSEMBLY

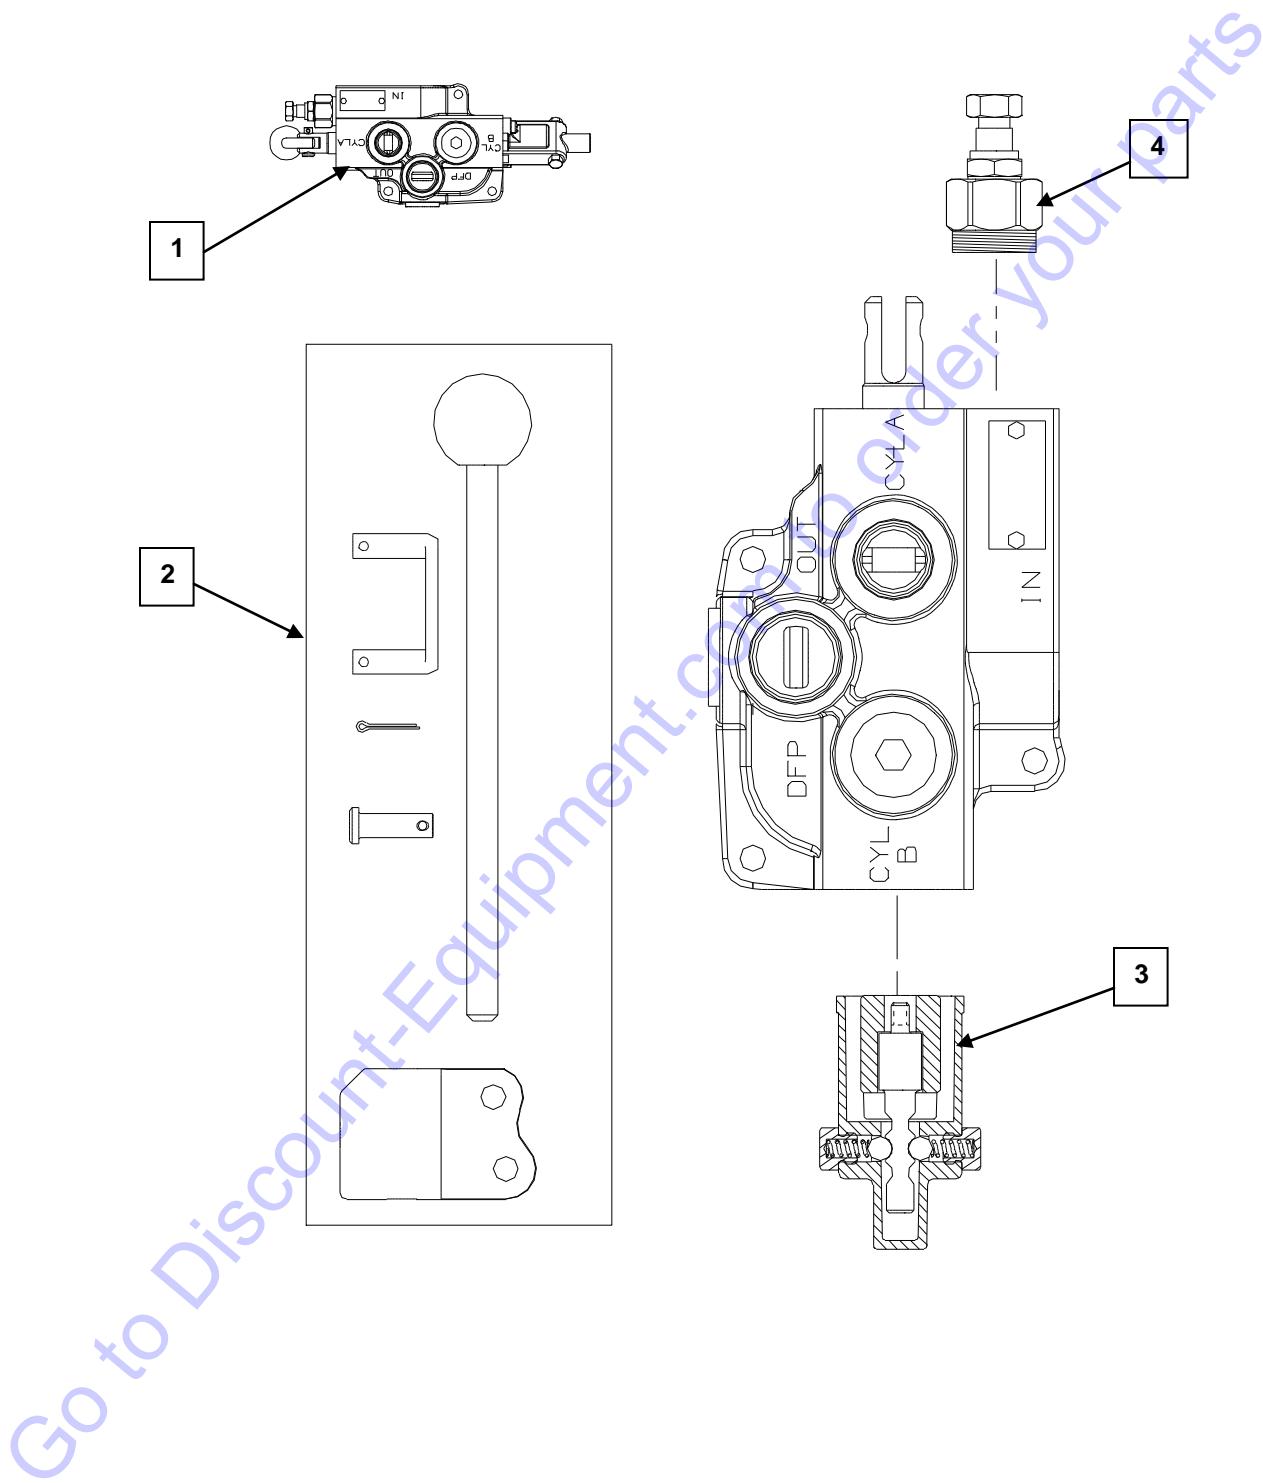


## CORE ROTATION VALVE ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	355012 .....	Complete Valve Assembly.....	1
2.....	355014 .....	Handle Kit.....	1
3.....	355026 .....	Detent (Standard) .....	1
3.....	355022 .....	Detent (Forward and Reverse) .....	1
4.....	355024 .....	Relief Cartridge.....	1
Not Shown .....	355017 .....	Seal Kit .....	1

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

# JOYSTICK VALVE ASSEMBLY

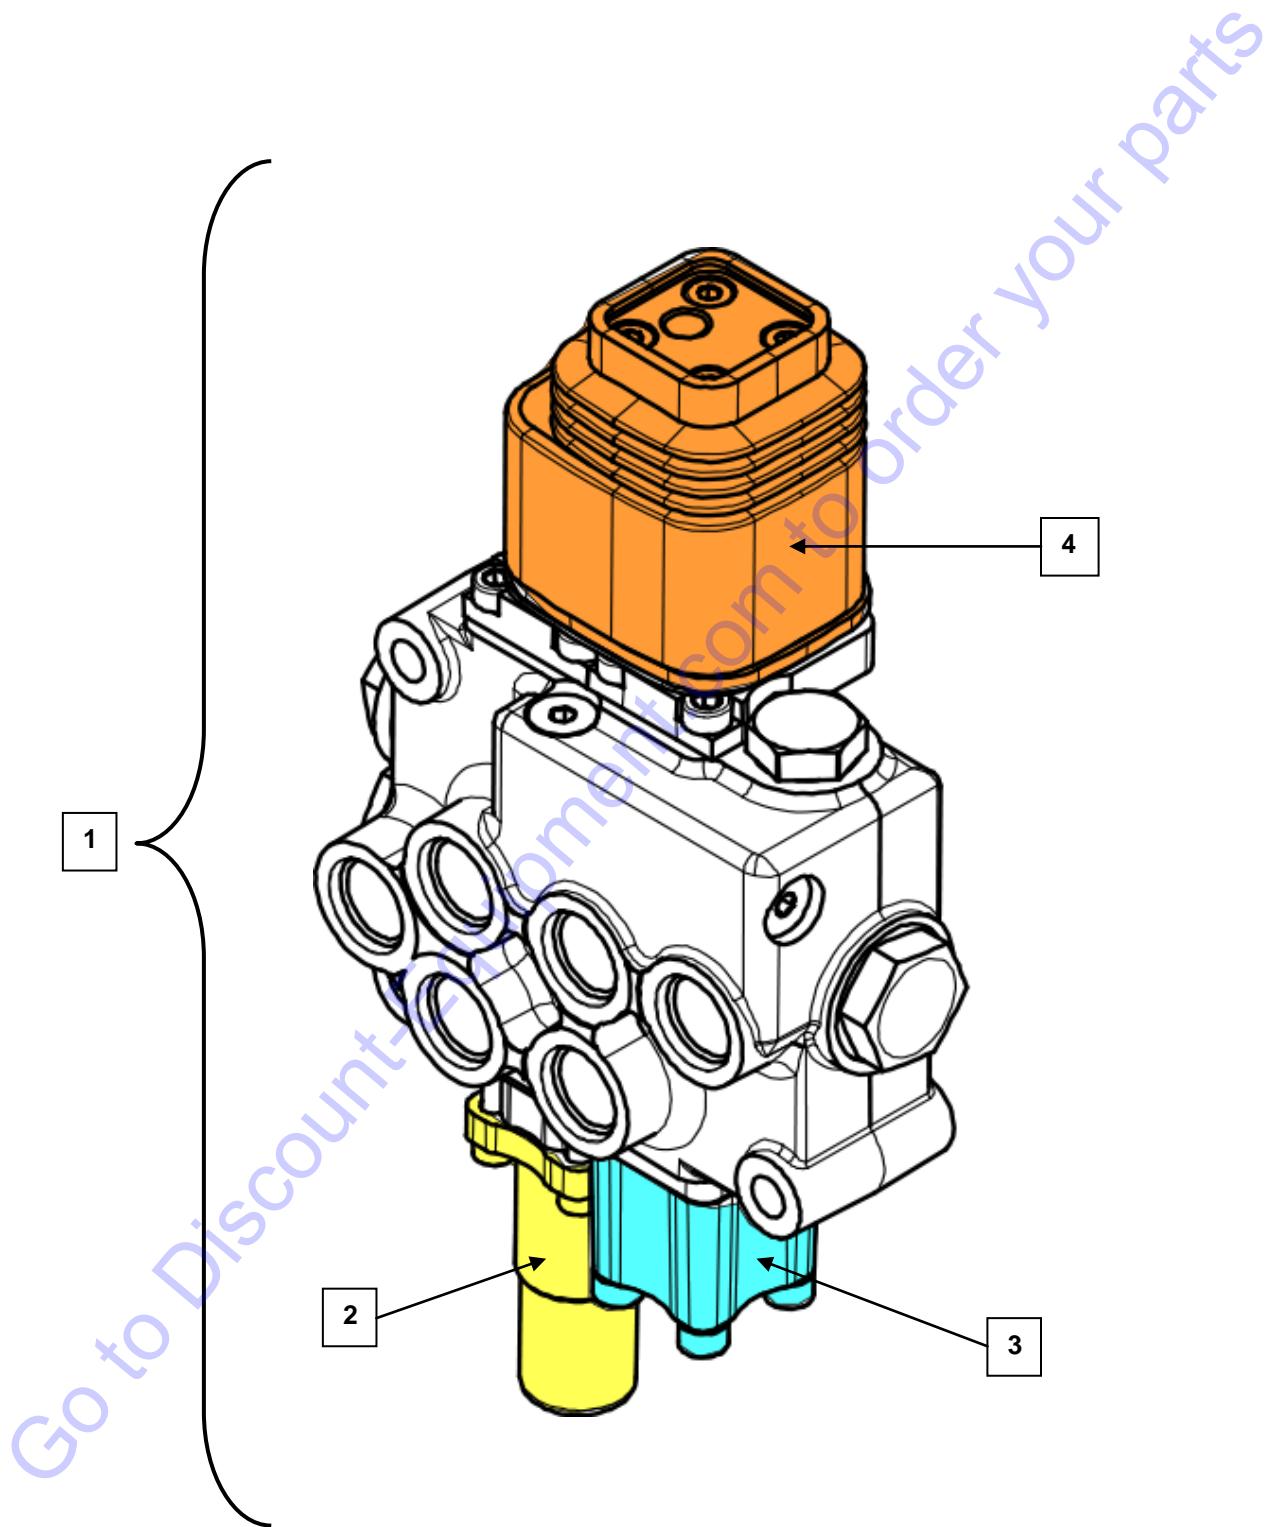


## **JOYSTICK VALVE ASSEMBLY**

<b>Reference</b>	<b>Part No.</b>	<b>Description</b>	<b>Qty.</b>
1.....	355030 .....	Complete Valve Assembly.....	1
2.....	355040 .....	Float Detent.....	1
3.....	355036 .....	Spring Center Detent.....	1
4.....	355037 .....	Joystick Kit .....	1
Not Shown .....	355033 .....	Joystick Handle/Lever.....	1
Not Shown .....	355039 .....	Seal Kit .....	1

Go to [DiscountEquipment.com](http://DiscountEquipment.com) to order your parts

# Down Pressure Limit

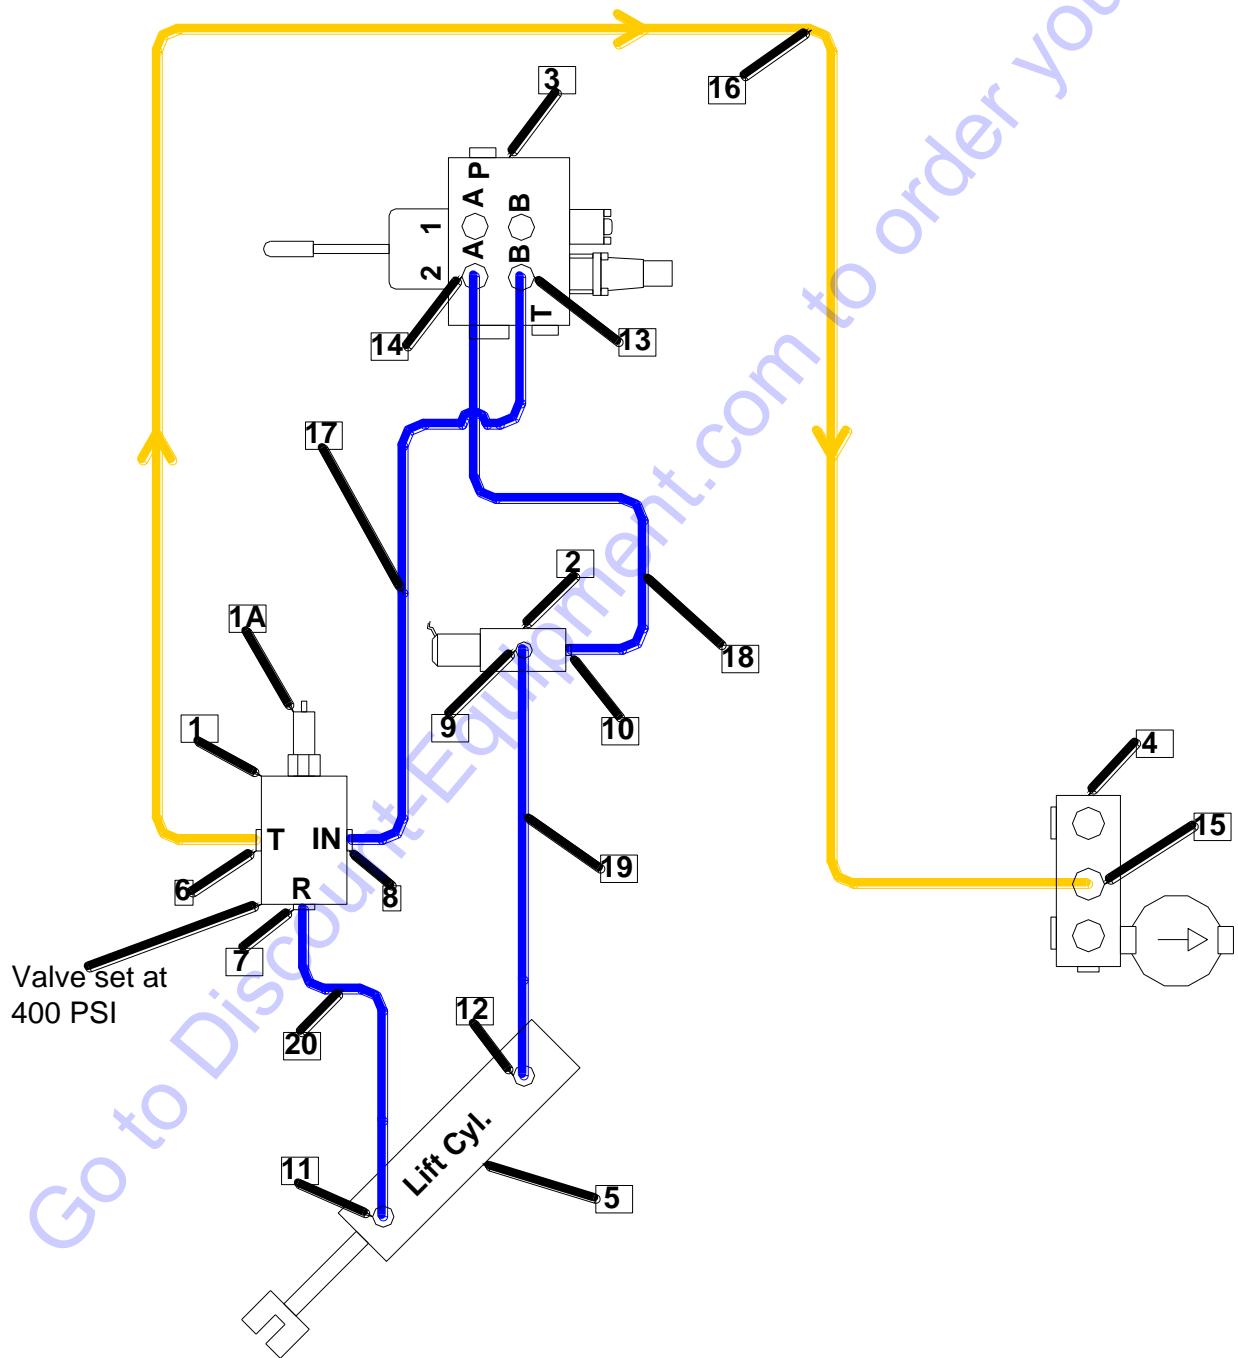


## OPTIONAL DOWN PRESSURE LIMIT

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	305771 .....	Down Pressure Limit Valve .....	1
1A .....	305772 .....	Cartridge.....	1
2.....	305763 .....	Core Lock Solenoid.....	1
3.....	355030 .....	Control Valve .....	1
4.....	305525 .....	Hydraulic Manifold .....	1
5.....	208 .....	Lift Cylinder.....	1
6.....	305817 .....	Hydraulic Fitting, FF1852T04-04 .....	1
7.....	305835 .....	Hydraulic Fitting, FF1868T04-04 .....	1
8.....	305835 .....	Hydraulic Fitting, FF1868T04-04 .....	1
9.....	305818 .....	Hydraulic Fitting, FF1852T04-06 .....	1
10.....	305836 .....	Hydraulic Fitting, FF1868T04-06 .....	1
11.....	305818 .....	Hydraulic Fitting, FF1852T04-06 .....	1
12.....	305818 .....	Hydraulic Fitting, FF1852T04-06 .....	1
13.....	305827A.....	Hydraulic Fitting, FF1852T04-08 .....	1
14.....	305827A.....	Hydraulic Fitting, FF1852T04-08 w/orifice.....	1
15.....	305869 .....	Hydraulic Fitting, FF1868T06-12 .....	1
16.....	N/A .....	Hydraulic Hose, 42"-1AA4FRB4 & 1AA6FR4.1	1
17.....	N/A .....	Hydraulic Hose, 36"-1AA4FRB4 & 1AA4FRA4 .....	1
18.....	N/A .....	Hydraulic Hose, 8"-1AA4FR4 & 1AA4FRC4...1	1
19.....	N/A .....	Hydraulic Hose, 40"-1AA4FRB4 & 1AA4FRB4 .....	1
20.....	N/A .....	Hydraulic Hose, 11"-1AA4FRB4 & 1AA4FRB4 .....	1

## **ELECTRICAL SYSTEM AND ACCESSORIES**

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts


## GAUGES AND SENDERS

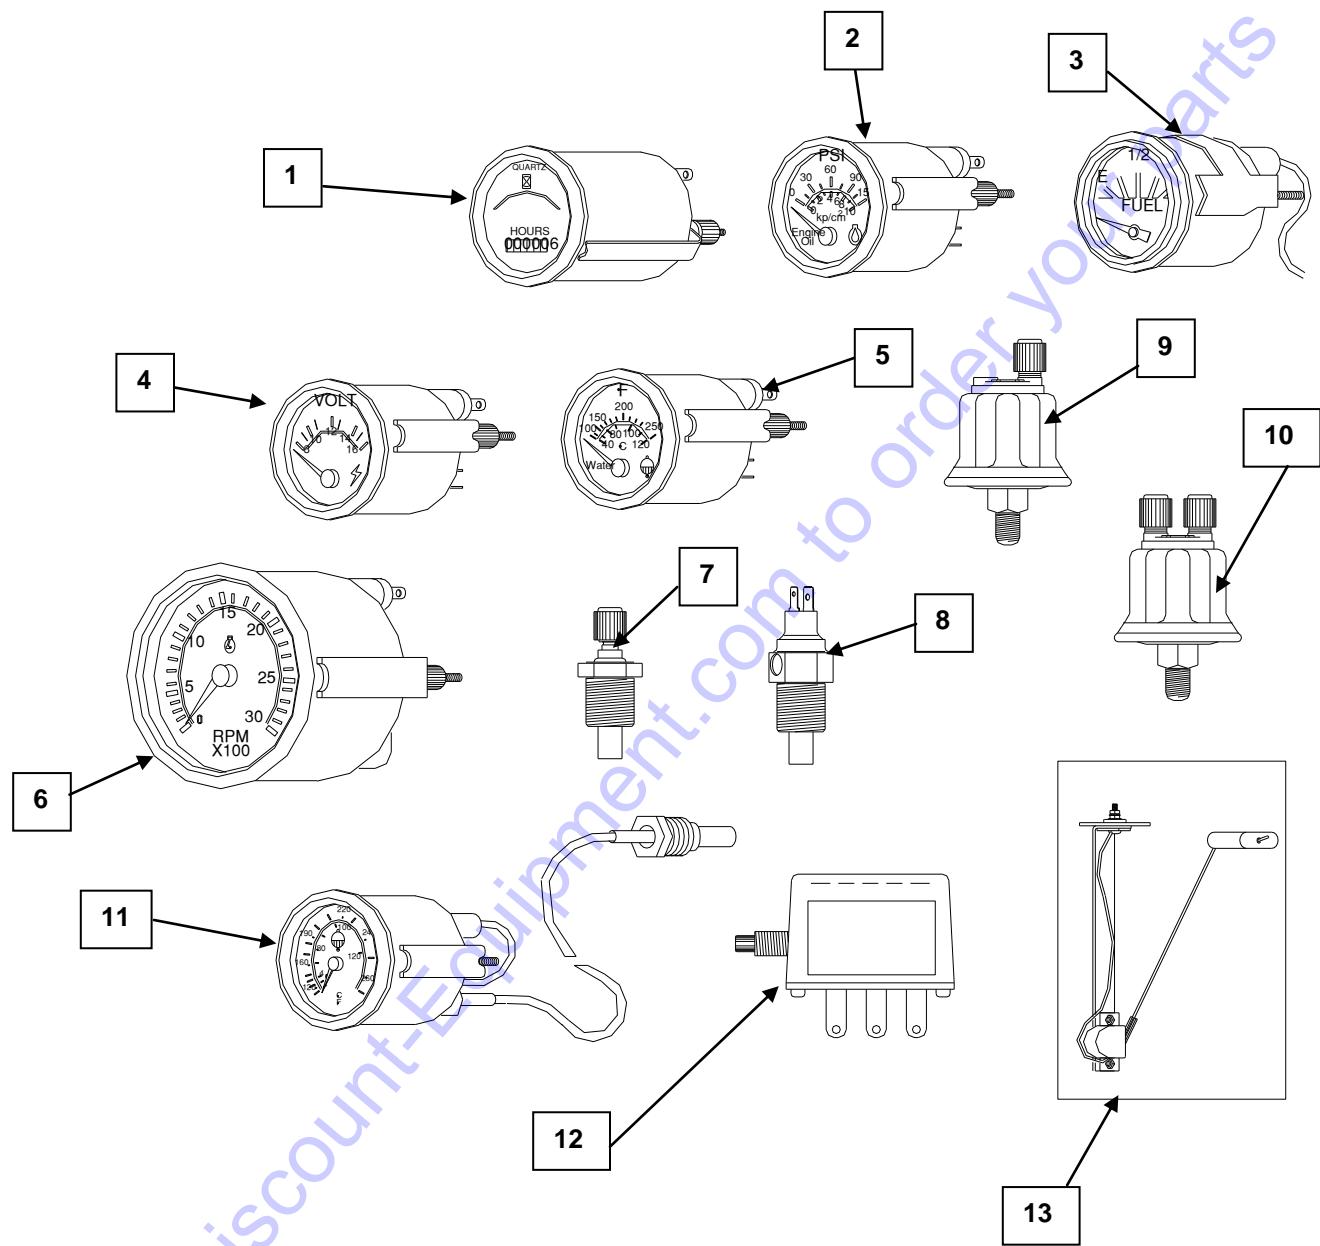

## GAUGES AND SENDERS

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	I-222-HO .....	Hour Meter.....	1
2.....	I-221-R .....	Oil Pressure Gauge .....	1
3.....	I-223-R .....	Fuel Gauge .....	1
4.....	I-220-V.....	Voltmeter .....	1
5.....	I-219-R .....	Temperature Gauge (Engine) .....	1
6.....	I-222-B .....	Tachometer .....	1
	307097.....	Tachometer (RCT-350 Model Only).....	1
7.....	IS-219-R .....	Temperature Sender.....	1
8.....	IS-219-WC .....	Temperature Sender w/ Contact .....	1
		Note: Use w/ warning or shutdown system	
9.....	IS-221-R .....	Oil Pressure Sender .....	1
10.....	IS-221-WC .....	Pressure Sender w/ Contact.....	1
		Note: Use w/ warning or shutdown system	
11.....	I-228-R .....	Hydraulic Temperature Gauge .....	1
		Note: Mechanical 12' Capillary	
12.....	344257 .....	Murphy Shutdown Unit .....	1
		Note: Engine Safety Shutdown	
13.....	344175 .....	Fuel Sender .....	1
Items Not Shown.....	I-220-A .....	Ammeter .....	1
	307255.....	Buzz Light Assembly .....	1
	I-224-R35.....	Fuel Sender (35 gal. Tank).....	1

# WINDSHIELD WIPERS & WASHER

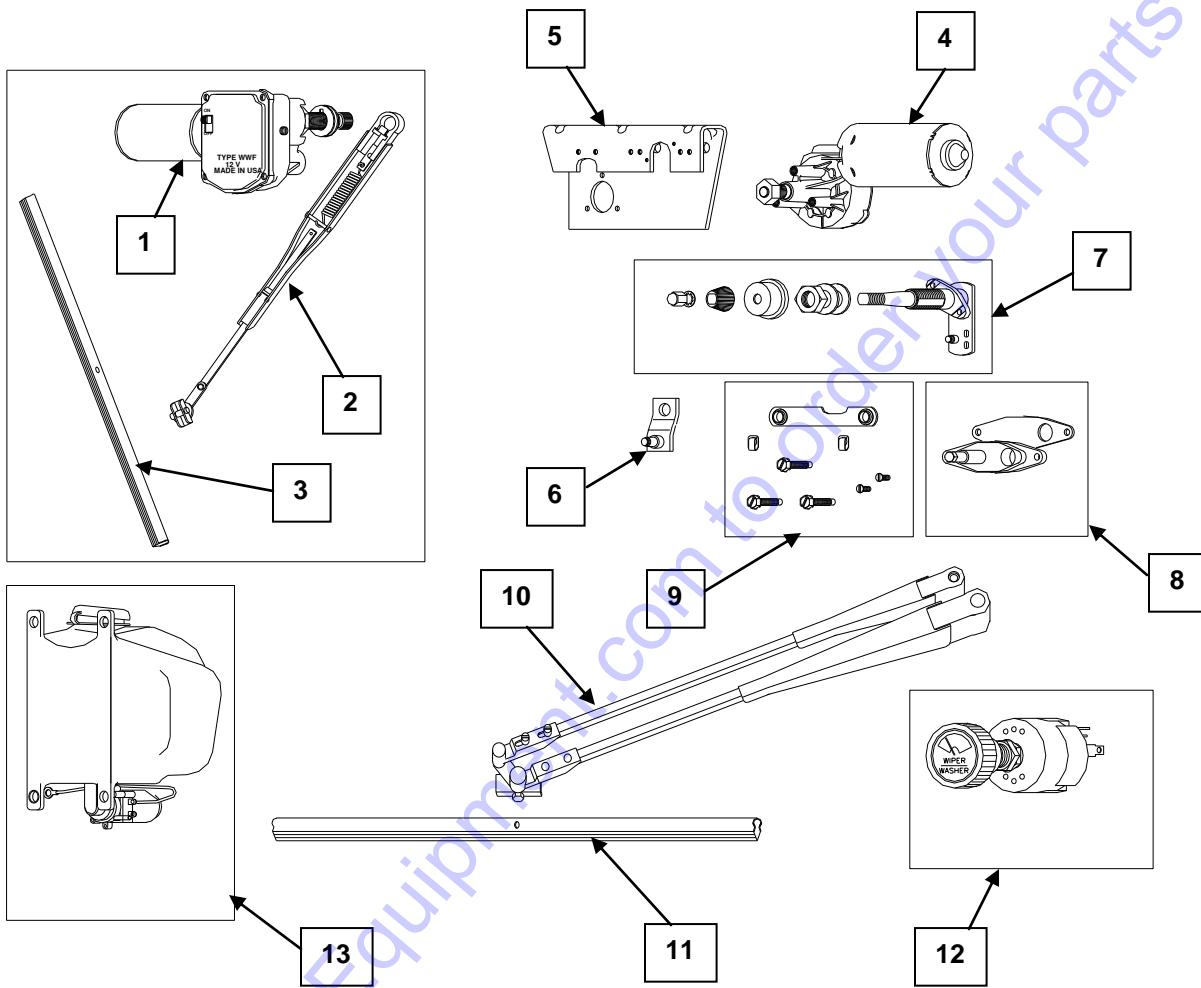


## WINDSHIELD WIPERS & WASHER

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	1-182-54MO .....	Wiper Motor.....	1
2.....	LE581022-1 .....	Drive Arm .....	1
3.....	2-615-2218 .....	18" Blade (Canopy Windshield) .....	1
	2-615-2214 .....	14" Blade (Rear).....	1
	1-182-54 .....	Wiper Kit – Canopy Windshield (Includes Motor, Blade, and Arm) .....	1
	1-182-54R.....	Rear Wiper Kit (Includes Motor, Blade, and Arm).....	1
4.....	2-615-15 .....	Wiper Motor.....	1
5.....	BK721005 .....	Wiper Motor Mount.....	1
6.....	2-615-19 .....	Wiper Drive Arm (Tapered Motor Shaft).....	1
7.....	2-615-60 .....	Wiper Shaft & Arm Assembly.....	1
8.....	2-615-17 .....	Pantograph Adapter & Gasket .....	1
9.....	721014 .....	Link & Bolt Kit (Includes Bolts, Washers, & Clips to Mount Motor) .....	1
10.....	2-615-24 .....	Pantograph Drive Arm .....	1
11.....	2-615-2226 .....	26" Blade .....	1
12.....	2-686-67 .....	Two Speed Wiper Switch.....	1
13.....	66-01 .....	Washer Pump & Reservoir .....	1
	66-01A.....	Washer Kit (Includes Tubing & Hardware for New Installation).....	1

Go to Discount-Equipment.com to order your parts

## MISC. SWITCHES, FUSES, ETC.

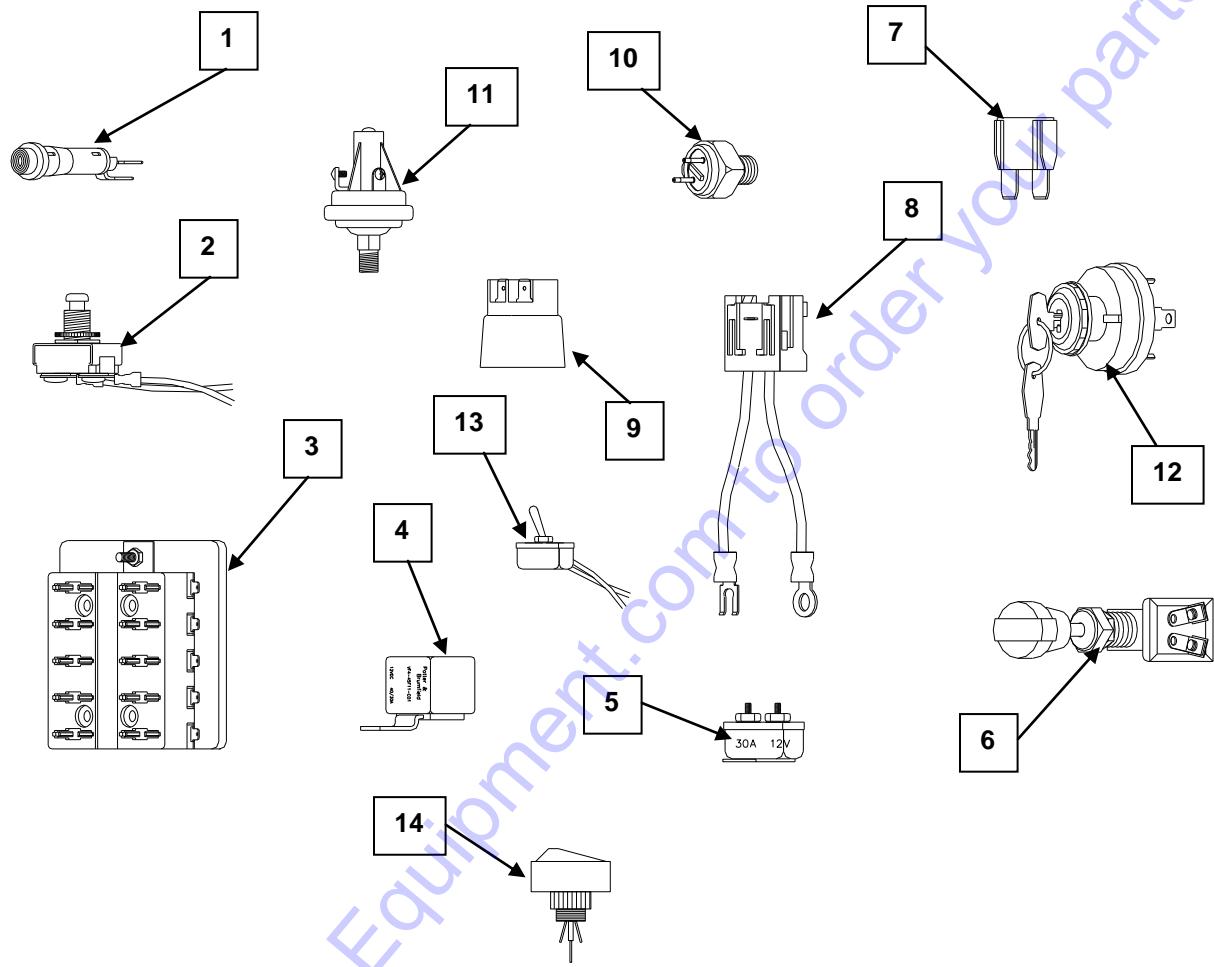


Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

## MISC. SWITCHES, FUSES, ETC.

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	PBL-12.....	Warning Light .....	1
2.....	307098 .....	Parking Brake Switch.....	1
3.....	46050-12 .....	Fuse Block (12 Fuse Capacity) .....	1
	46050-10 .....	Fuse Block (10 Fuse Capacity) .....	1
	46050-8 .....	Fuse Block (8 Fuse Capacity) .....	1
	46050-6 .....	Fuse Block (6 Fuse Capacity) .....	1
4.....	307902 .....	Relay – Air Conditioning Shutoff .....	1
5.....	46330 .....	30 Amp Breaker .....	1
6.....	23836 .....	Universal Accessory Switch .....	1
7.....	WH46242 .....	40 Amp Maxi Fuse .....	1
	46243.....	50 Amp Maxi Fuse .....	1
8.....	WH-767-FH .....	Maxi Fuse Holder .....	1
9.....	X770050 .....	Air Restrictor Sender (Air Cleaner Ind.) .....	1
10.....	BLS-15 .....	Stop Light Switch .....	1
11.....	76052 .....	Pressure Switch (Air Conditioner Shutoff) ....	1
12.....	307044 .....	Ignition Switch .....	1
	307045.....	Key (pair) .....	1
13.....	307071 .....	Core Lock Switch .....	1
14.....	307042 .....	Switch, Lighted, Rocker for Beacon .....	1
Not Shown .....	307235 .....	Push Button Switch for Preheat (All Same)...	1

Go to Discount-Equipment.com to Order your parts

# LIGHTS – HORNS

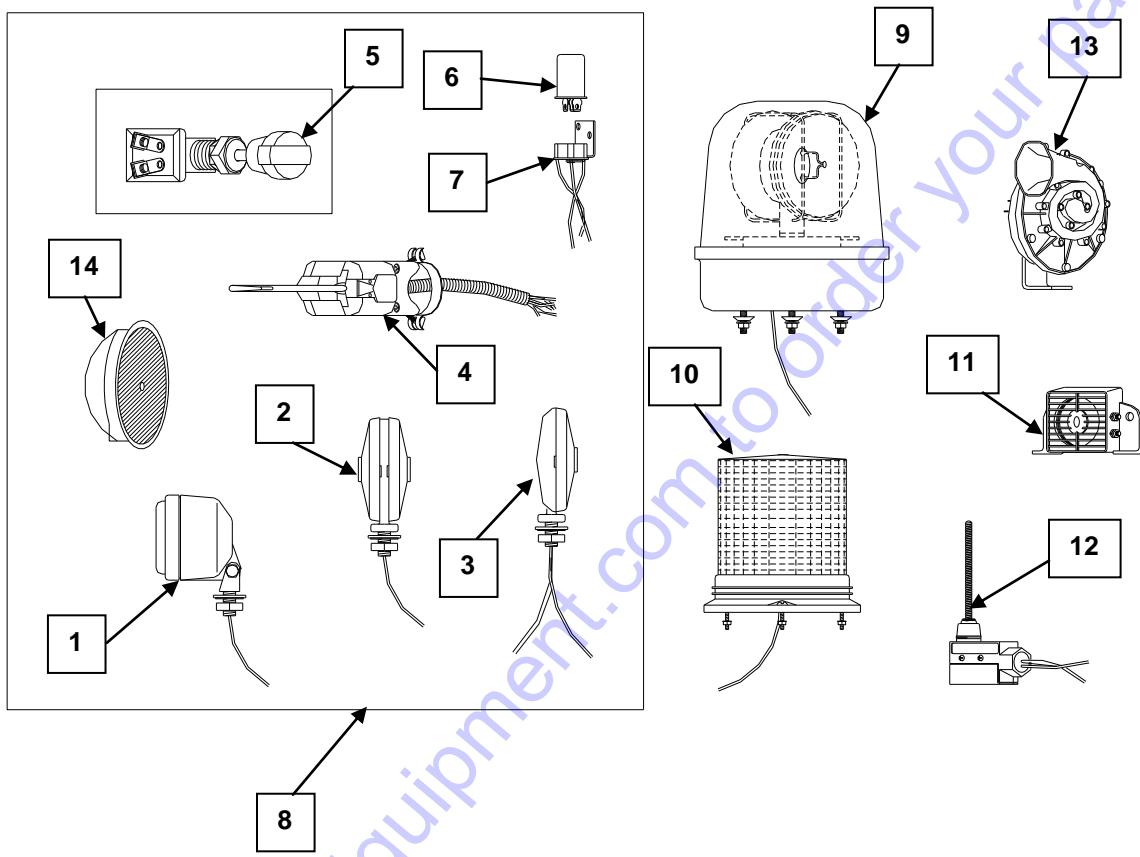


Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

## LIGHTS - HORNS

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	9-50004-SBA .....	Driving Light .....	A/R
2.....	4-75001 .....	Turn Signal .....	2
3.....	6-70001 .....	Stop/Turn Signal .....	2
4.....	16-35800 .....	Turn Signal Switch .....	1
5.....	23836 .....	Universal Accessory Switch .....	1
6.....	550 .....	Flasher .....	1
7.....	550FH.....	Flasher Socket .....	1
8.....	LG-100-SBA .....	Light Group Kit w/950004-SBA Driving Lights .....	See Note
9.....	7-40004 .....	Amber Beacon .....	A/R
10.....	3614A.....	Amber Strobe Light .....	A/R
11.....	RH-250.....	Reverse Alarm .....	1
12.....	LDA-50-1R.....	Reverse Alarm Switch .....	1
13.....	4-302 .....	Traffic Horn .....	1
14.....	307031 .....	Flush Mount Tail/Brake Lights (Starting w/ Serial Number 90044) .....	2

**Note:** Light Group Kit, Part Number LG-100-SBA, contains all signals, switches, lights, and wiring harness required for field installation.

## 4W BROOM HEATER/DEFROSTER

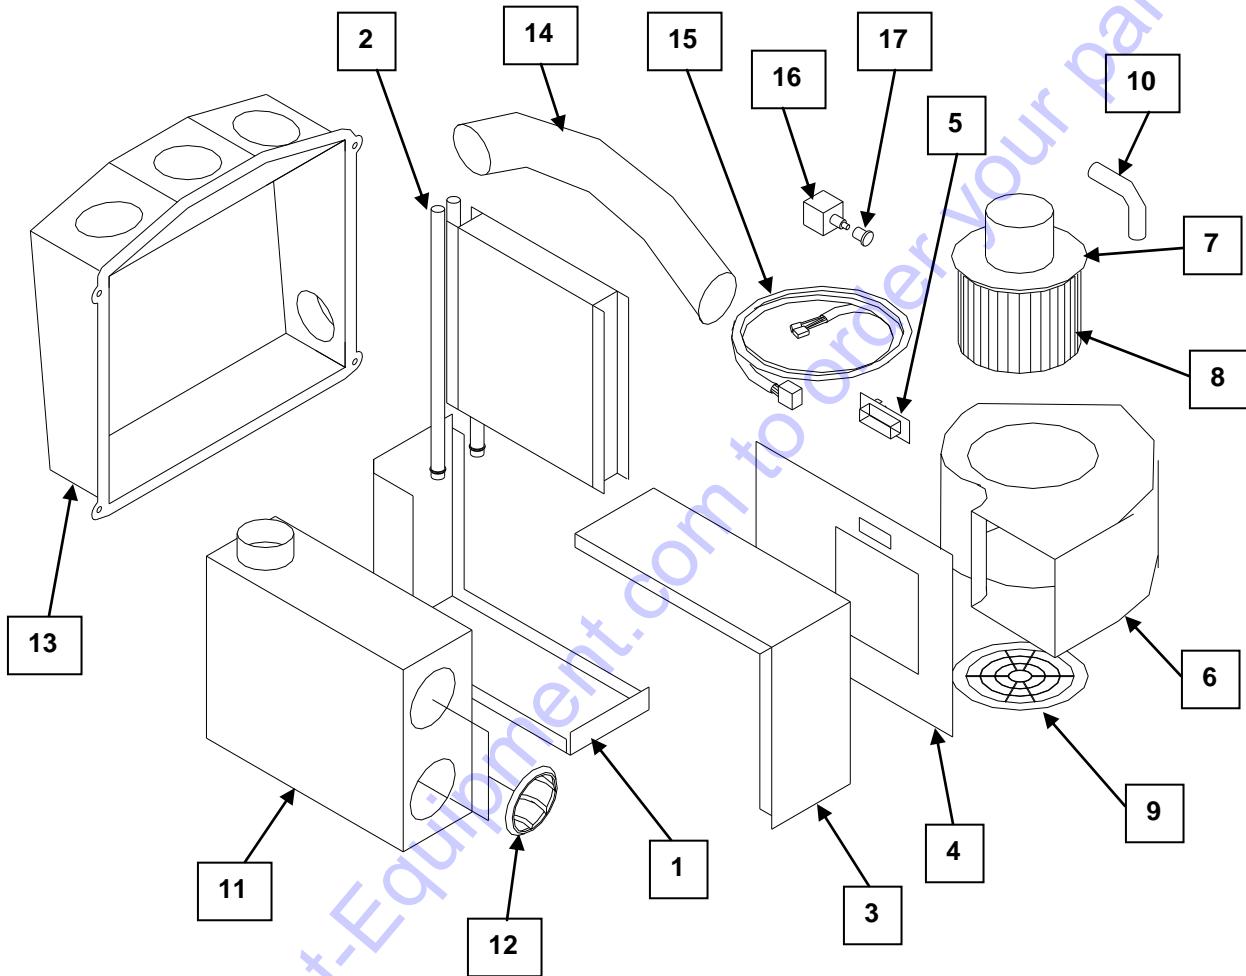



## 4W BROOM HEATER/DEFROSTER

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	403153 .....	Case, Bottom/Side .....	1
2.....	403154 .....	Coil .....	1
3.....	403155 .....	Case, Top/Side .....	1
4.....	403156 .....	Panel, Blower .....	1
5.....	403157 .....	Resistor, 3 – Speed .....	1
6.....	403158 .....	Housing, Blower .....	1
7.....	403159 .....	Motor, CCW .....	1
8.....	403160 .....	Wheel, Blower .....	1
9.....	403161 .....	Ring, Venturi .....	1
10.....	403162 .....	Hose, Vent Motor Blower .....	1
11.....	403163 .....	Plenum, Heater .....	1
12.....	403164 .....	Louver, 3" Round .....	2
13.....	403165 .....	Plenum, Defrost .....	1
14.....	403166 .....	Hose, Flex, Wire, Metal, 2.5" Dia. ....	1
15.....	403167 .....	Harness, Wire, Heater .....	1
16.....	403168 .....	Switch, Rot 4 Position .....	1
17.....	403169 .....	Knob, Switch, Rotary .....	1
KIT .....	K00016.....	Heater/Defroster Kit (JD RJ-350).....	1
KIT .....	K00017.....	Heater/Defroster Kit (Cummins RC-350) .....	1
KIT .....	K00018.....	Heater/Defroster Kit (CAT CR-350) .....	1
KIT .....	K00019.....	Heater/Defroster Kit (Cummins Turbo RCT-350) .....	1
KIT .....	K00020.....	Heater/Defroster Kit (Kubota KR-350) .....	1

# 4W BROOM AIR CONDITIONING SYSTEM

## Features:

- 255 CFM
- Heavy Duty Powder Coated Finish all steel case.
- Low Profile for maximum headroom.
- Filtered, recirculated air.

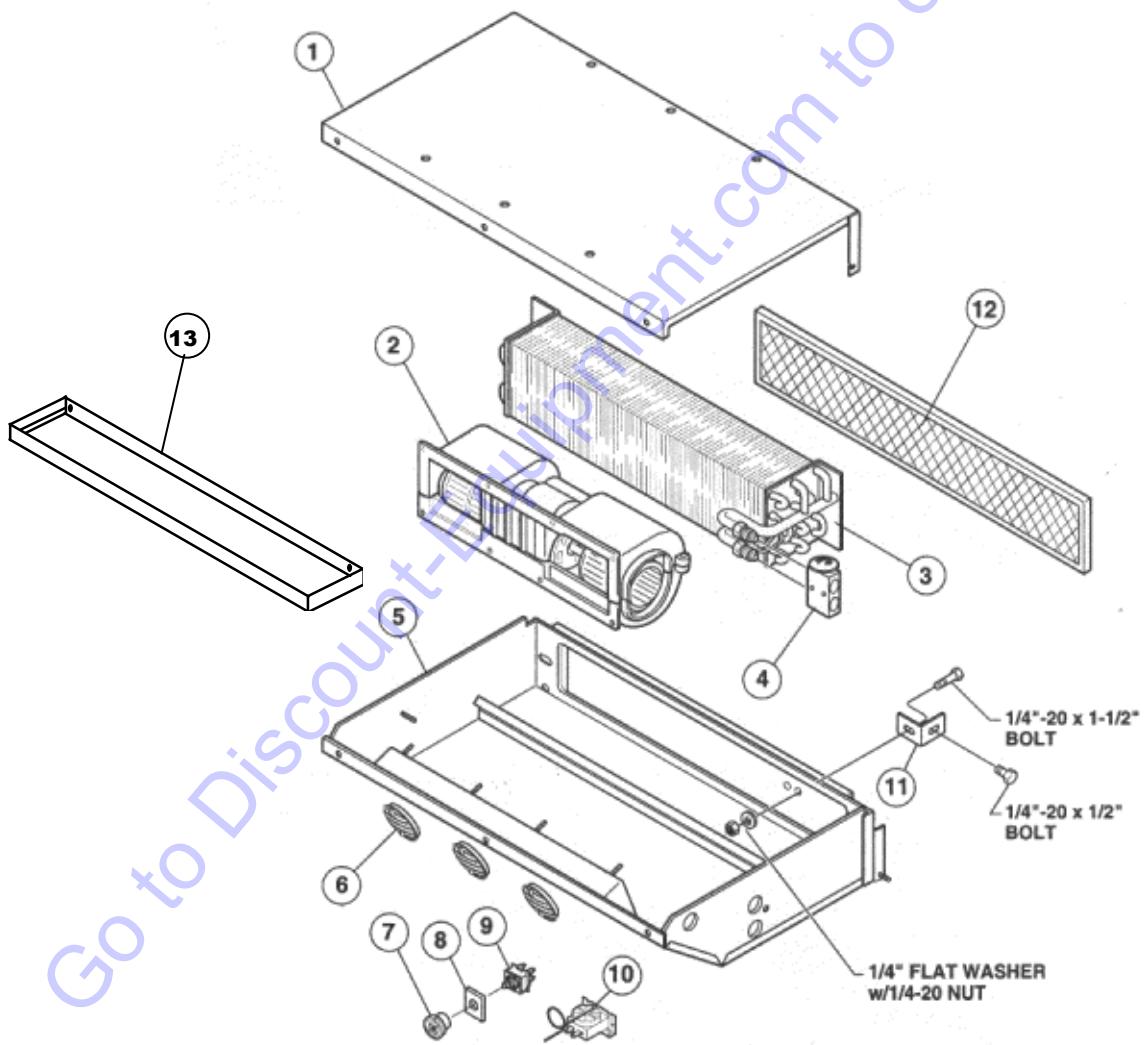
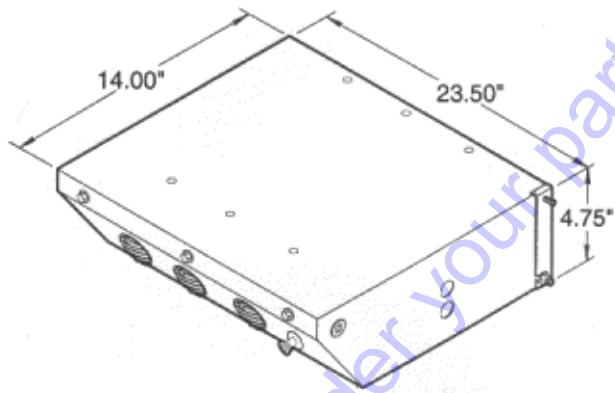


## 4W BROOM AIR CONDITIONING SYSTEM

Reference	Part No.	Description	Qty.
1.....	403184 .....	Cover, Evaporator .....	1
2.....	403180 .....	Blower Assembly.....	1
3.....	403175 .....	Coil, Evaporator .....	1
4.....	403174 .....	Valve, Exp., Block, R134a .....	1
5.....	403183 .....	Housing, Evaporator .....	1
6.....	403164 .....	Louver, 3" Round .....	3
7.....	403177 .....	Knob, Fan .....	1
8.....	403181 .....	Decal, Fan.....	1
9.....	403173 .....	Switch, Rotary.....	1
10.....	403176 .....	Thermostat .....	1
11.....	403187 .....	Bracket, Mounting, Exp. Valve .....	1
12.....	403178 .....	Filter .....	1
13.....	403192 .....	Drain Pan (Evaporator) .....	1
Not Shown .....	403182 .....	TSTAT Knob.....	1
Not Shown .....	403185 .....	Binary Switch.....	1

Go to [Discount-Equipment.Com](http://Discount-Equipment.Com) to order your parts

## 4W BROOM AIR CONDITIONING SYSTEM

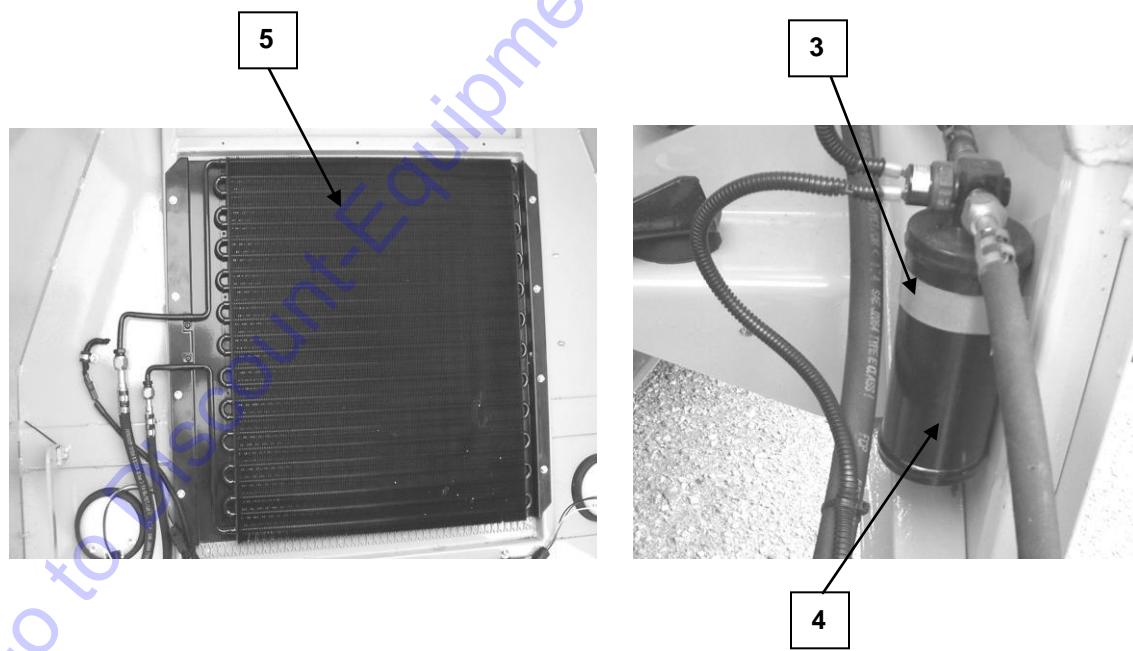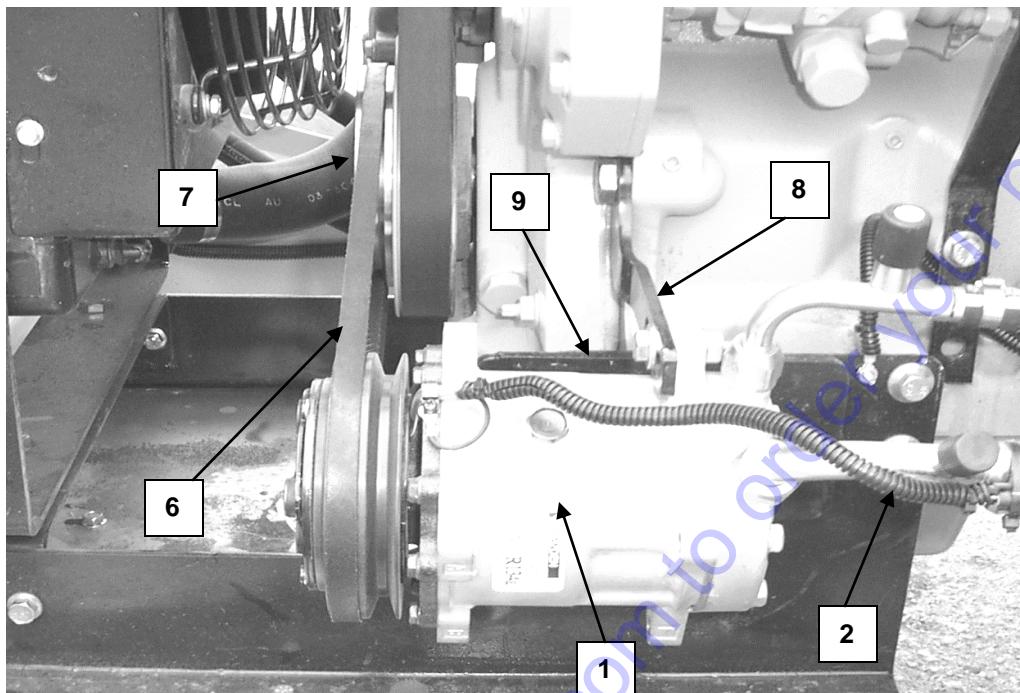

## 4W BROOM AIR CONDITIONING SYSTEM


<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	403170 .....	Compressor (Fits all Engine Models) .....	1
2.....	403179 .....	Wiring Harness .....	1
3.....	403186 .....	Dryer Clamp .....	1
4.....	403171 .....	Receiver Dryer .....	1
5.....	403150 .....	Condenser .....	1
6.....	304028 .....	A/C Belt, RJ-350 (Shown) .....	1
	BL-0660.....	A/C Belt, RC-350 .....	1
	304027.....	A/C Belt, CR-350 .....	1
	304014.....	A/C Belt, KR-350 .....	1
	304015.....	A/C Belt, RCT-350 .....	1
7.....	403019 .....	Pulley, RJ-350 (Shown) .....	1
	3919624.....	Pulley, RC-350 .....	1
	203341 .....	Pulley, KR-350 .....	1
8.....	203131 .....	Adjustment Arm, RJ-350 (Shown) .....	1
	203261.....	Adjustment Arm, CR-350 & KR-350 .....	1
	203655.....	Adjustment Arm, RCT-350 .....	1
9.....	852127 .....	Compressor Mount, RJ-350 (Shown) .....	1
	403021.....	Compressor Mount, RC-350 .....	1
	853610.....	Compressor Mount, CR-350 .....	1
	852259.....	Compressor Mount, RCT-350 .....	1
	852808.....	Compressor Mount, KR-350 .....	1

Go to Discount-Equipment.com to order your parts

## **BROOM ACCESSORIES SYSTEMS**

Go to Discount-Equipment.com to order your parts


## 4W BROOM WATER SYSTEM

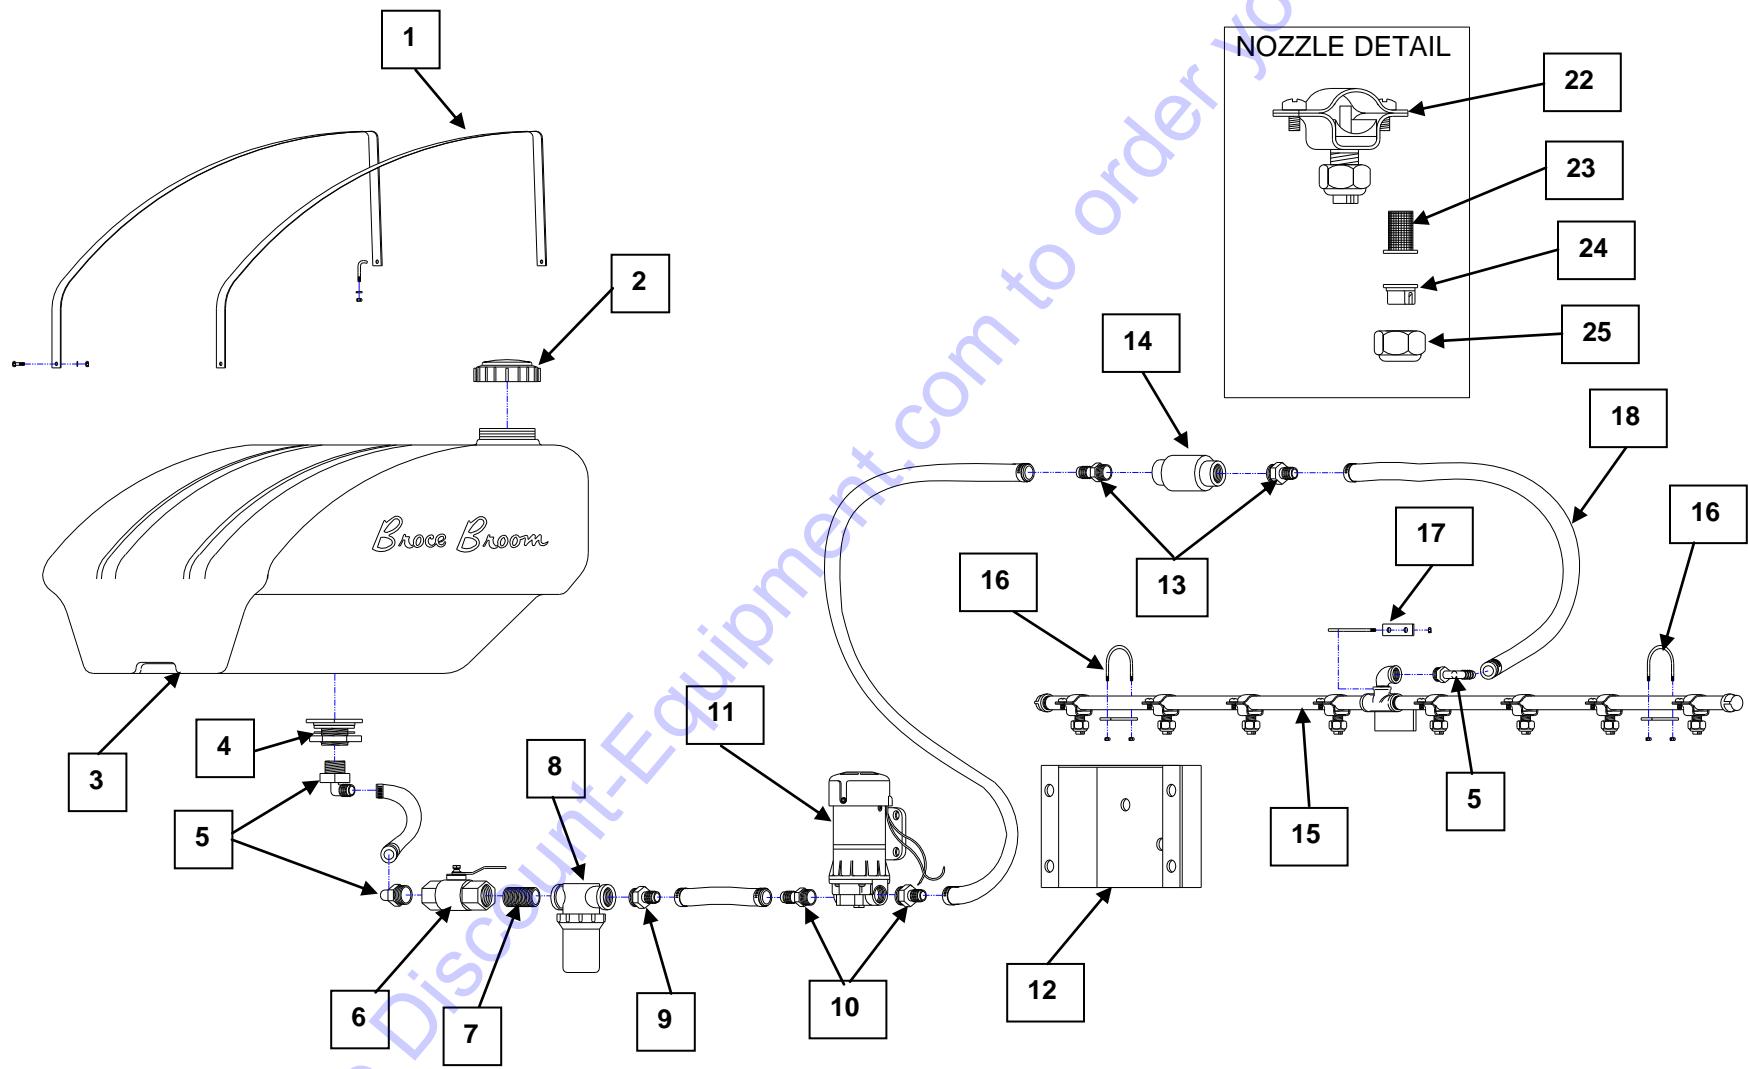

## 4W BROOM WATER SYSTEM

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	201761 .....	Strap.....	2
2.....	WS-145-D .....	Filler Cap, Plastic, 6" Dia. ....	1
3.....	WS-143-D .....	Low Profile Plastic Tank .....	1
4.....	WS-176-E.....	Tank Adapter (1 1/4" Dia.).....	1
5.....	345012 .....	Plastic Pipe Fitting, 90°.....	3
6.....	306535 .....	3/4" Ball Valve.....	1
7.....	306120 .....	Pipe Nipple .....	1
8.....	WS-148 .....	Inline Strainer, Complete .....	1
9.....	345011 .....	Plastic Pipe Fitting, Straight.....	1
10.....	345010 .....	Plastic Pipe Fitting, Straight.....	2
11.....	WS-146 .....	Pump.....	1
12.....	850025 .....	Pump Mount.....	1
13.....	345009 .....	Plastic Pipe Fitting, Straight.....	2
14.....	306950 .....	Check Valve .....	1
15.....	WS-154 .....	Spray Bar Assembly.....	1
16.....	202101 .....	Brace w/ U Bolt .....	2
17.....	001716 .....	Brace w/ U Bolt .....	1
18.....	344999 .....	Hose (sold by foot).....	n/a
22.....	WS-155 .....	Nozzle Assembly, Complete.....	8
23.....	WS-158 .....	Nozzle Screen .....	8
24.....	TP8002.....	Spray Tip .....	8
25.....	1458 .....	Cap .....	8

## SCRAPER BLADE ASSEMBLY

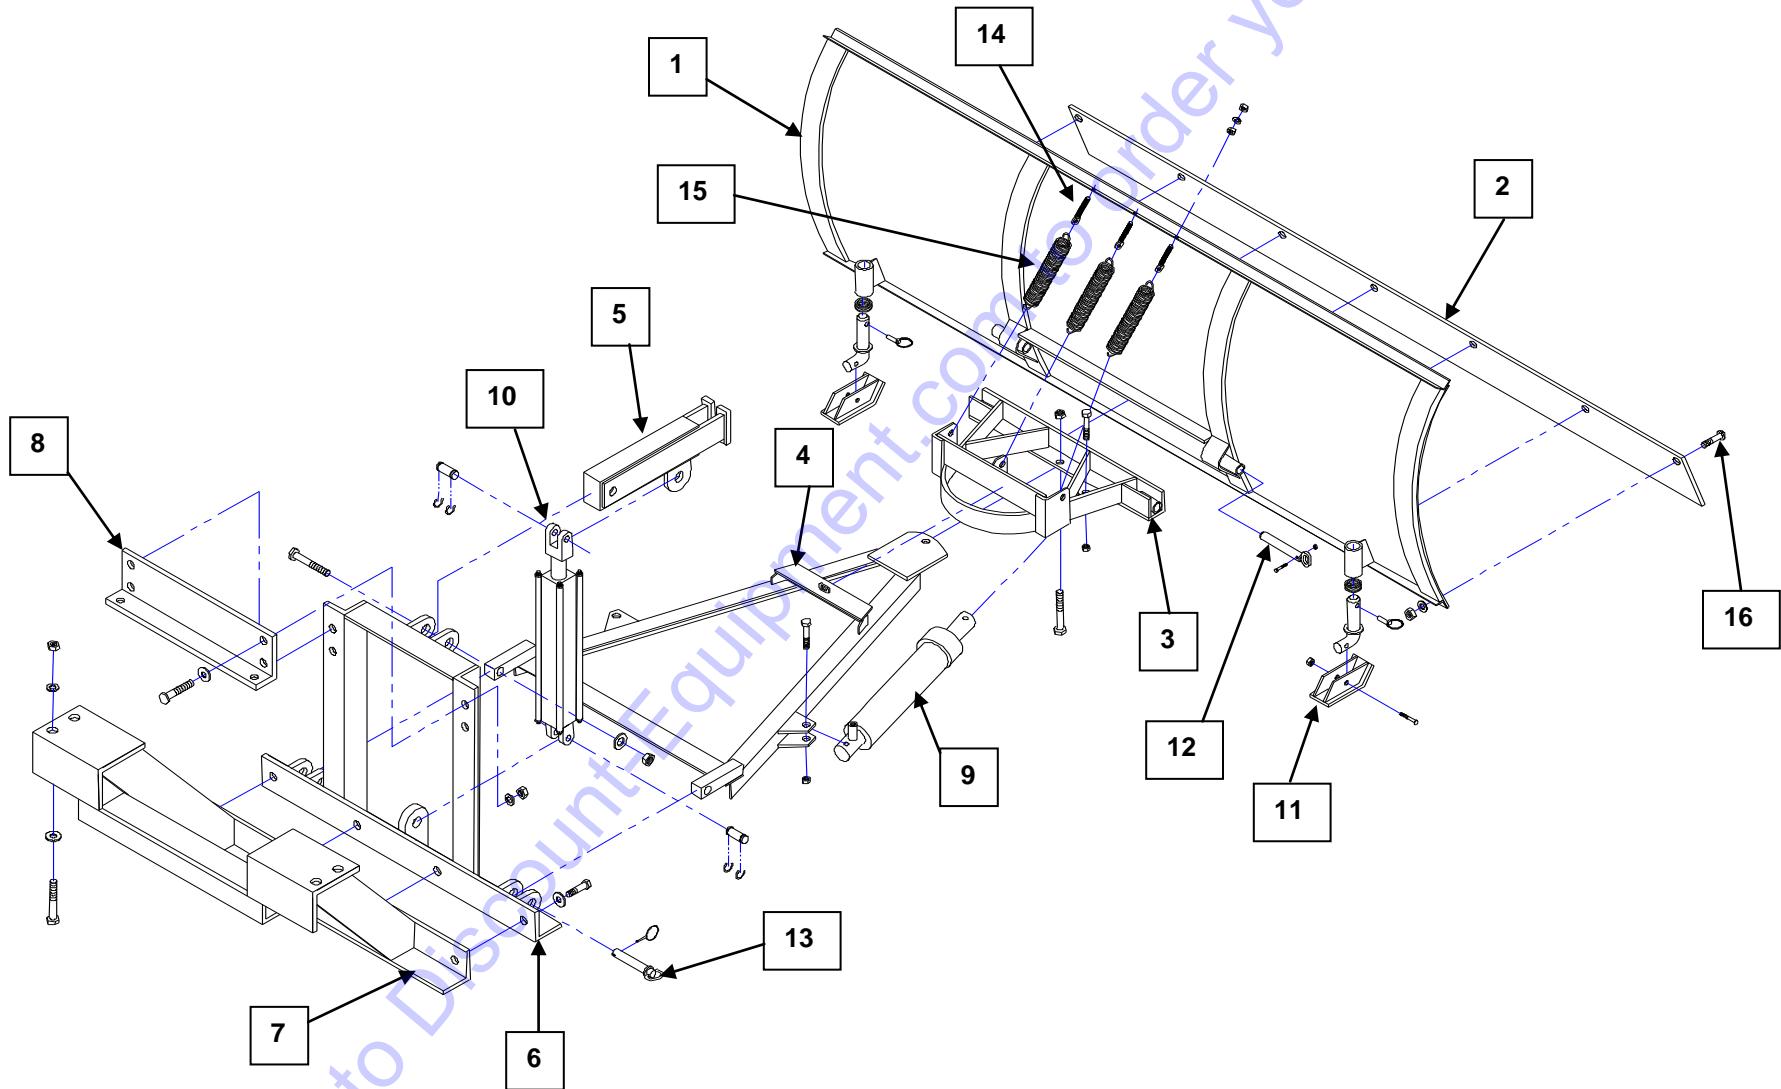


# SCRAPER BLADE ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	850022 .....	Blade WA (7 1/2" scraper).....	1
2.....	SBA09796 .....	Cutting Edge (High Carbon Steel).....	1
3.....	850024 .....	Blade Pivot WA .....	1
4.....	850023 .....	Blade A-Frame WA .....	1
5.....	850026 .....	Blade Lift Arm WA .....	1
6.....	850017 .....	Lift Frame .....	1
7.....	850016 .....	Frame Mount .....	1
8.....	201956 .....	Frame Brace .....	1
9.....	SBA05437 .....	Shift Cylinder .....	2
10.....	208 .....	Lift Cylinder .....	1
11.....	SBA09126 .....	Shoe Assembly .....	2
12.....	SBA08541 .....	Pivot Pin Set (2 Pins).....	1
13.....	SBA08562 .....	Hinge Pin Set (2 Pins) .....	1
14.....	SBA09124 .....	Eye Bolts (for springs) .....	3
15.....	SBA07017 .....	Tip Spring .....	3
16.....	SBA08184 .....	Cutting Edge Bolt Set.....	1
17.....	SBA02020 .....	Marker Kit (not shown).....	1

Go to DiscountEquipment.com to order your parts

# SCRAPER BLADE HYDRAULICS ASSEMBLY

## Scraper Blade

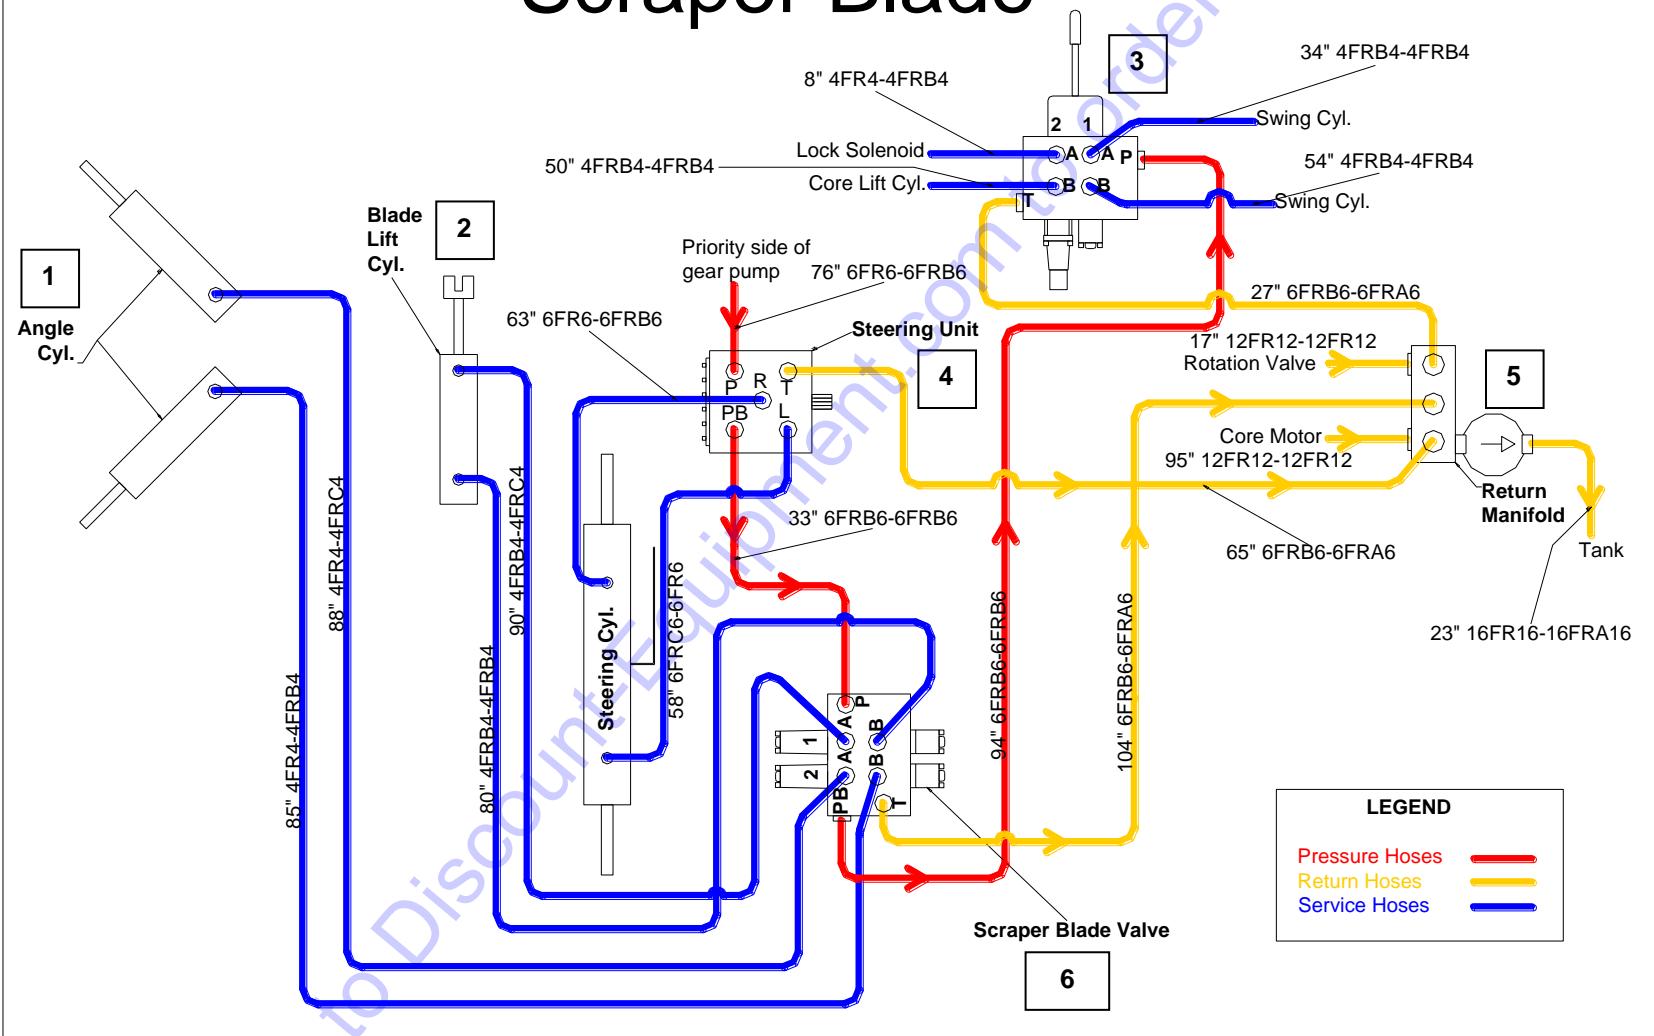

## SCRAPER BLADE HYDRAULICS ASSEMBLY


Reference	Part No.	Description	Qty.
1.....	SBA05437.....	Angle Cylinder .....	2
2.....	208 .....	Lift Cylinder (208-R) .....	1
3.....	355030 .....	Joystick Control Valve .....	1
4.....	305944 .....	Steering Unit .....	1
5.....	305525 .....	Hydraulic Manifold .....	1
6.....	355031 .....	Scraper Control Valve .....	1
Not Shown .....	852443 .....	RH Foot Control Pedal .....	1
Not Shown .....	852439 .....	LH Foot Control Pedal.....	1

\* Note: Hydraulic Hoses and Aeroquip fittings not available through Broce Mfg. Parts Dept. – Please Source Locally

Go to Discount-Equipment.com to order your parts

# CURB SWEeper ASSEMBLY

(Sweeper and Components)

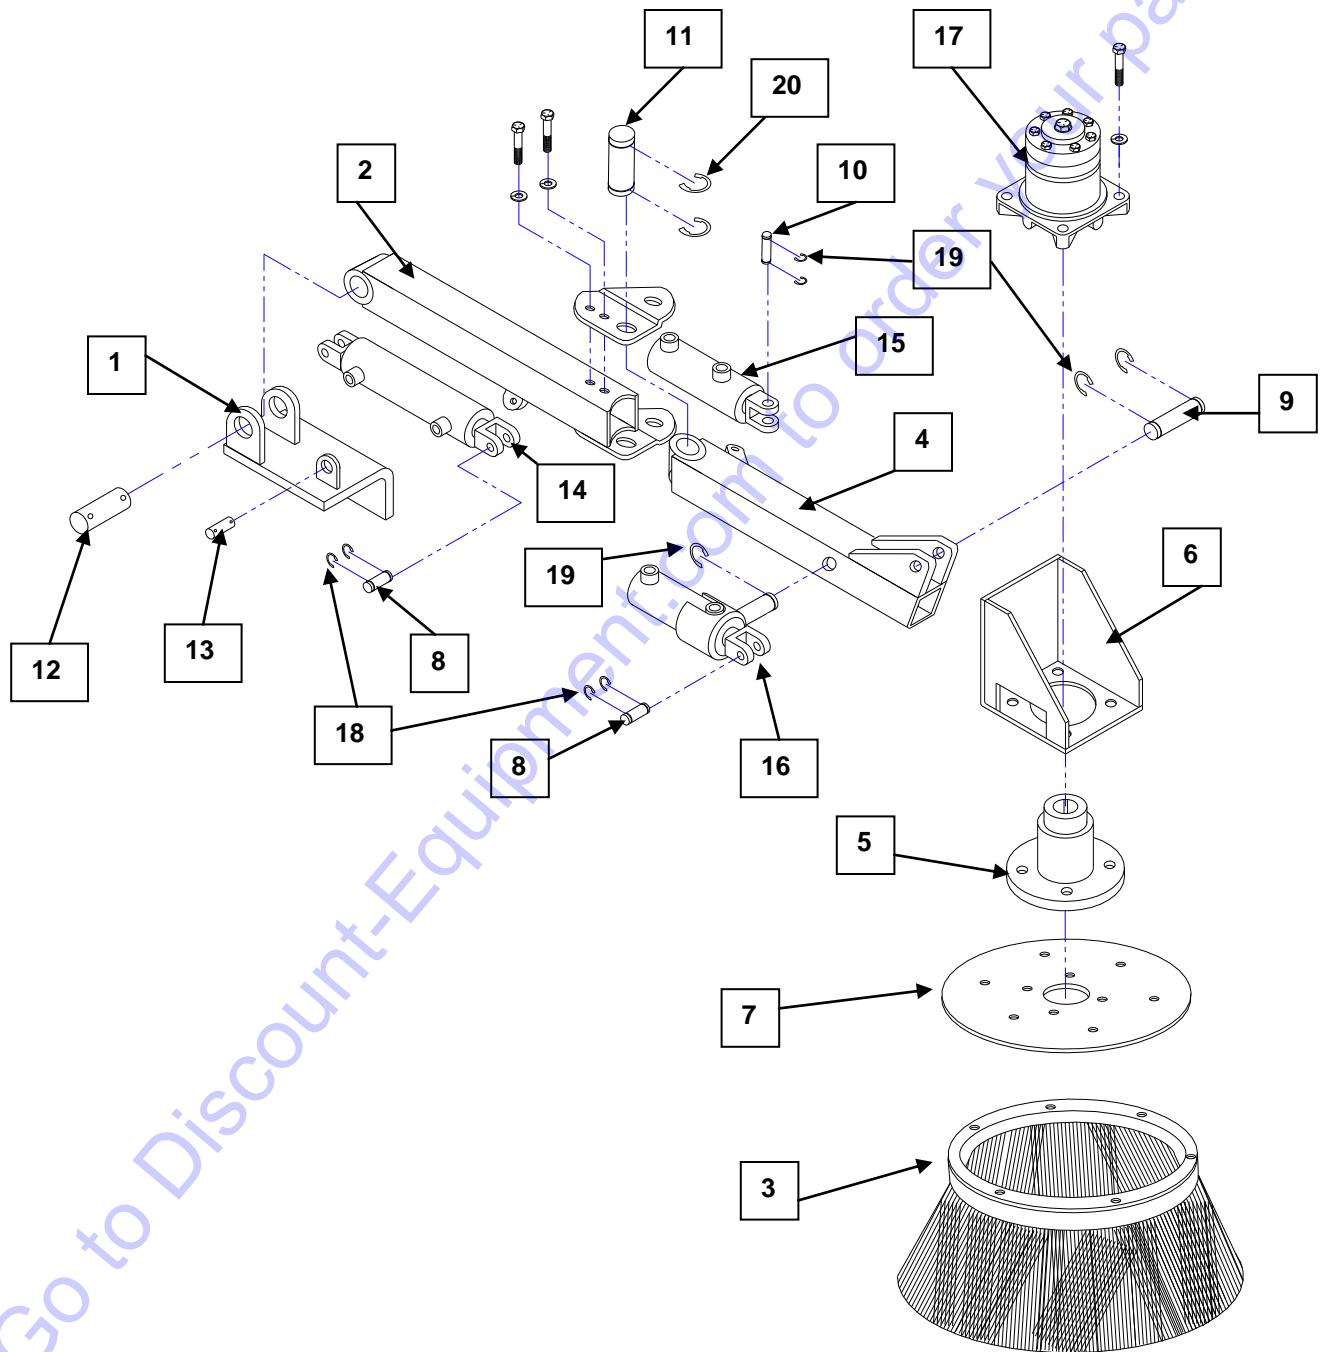


# CURB SWEeper ASSEMBLY

(Sweeper and Components)

Reference	Part No.	Description	Qty.
1.....	854005 .....	Mounting Bracket .....	1
2.....	854001 .....	Main Lift Arm.....	1
3.....	304299 .....	Curb Brush (Wire).....	1
	304296 .....	Curb Brush (Poly).....	1
4.....	854004 .....	Tilt Arm .....	1
5.....	854006 .....	Hub Ext. ....	1
6.....	854003 .....	Motor Mount Bracket.....	1
7.....	204027 .....	Broom Mounting Plate .....	1
8.....	204017 .....	Lift and Tilt Cylinder Pin .....	2
9.....	204019 .....	Motor Bracket Pin.....	1
10.....	204018 .....	Accumulator Pin .....	1
11.....	204016 .....	Pivot Pin .....	1
12.....	204005 .....	Mounting Bracket Arm Pin .....	1
13.....	204008 .....	Lift Cylinder Lower Pin .....	1
14.....	See Hydraulic .....	Lift Cylinder.....	1
	Section		
15.....	See Hydraulic .....	Spring Cylinder.....	1
	Section		
16.....	See Hydraulic .....	Tilt Cylinder .....	1
	Section		
17.....	See Hydraulic .....	Hydraulic Motor .....	1
	Section		
18.....	400910 .....	C-Clip .....	4
19.....	400911 .....	C-Clip .....	5
20.....	400912 .....	C-Clip .....	2

# CURB BROOM HYDRAULICS ASSEMBLY

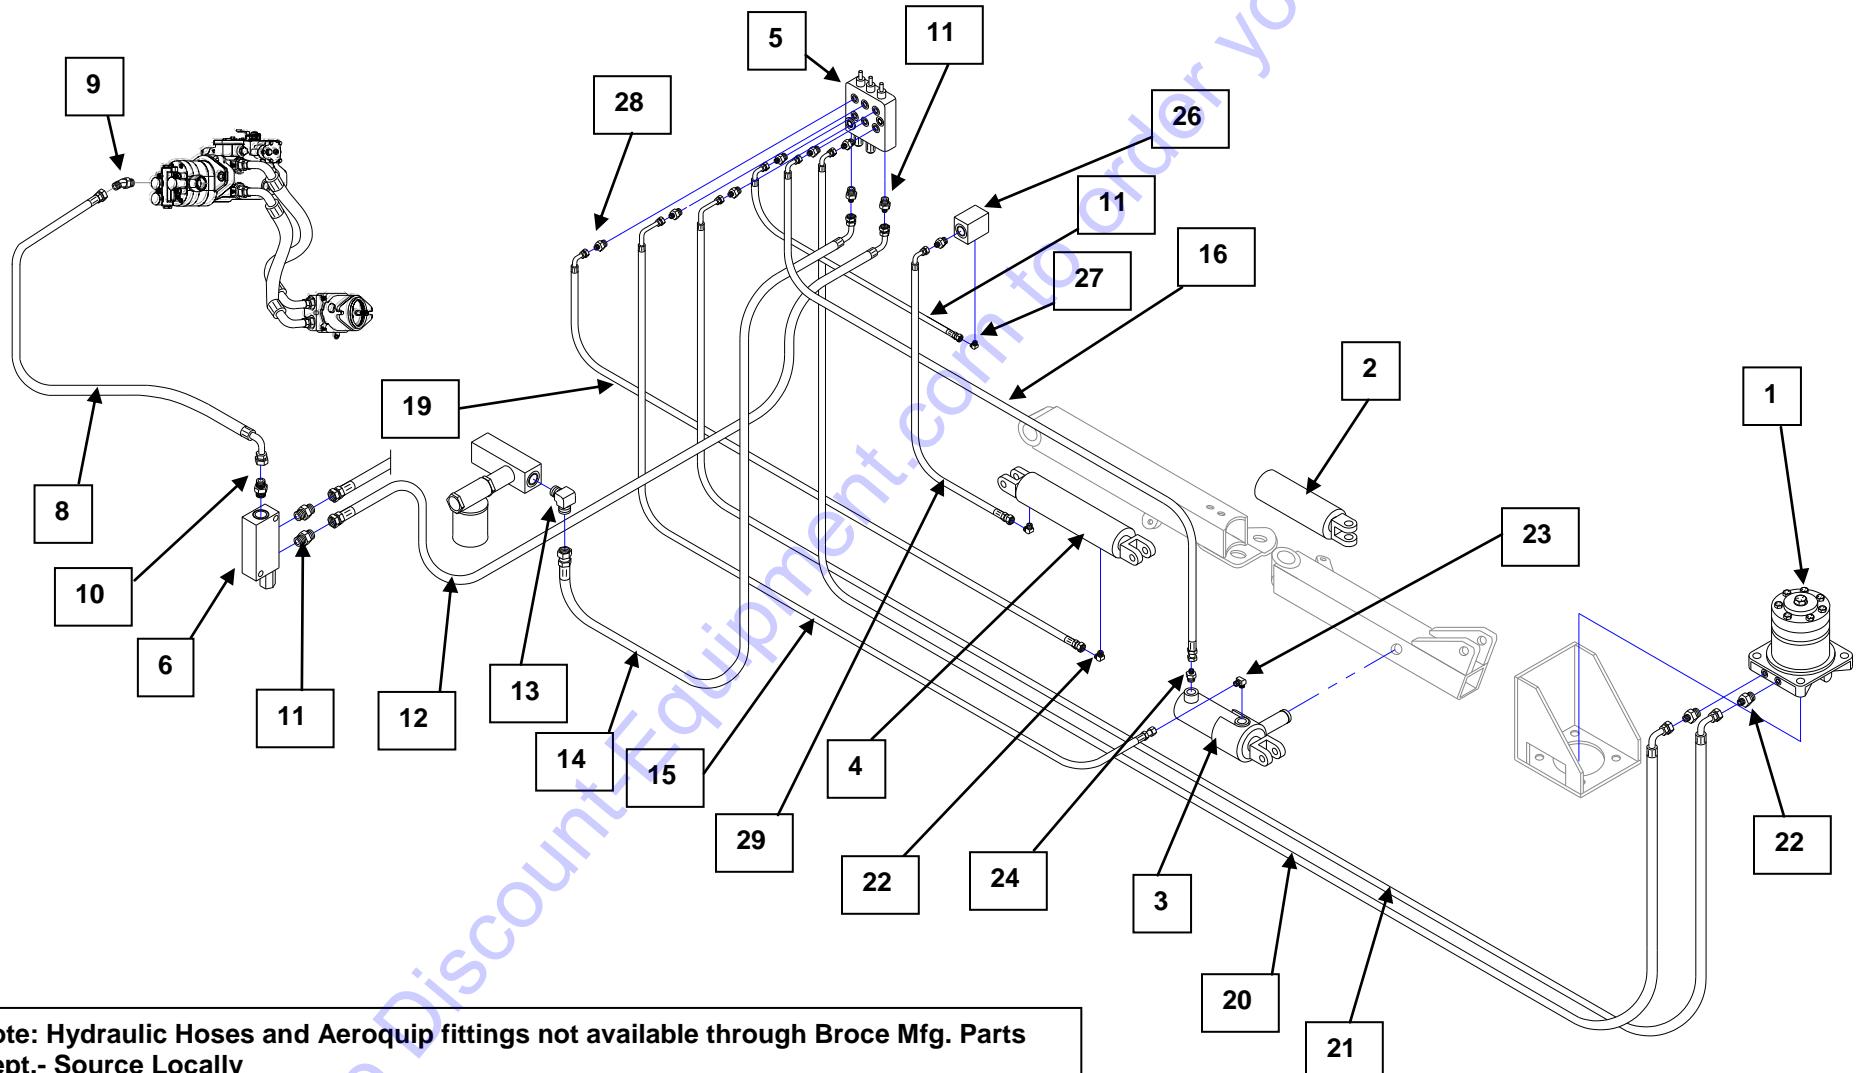

# CURB BROOM HYDRAULICS ASSEMBLY

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	305916 .....	Broom Motor .....	1
2.....	325037 .....	Spring Cylinder .....	1
3.....	305913 .....	Tilt Cylinder .....	1
4.....	305914 .....	Lift Cylinder .....	1
5.....	355032 .....	Control Valve .....	1
6.....	305917 .....	Flow Divider .....	1
8* .....	Hydraulic Hose Assembly, 16"HL-1AA12FR12 & 1AA12FRB12 ..	1	1
9* .....	Hydraulic Fitting, FF1868T12-10 .....	1	1
10* .....	Hydraulic Fitting, FF1852T12-08 .....	2	2
11* .....	Hydraulic Fitting, FF1852T06-08 .....	3	3
12* .....	Hydraulic Hose Assembly, 52.5"HL-1AA6FR6 & 1AA6FRB6 ..	1	1
13* .....	Hydraulic Fitting, FF1868T06-125 .....	1	1
14* .....	Hydraulic Hose Assembly, 32"HL-1AA6FR6 & 1AA6FRB6 ..	1	1
15* .....	Hydraulic Hose Assembly, 81"HL-1AA4FRC4 & 1AA4FR4 ..	1	1
16* .....	Hydraulic Hose Assembly, 75.5"HL-1AAFR4 & 1AA6FRB4 ..	1	1
19* .....	Hydraulic Hose Assembly, 68"HL-1AA4FR4 & 1AA4FRB4 ..	1	1
20* .....	Hydraulic Hose Assembly, 89"HL-1AA6FRB6 (2) .....	1	1
21* .....	Hydraulic Hose Assembly, 91"HL-1AA6FRC6 & 1AA6FRB6 ..	1	1
23* .....	Hydraulic Fitting, FF1868T04-04 .....	4	4
24* .....	Hydraulic Fitting, FF1852T04-04 .....	1	1
26.....	305763 .....	Solenoid Valve .....	1
27* .....	Hydraulic Fitting, FF1868T04-06 .....	1	1
28* .....	Hydraulic Fitting, FF185204-08 .....	5	5
29* .....	Hydraulic Hose Assembly, 59"HL-1AA4FR4 & 1AA4FRB4 ..	1	1


\*Note: Hydraulic Hoses and Aeroquip fittings not available through Broce Mfg. Parts Dept.- Source Locally

Go to Discount-Equipment.com for parts

## **ENGINES AND RELATED PARTS**

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts


**RCT-350 EXPORT**  
**Engine**

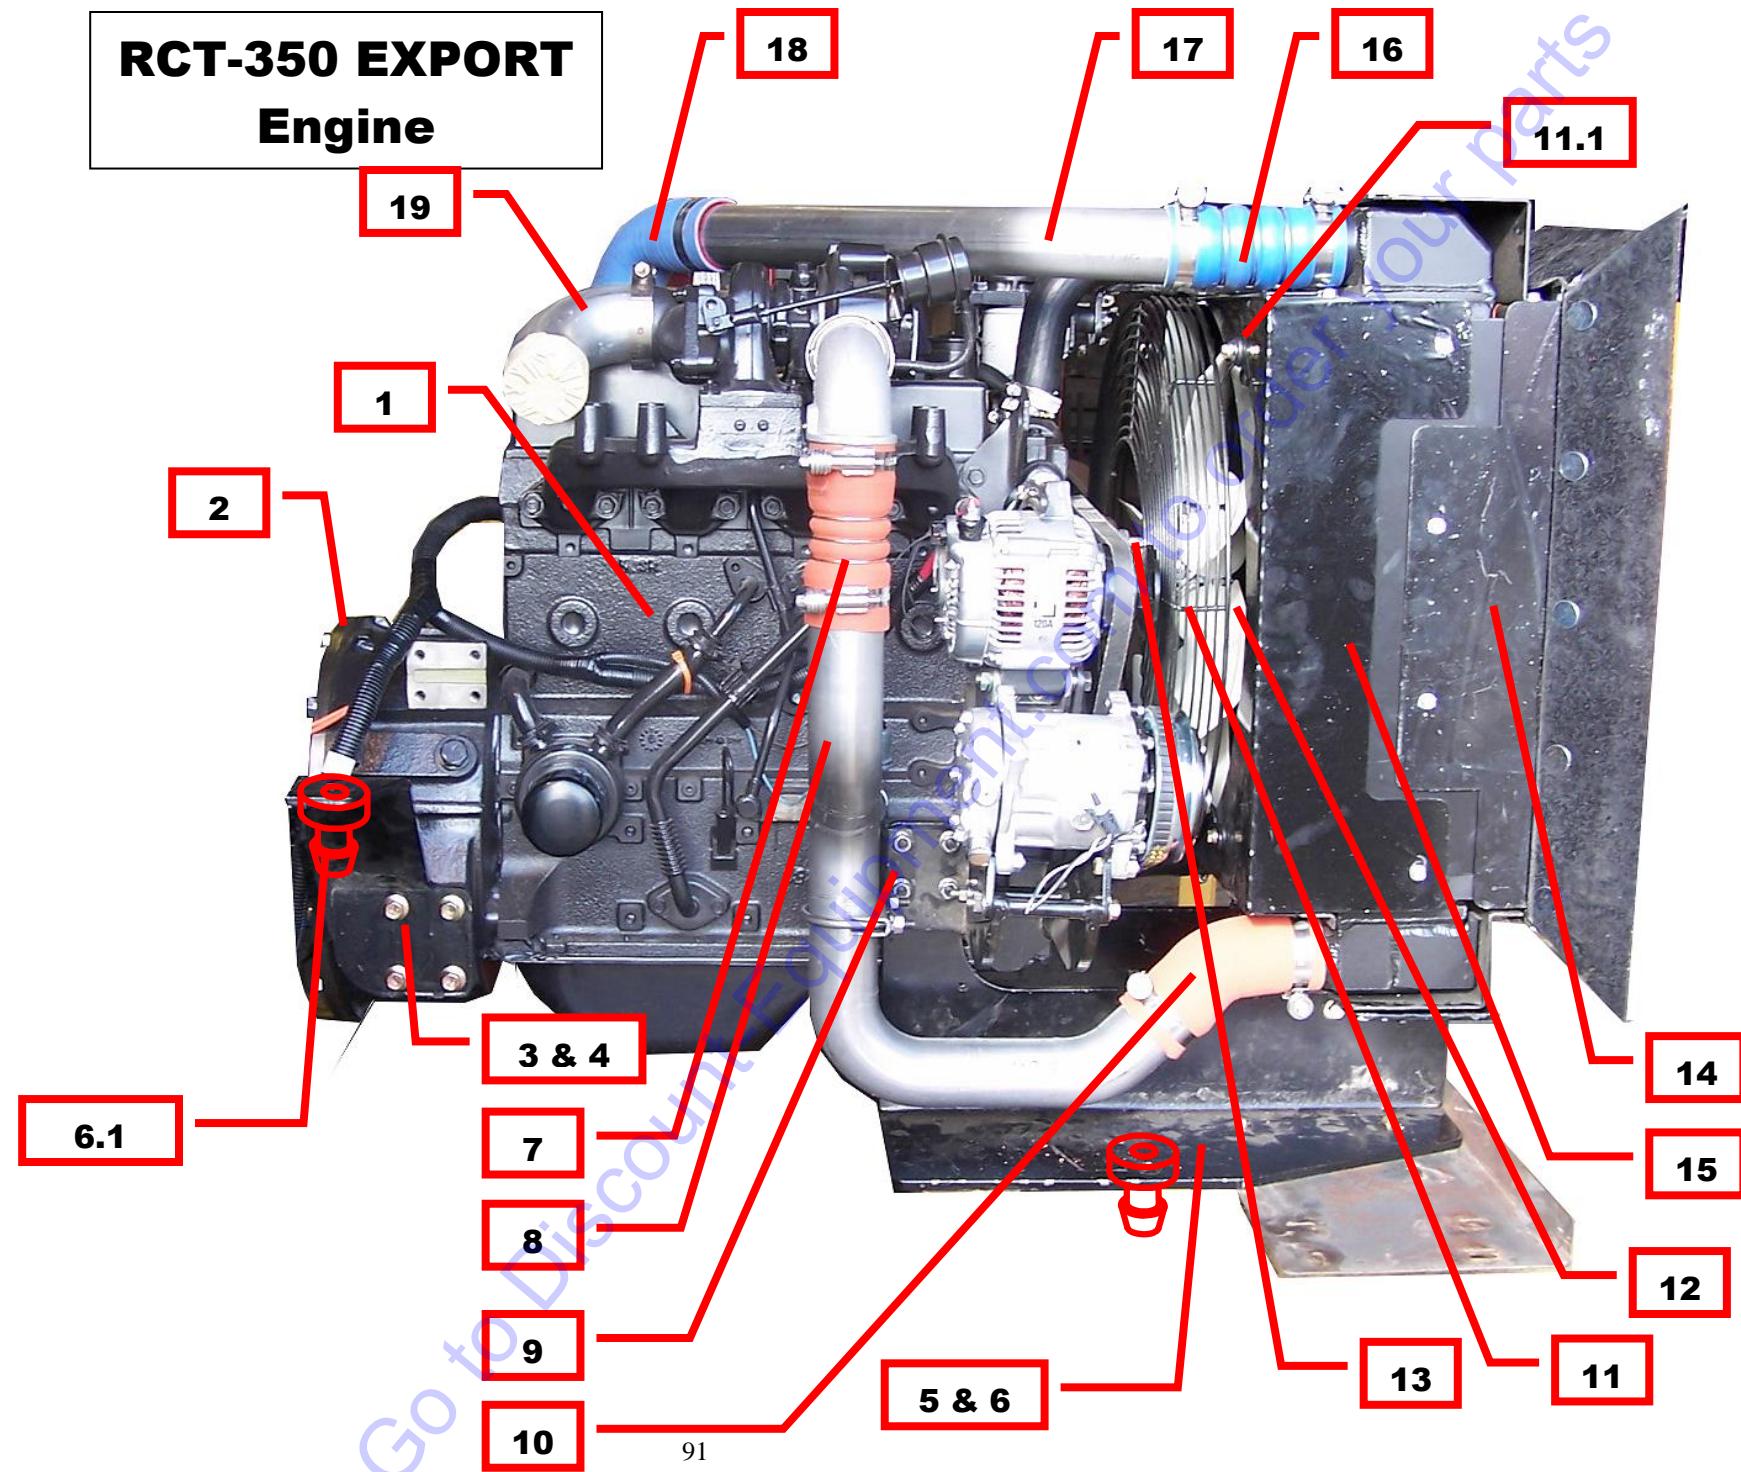

## RCT-350 EXPORT ENGINE AND RELATED PARTS

Reference	Part No.	Description	Qty.
1 .....	344054 .....	Cummins Diesel Engine .....	1
2 .....	344053 .....	Pump Drive (Complete) .....	1
3 .....	203643 .....	Right Rear Motor Mount .....	1
4 .....	203644 .....	Left Rear Motor Mount.....	1
5 .....	203641 .....	Right Front Motor Mount .....	1
6 .....	203642 .....	Left Front Motor Mount .....	1
6.1 .....	CM-714-B .....	Motor Mount Rubber Isolators.....	4
7 .....	203656 .....	Silicone Hose Air-to-Air.....	1
8 .....	203661 .....	Charge Air Tube .....	1
9 .....	203671 .....	Support for Pressure Tube .....	1
10 .....	203657 .....	Silicone Hose w/Bend Air-to-Air.....	1
11 .....	203665 .....	Fan Guard .....	1
11.1 .....	304097 .....	Fan Guard Rubber Isolators .....	4
12 .....	203650 .....	Cummins Fan .....	1
13 .....	203649 .....	Fan Spacer .....	1
14 .....	203653 .....	Supports for Air Duct Frame.....	1
15 .....	203651 .....	Radiator Shroud .....	1
16 .....	203658 .....	Silicone Hose Air-to-Air.....	1
17 .....	203662 .....	Charge Air Return Tube .....	1
18 .....	203659 .....	Air-to-Air 45 degree Hose.....	1
19 .....	344405 .....	Exhaust Elbow.....	1


## RCT-350 EXPORT Engine, cont'd

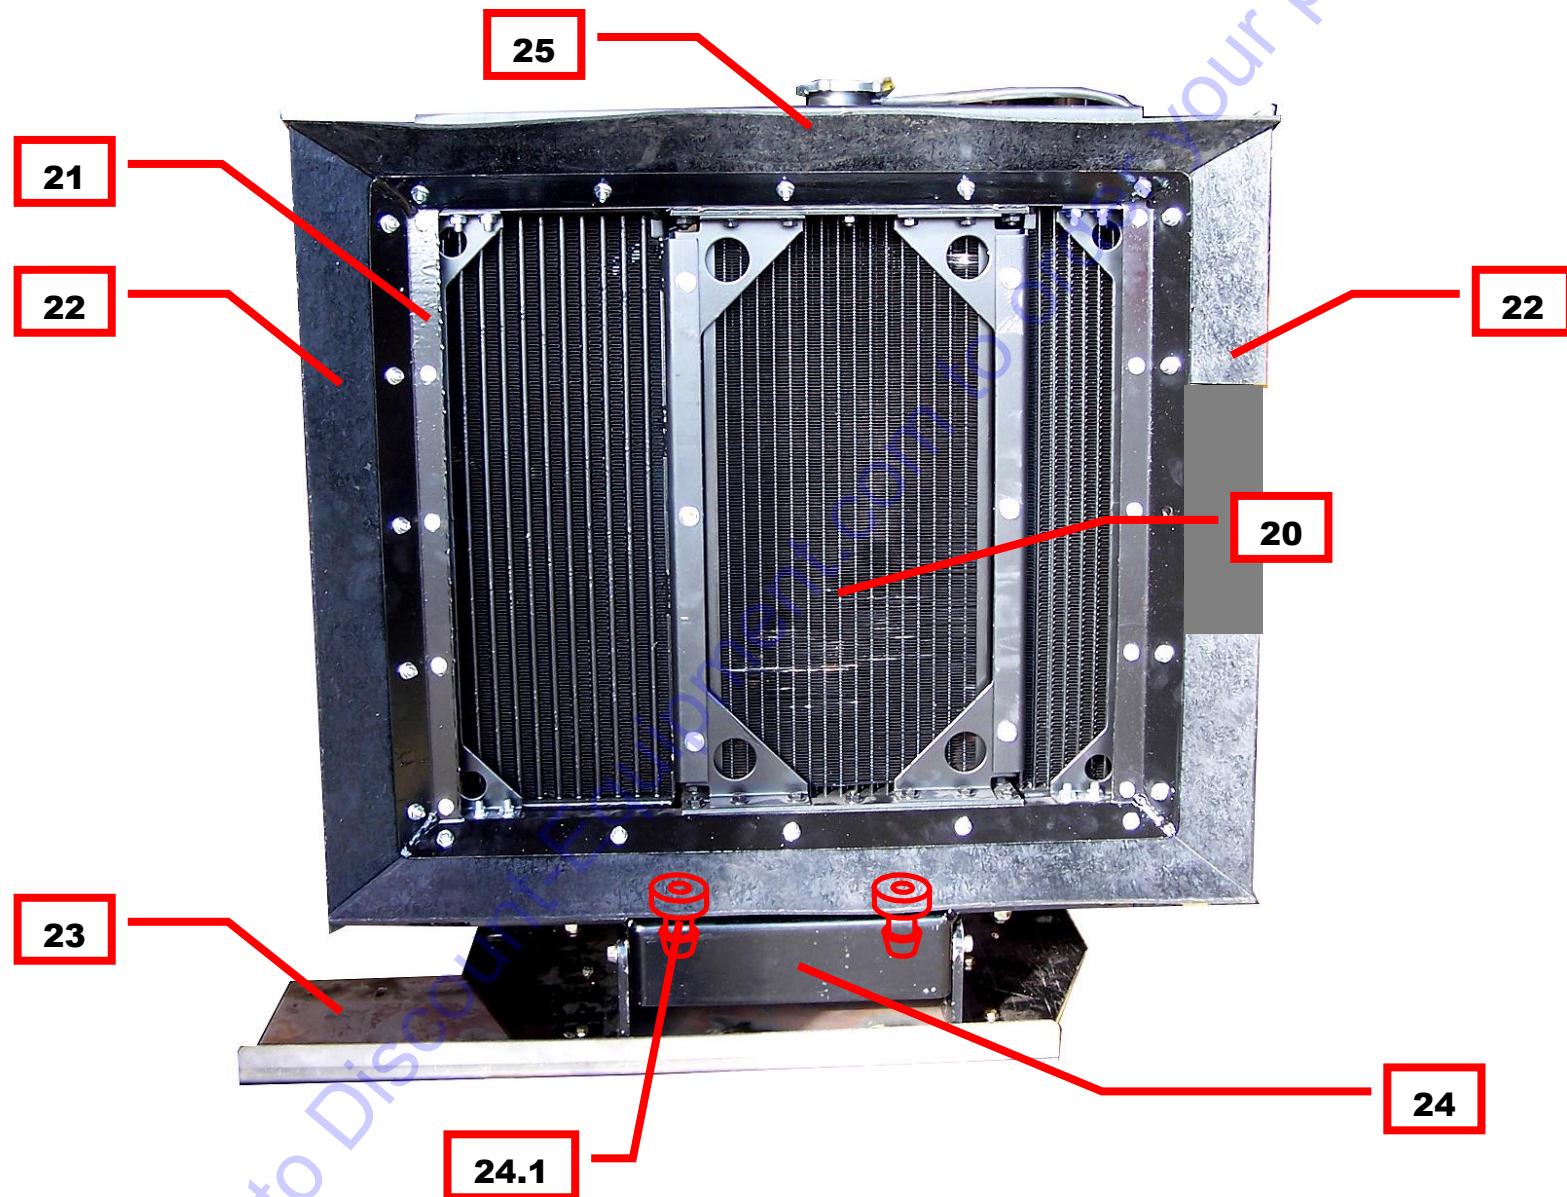

## RCT-350 EXPORT ENGINE AND RELATED PARTS


Reference	Part No.	Description	Qty.
20 .....	344054 .....	Radiator/Oil/Charge Air Cooler Assembly.....	1
21 .....	203652.....	Air Duct Frame .....	1
22 .....	203185.....	Left & Right Air Duct Seals .....	2
23 .....	203105.....	Exhaust Heat Shield .....	1
24 .....	203645.....	Bottom Radiator Support .....	1
24.1 .....	344121.....	Bottom Radiator Rubber Isolators .....	2
25 .....	203190.....	Upper & Lower Air Duct Seals .....	2

## RCT-350 EXPORT Engine, cont'd

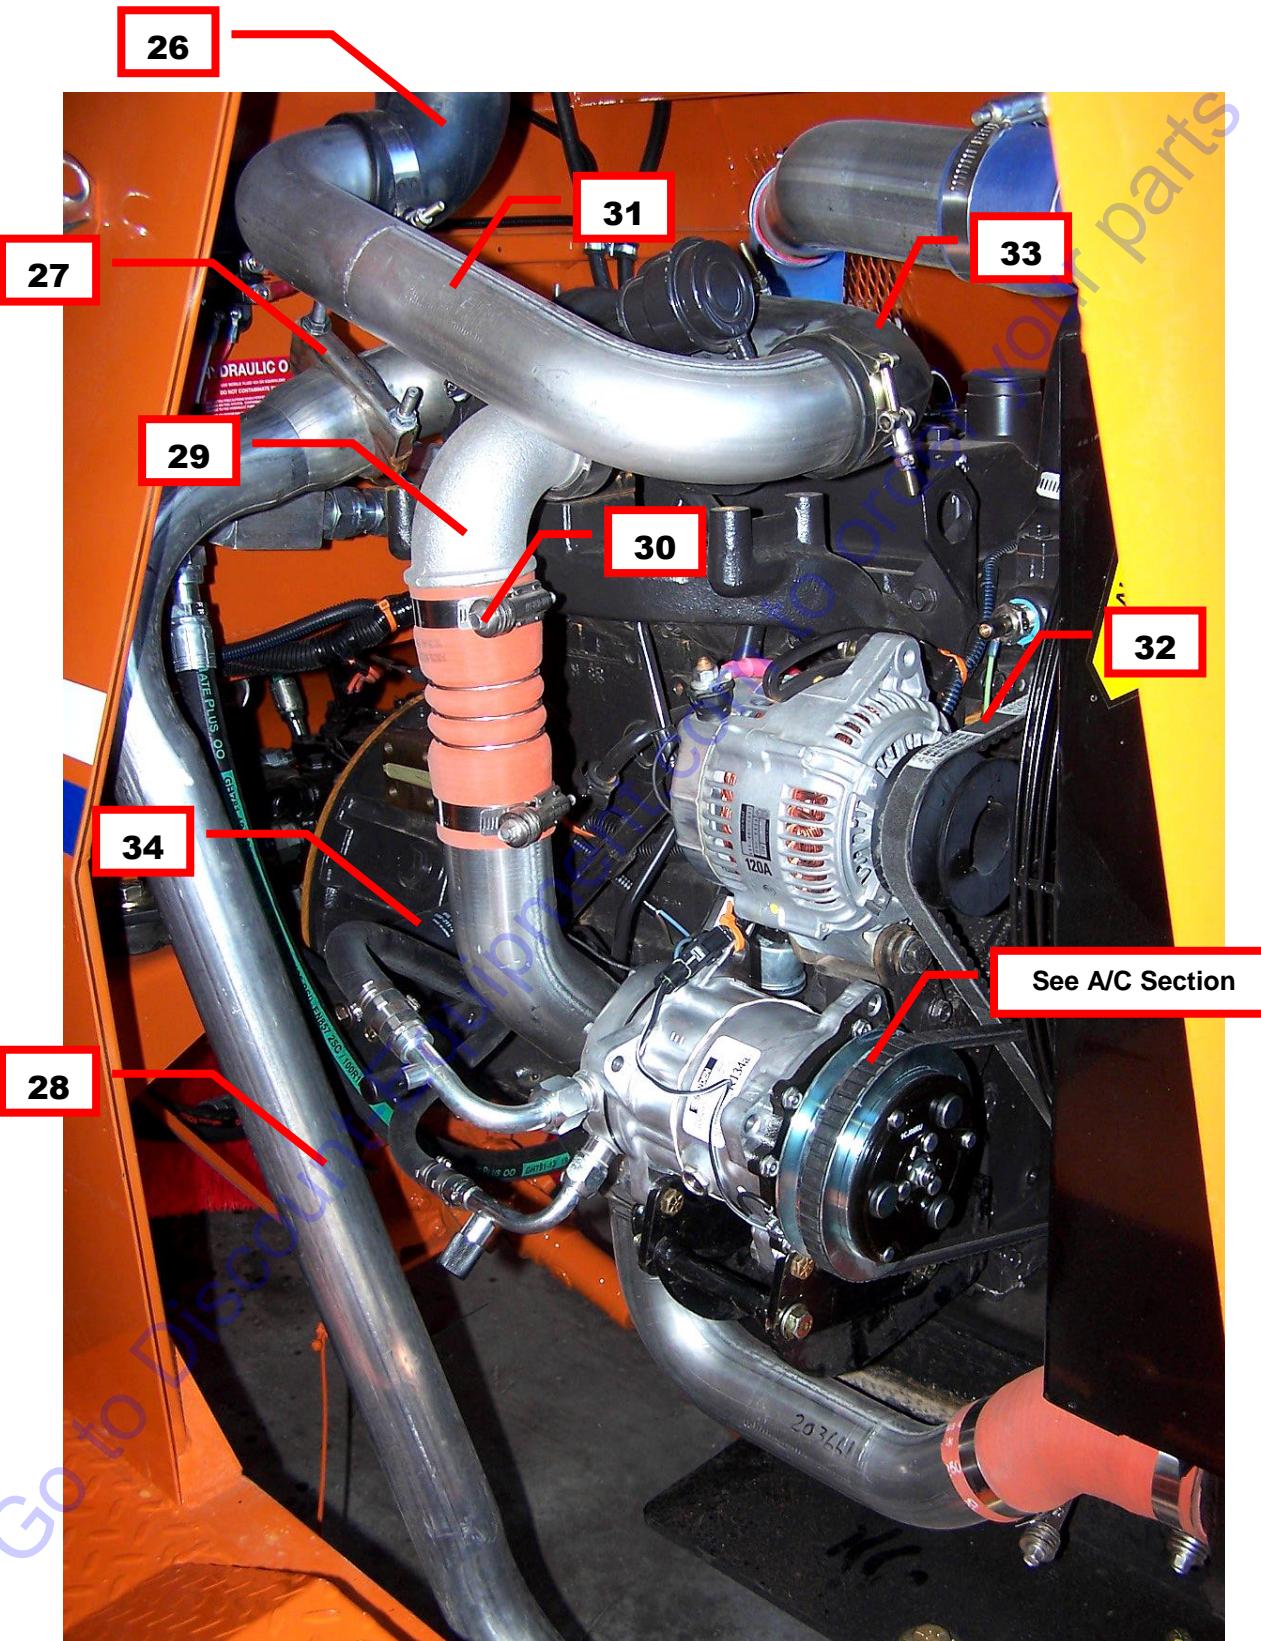


## RCT-350 EXPORT ENGINE cont'd

Reference	Part No.	Description	Qty.
26	304106	Rubber Elbow (3 x 2.5").....	1
27	JE-758-B	Head Pipe Clamp.....	1
28	203663	Exhaust Pipe .....	1
Not Shown	344040	Tail Pipe .....	1
Not Shown	JE-705-B	Muffler .....	1
Not Shown	852110	Muffler Clamp .....	2
29	203622	Elbow, Steel 3" .....	1
30	203673	Air-to-Air Hose Clamps .....	8
31	203660	Connecting Tube.....	1
32	344407	Fan Belt.....	1
33	304070	Rubber Elbow (3" x 2.5" L) .....	1
34	344408	Oil Filter .....	1
35	203670	Solenoid.....	1
36	203666	Air Heat Plate.....	1
37	203668	Fuse.....	1
38	203669	Fuse Holder .....	1
39	203667	Air Heat Wiring Harness.....	1

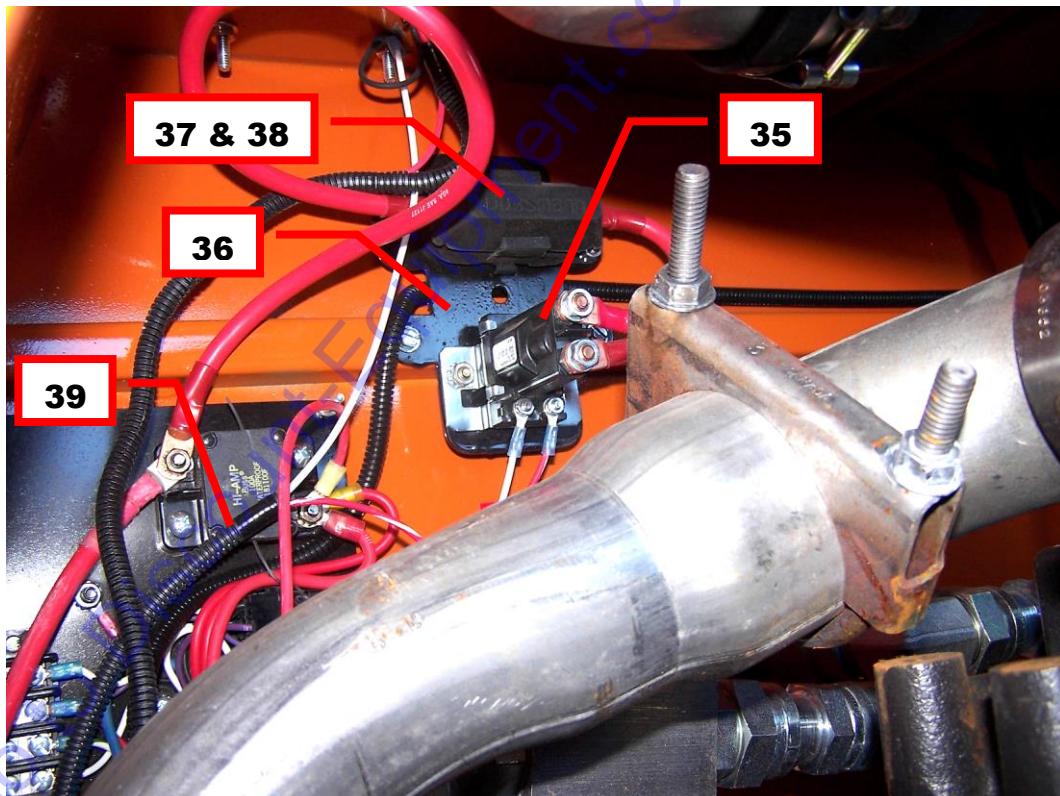


## RCT-350 EXPORT Engine, cont'd

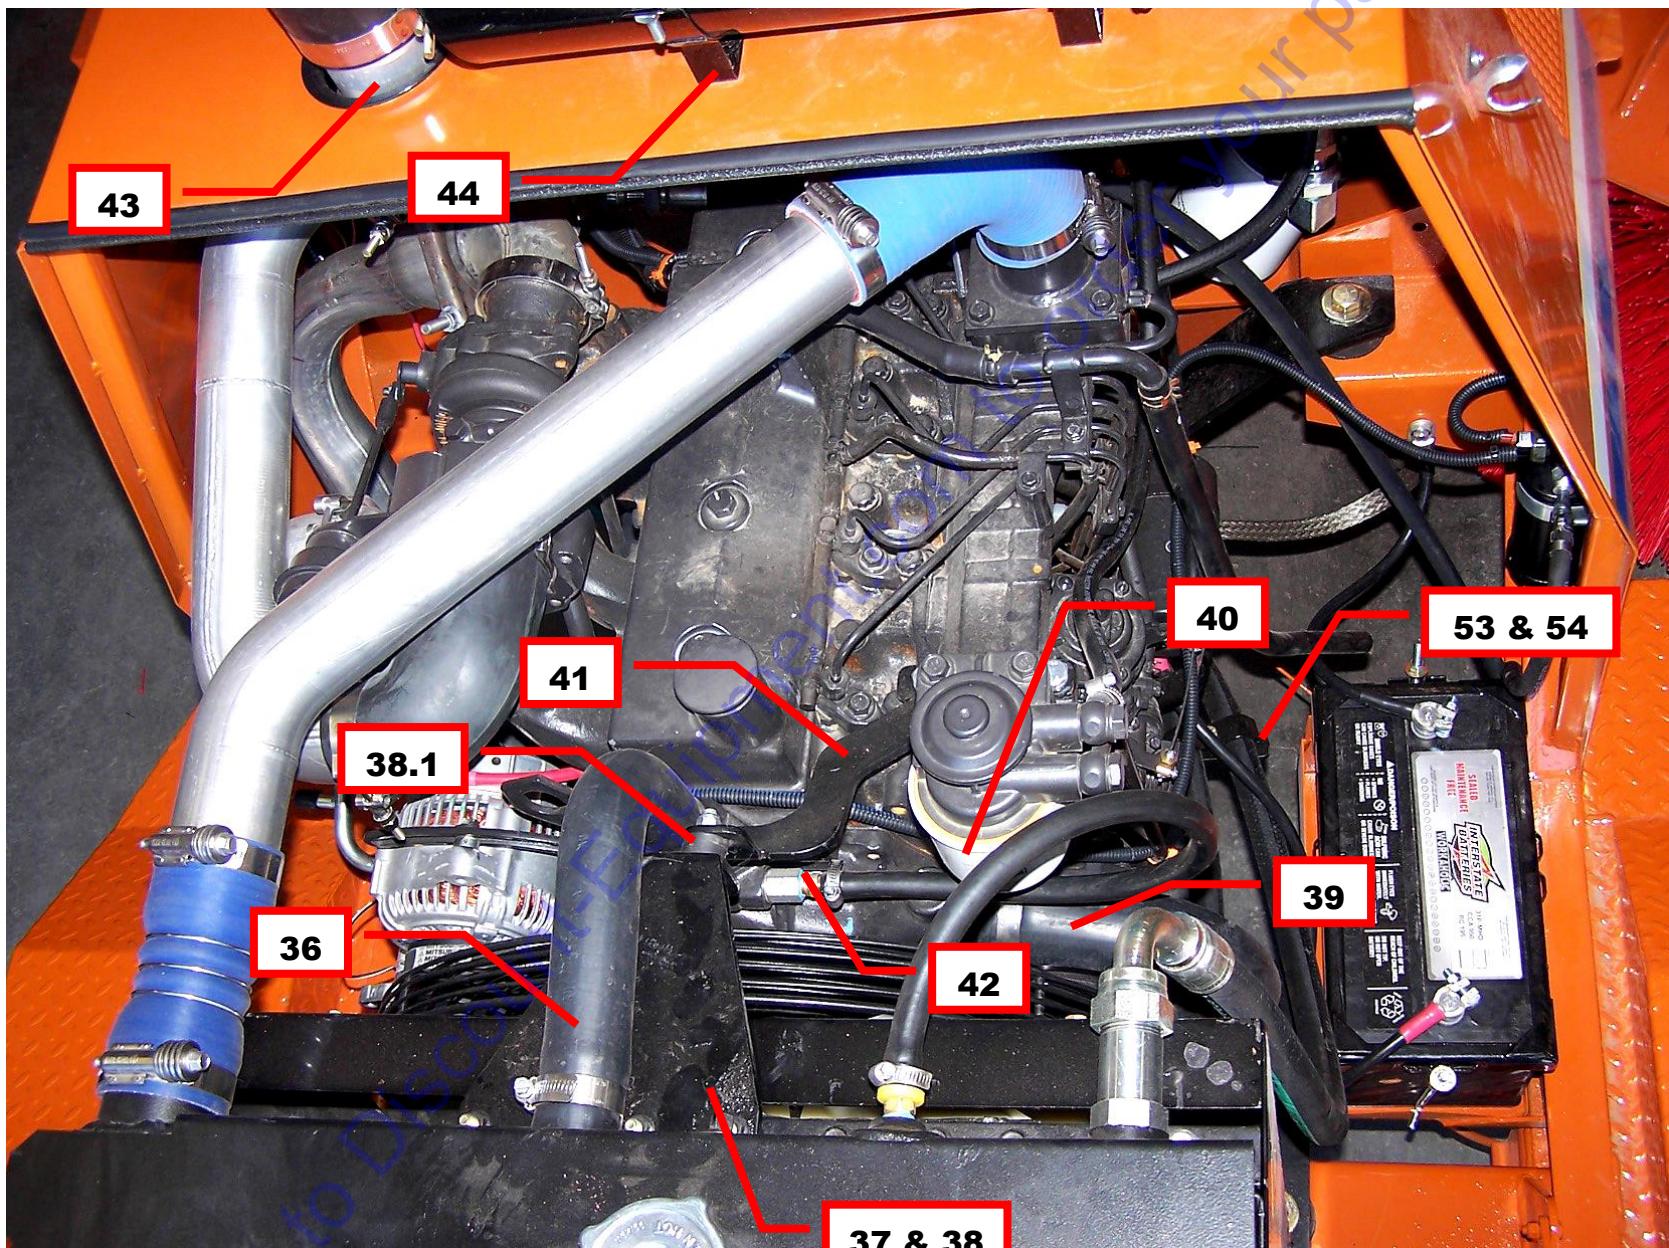


## RCT-350 EXPORT ENGINE cont'd

Reference	Part No.	Description	Qty.
36.....	203654.....	Upper Radiator Hose .....	1
37.....	203647.....	Upper Radiator Support .....	1
38.....	203664.....	Upper Radiator Support Spacer .....	1
38.1.....	304096.....	Upper Radiator Rubber Isolator .....	1
39.....	203309.....	Lower Radiator Hose .....	1
40.....	344406.....	Fuel Filter .....	1
41.....	203648.....	Radiator to Engine Support.....	1
42.....	203678.....	Vent Line Fitting .....	1
43.....	AC-763-R.....	Connecting Tube (short) .....	1
44.....	AC-764-R.....	Strap .....	2
45.....	P103113 .....	Cup .....	1
46.....	P102980 .....	Air Cleaner Baffle .....	1
47.....	TT-771-R .....	Turbo II Precleaner .....	1
48.....	304059.....	Enginair Precleaner .....	1
	304063.....	Sy-Klone Precleaner .....	1
49.....	DE-770-R.....	Air Cleaner (Dual Element).....	1
50.....	P119410 .....	Safety Element .....	1
51.....	P182059 .....	Service Element .....	1
52.....	P003951 .....	Clamp .....	1
53.....	203676.....	Hose Guide .....	1
54.....	P003951 .....	Hose guide Spacer .....	1

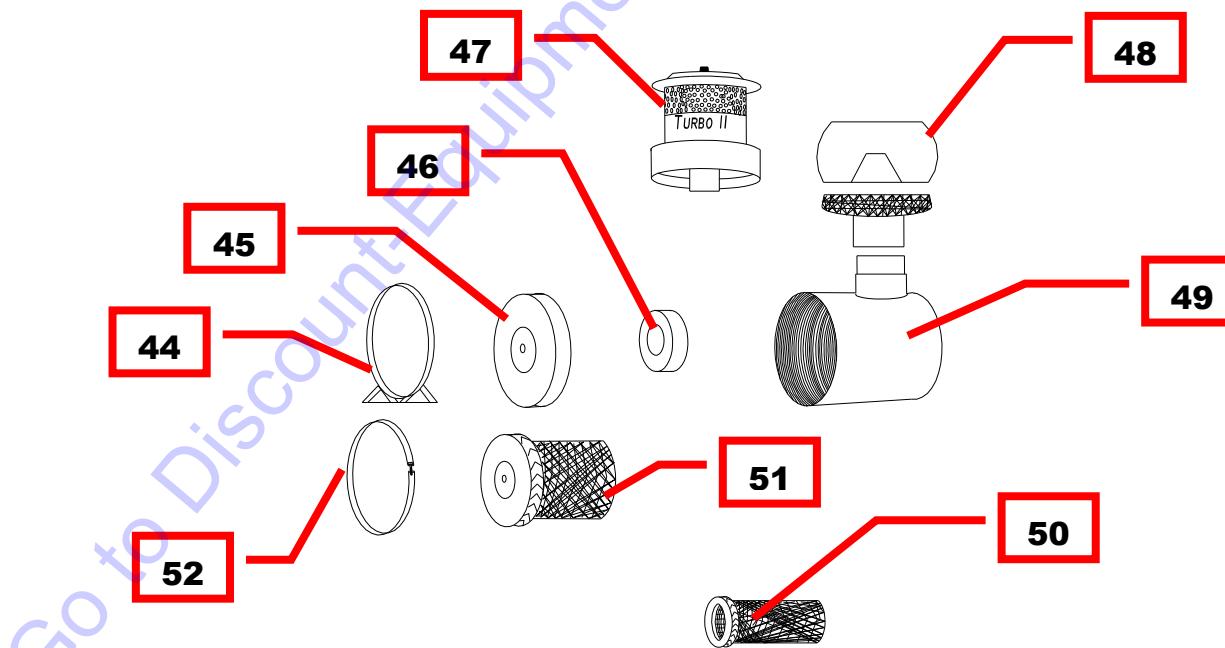


## RCT-350 Tier 4i Engine

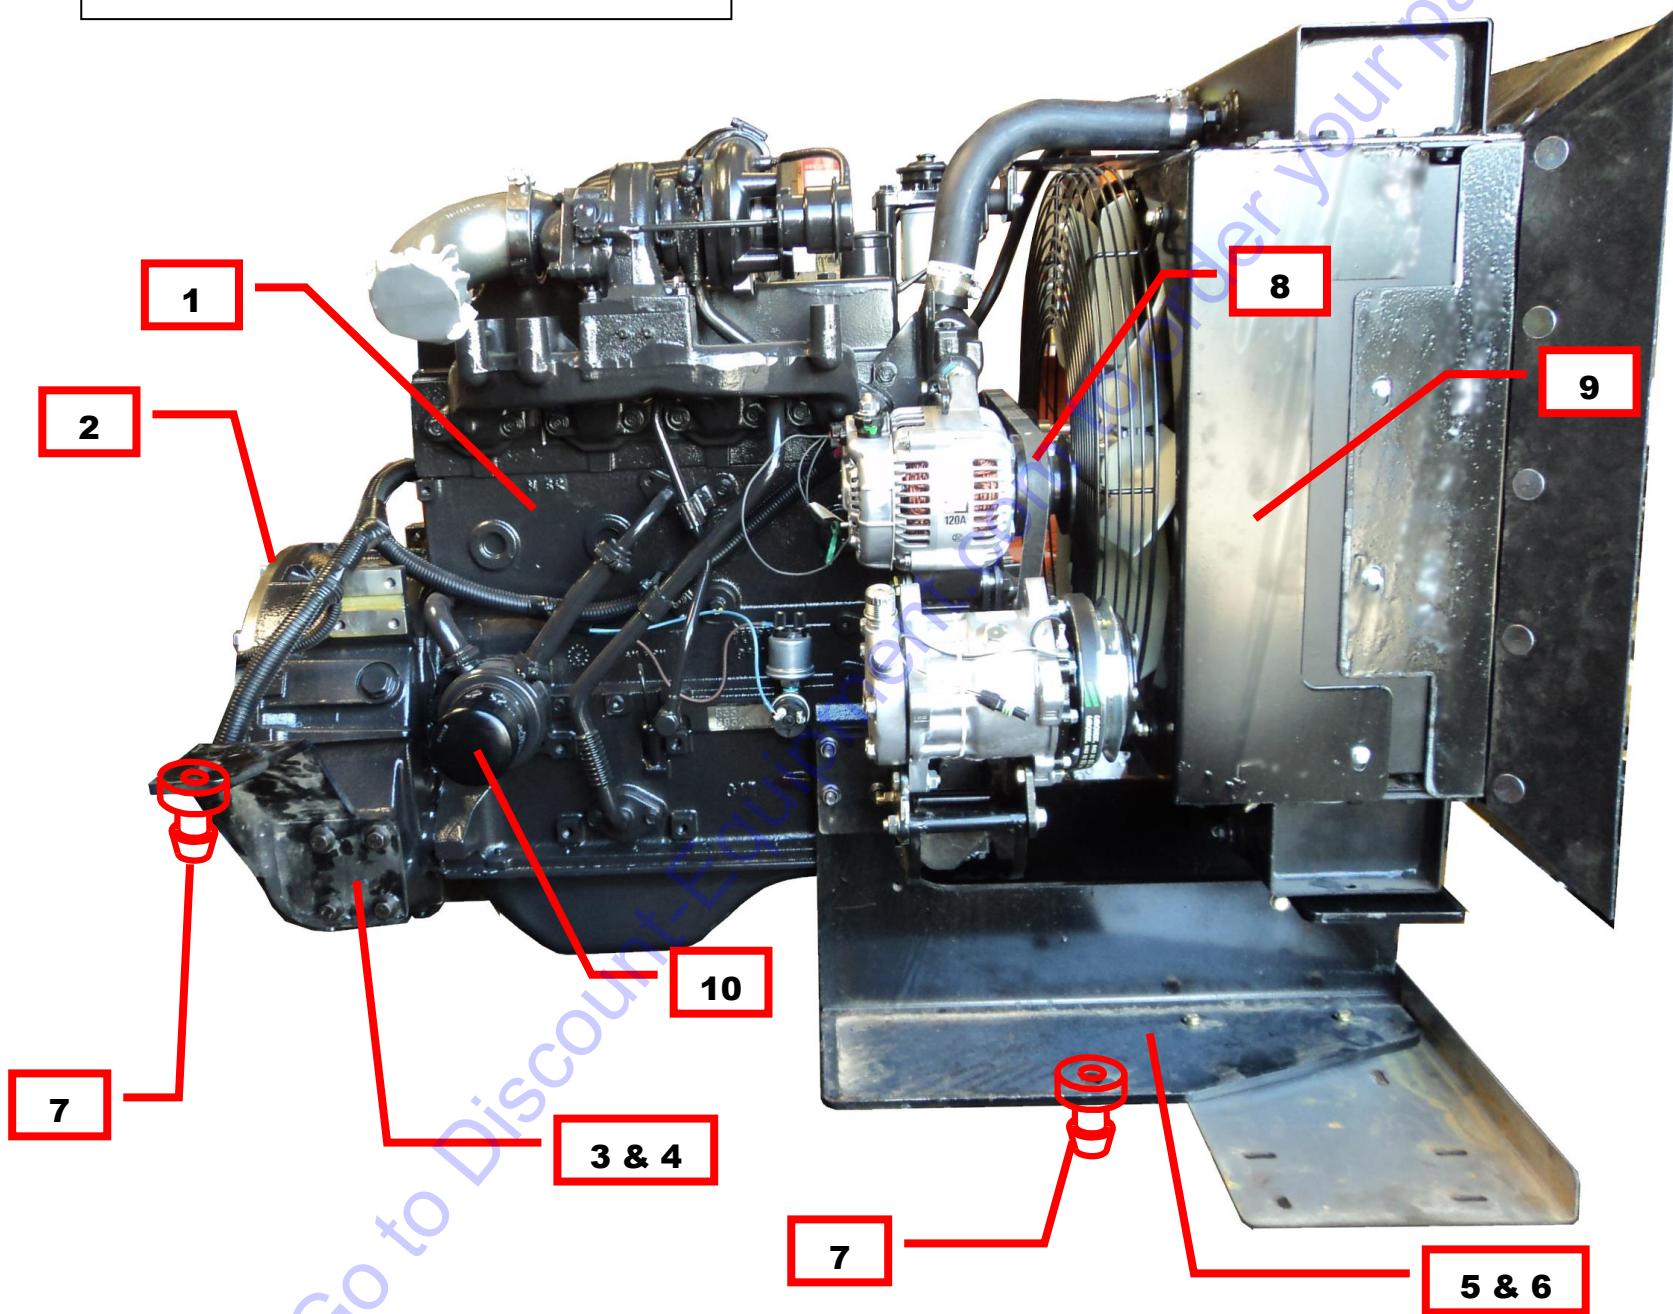

## RCT-350 TIER 4i ENGINE AND RELATED PARTS

Reference	Part No.	Description	Qty.
1 .....	344059 .....	Cummins Diesel Engine .....	1
2 .....	344053 .....	Pump Drive (Complete) .....	1
3 .....	203643 .....	Right Rear Motor Mount .....	1
4 .....	203644 .....	Left Rear Motor Mount .....	1
5 .....	203641 .....	Right Front Motor Mount .....	1
6 .....	203642 .....	Left Front Motor Mount .....	1
7 .....	CM-714-B .....	Motor Mount Rubber Isolators .....	4
8 .....	344407 .....	Fan Belt .....	1
9 .....	203681 .....	Radiator Shroud .....	1
10 .....	344408 .....	Oil Filter .....	1


## RCT-350 Tier4i Engine

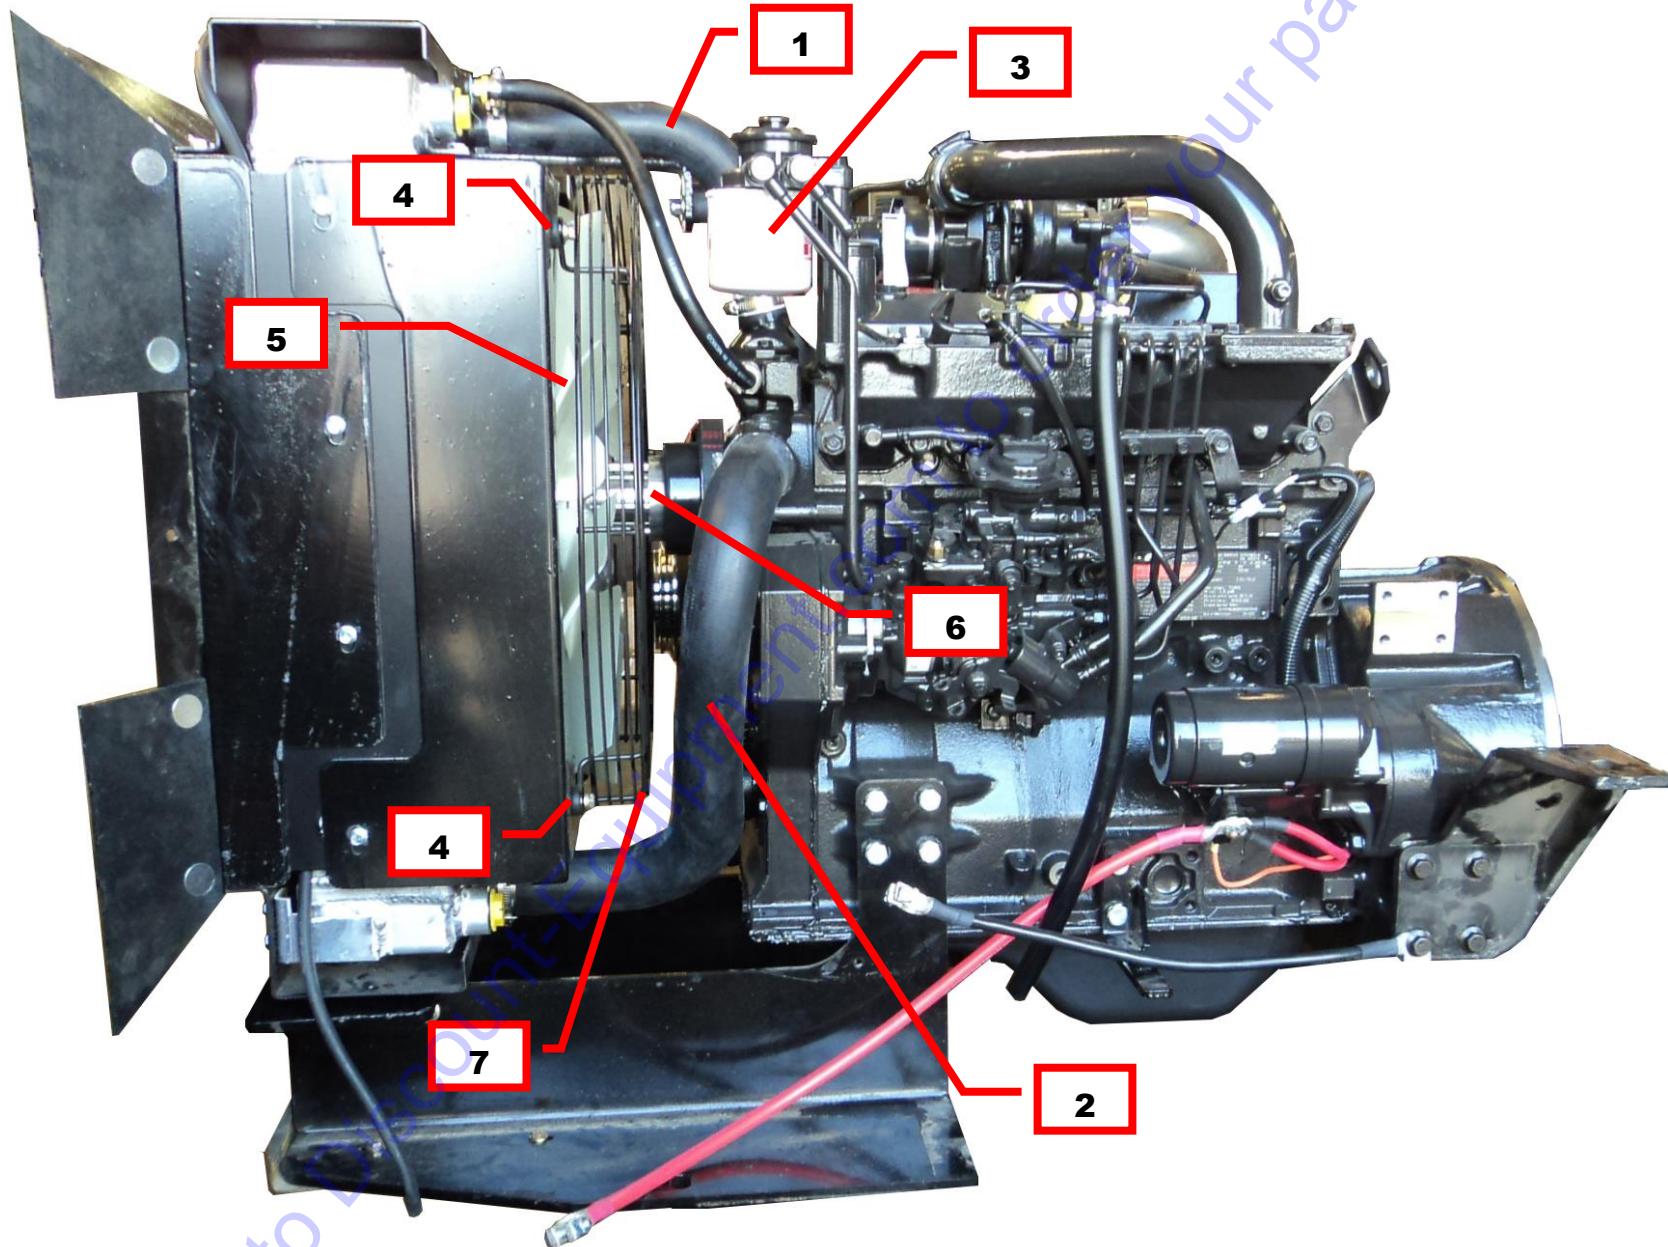

## RCT-350 TIER 4i

Reference	Part No.	Description	Qty.
1 .....	203654.....	Upper Radiator Hose .....	1
2 .....	203309.....	Lower Radiator Hose .....	1
3 .....	344406.....	Fuel Filter .....	1
4 .....	304097.....	Fan Guard Rubber Isolators .....	4
5 .....	203650.....	Cummins Fan .....	1
6 .....	203649.....	Fan Spacer .....	1
7 .....	203665.....	Fan Guard .....	1


## RCT-350 Tier4i Engine, cont'd

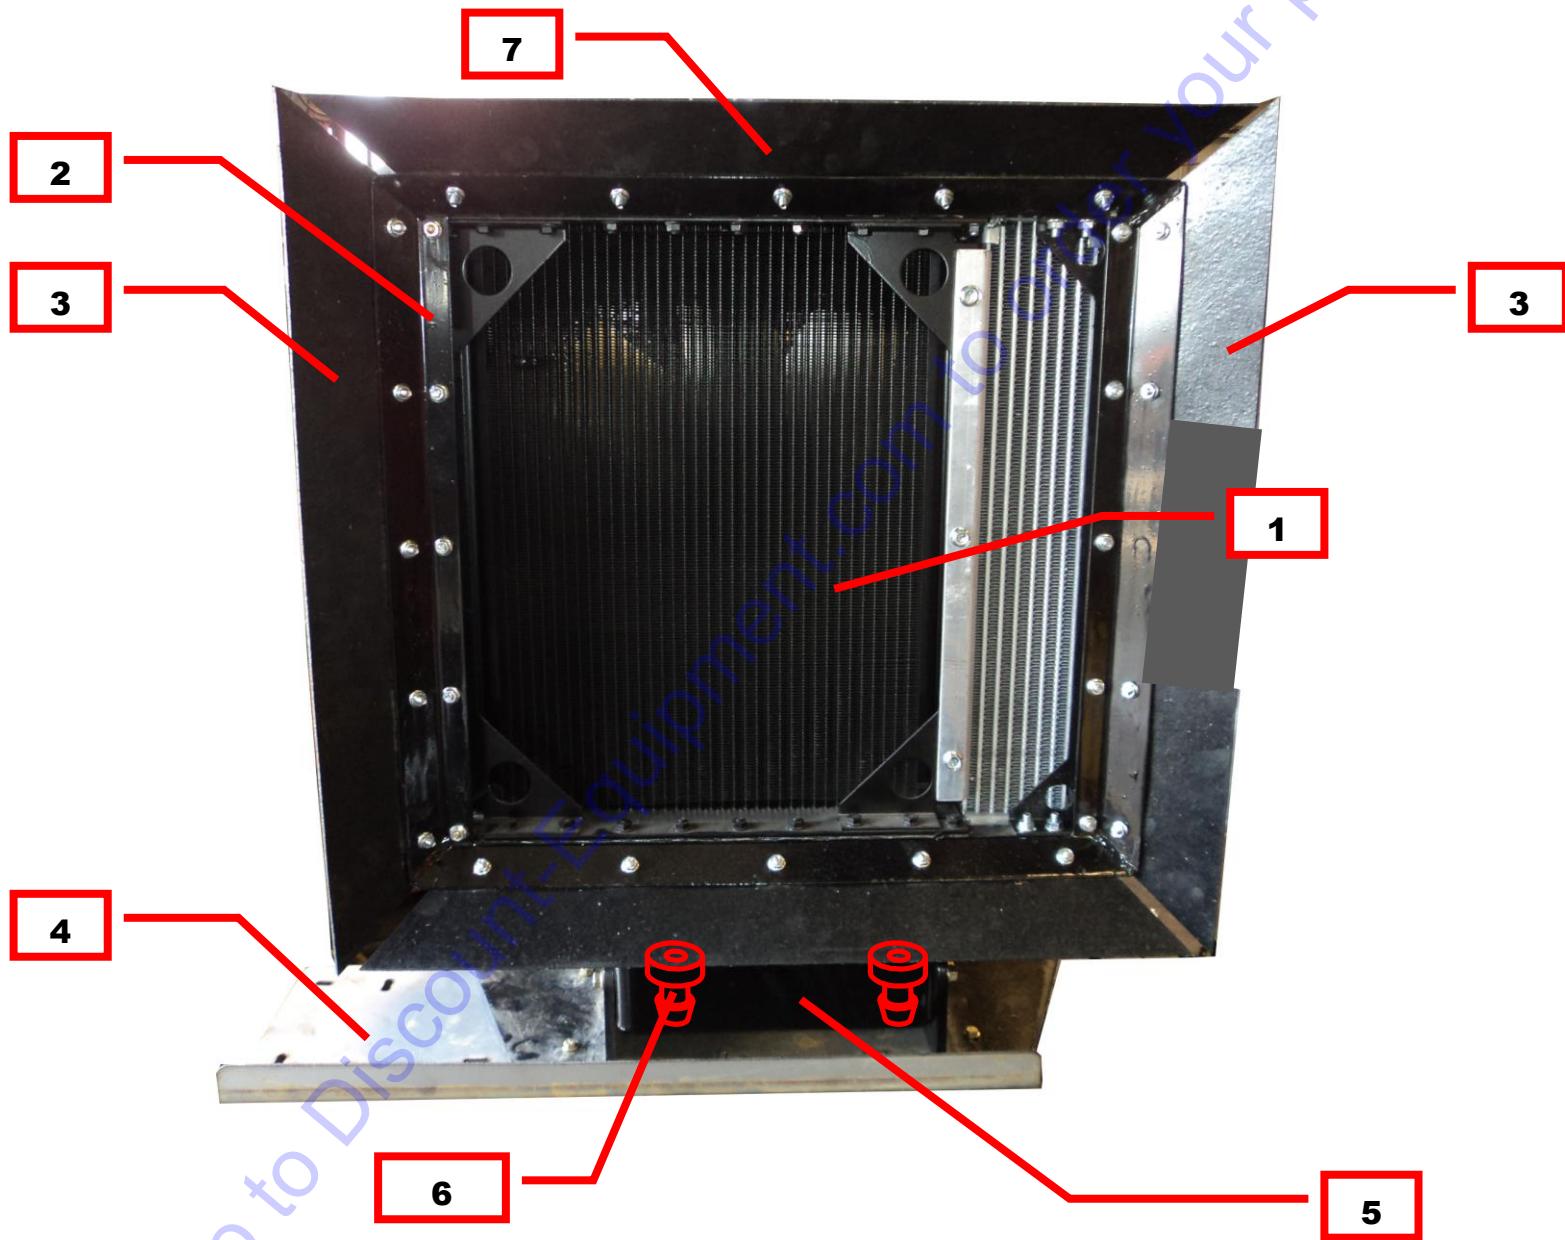

## RCT-350 TIER 4i


Reference	Part No.	Description	Qty.
1 .....	203683.....	Radiator/Oil Cooler Assembly .....	1
2 .....	203682.....	Air Duct Frame .....	1
3 .....	203478.....	Left & Right Air Duct Seals .....	2
4 .....	203105.....	Exhaust Heat Shield .....	1
5 .....	203645.....	Bottom Radiator Support .....	1
6 .....	344121.....	Bottom Radiator Rubber Isolators .....	2
7 .....	203686.....	Upper & Lower Air Duct Seals .....	2

## RCT-350 Tier 4i Engine, cont'd

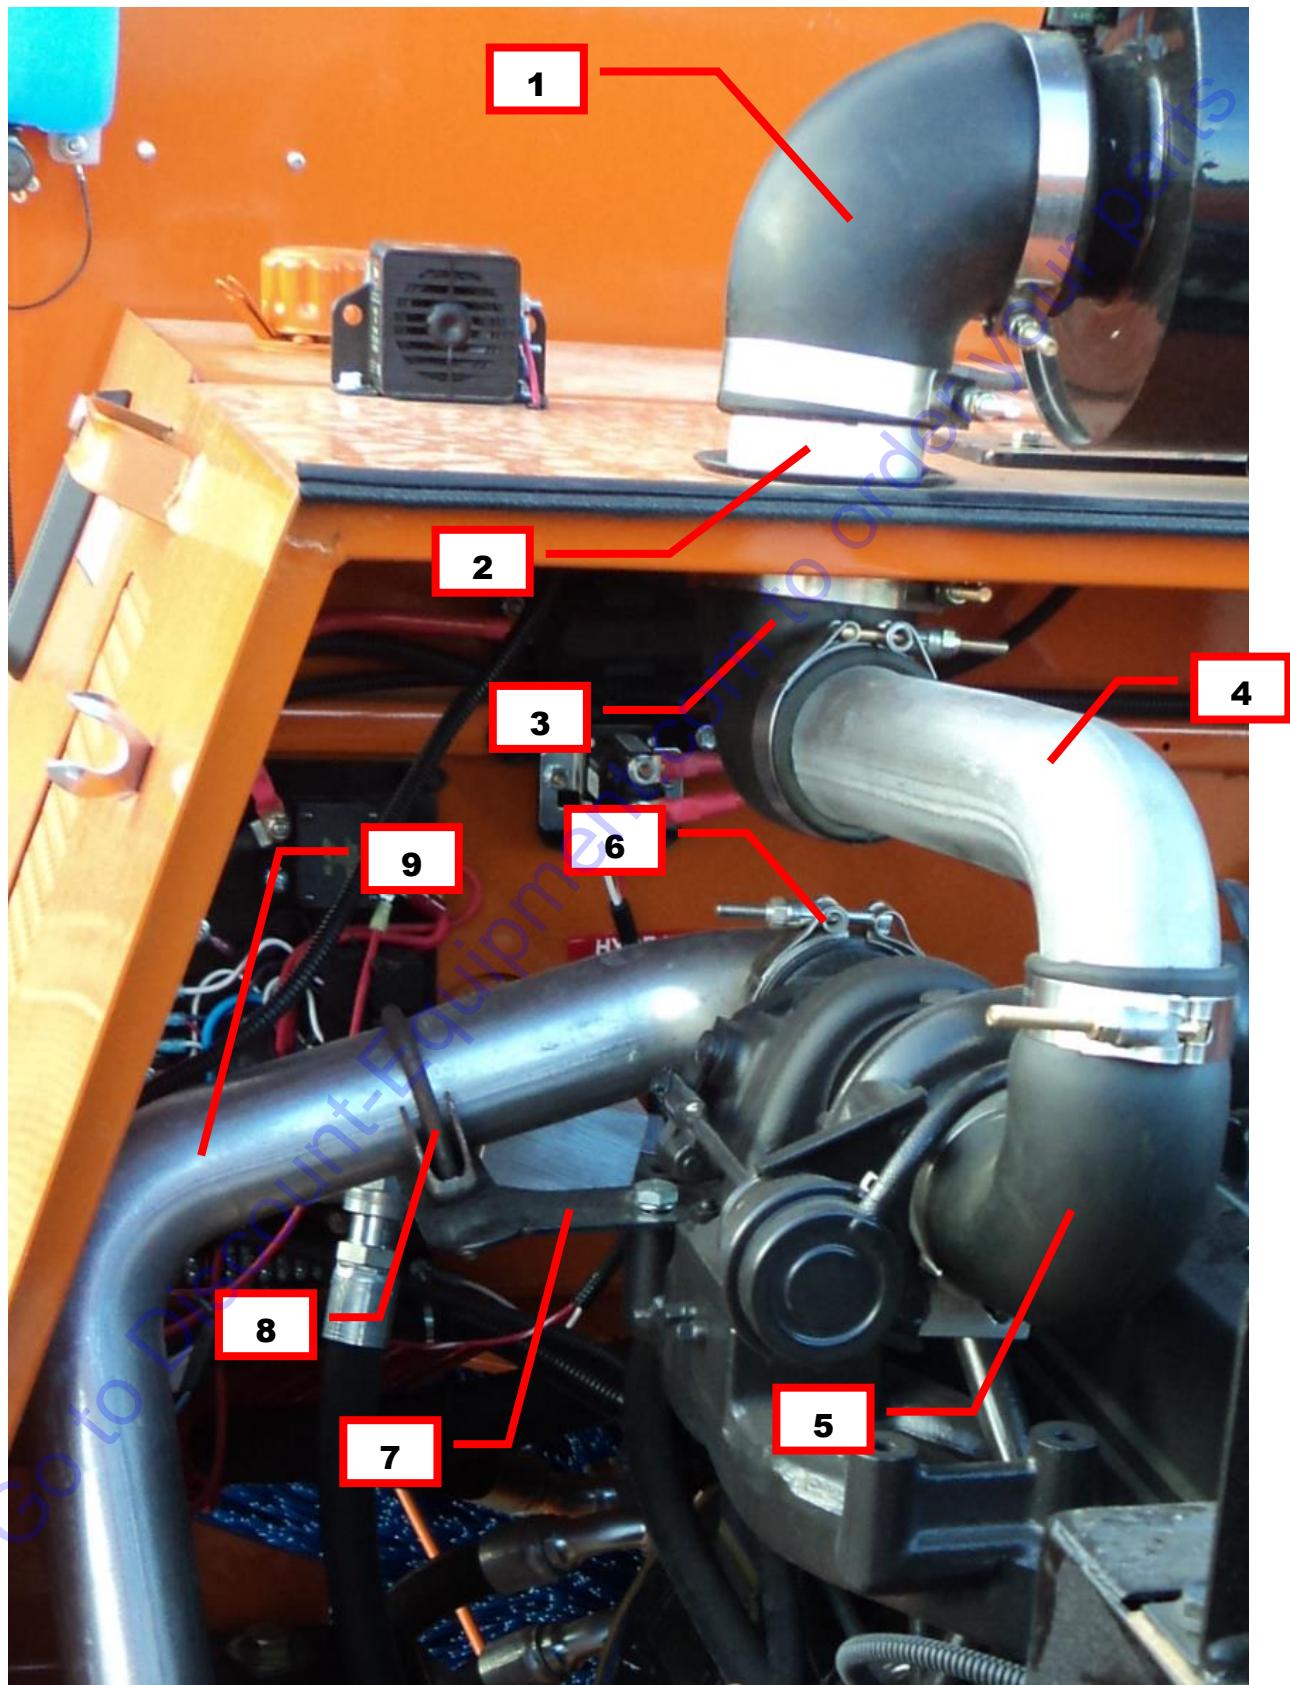


## RCT-350 TIER 4i ENGINE

Reference	Part No.	Description	Qty.
1	AC-760B	Rubber Elbow	1
2	AC-763-R	Connecting Tube	1
3	304070	Rubber Elbow	1
4	203680	Connecting Tube	1
5	304108	Rubber Elbow	1
6	344404	Clamp	1
7	203689	Exhaust Pipe Support	1
8	JE-758-B	Clamp	1
9	203688	Exhaust Pipe	1
10	JE-758-B	Clamp	1
11	JE-705-B	Muffler	1
12	852110	Muffler Clamp	2
Not Shown	344040	Tail Pipe	1

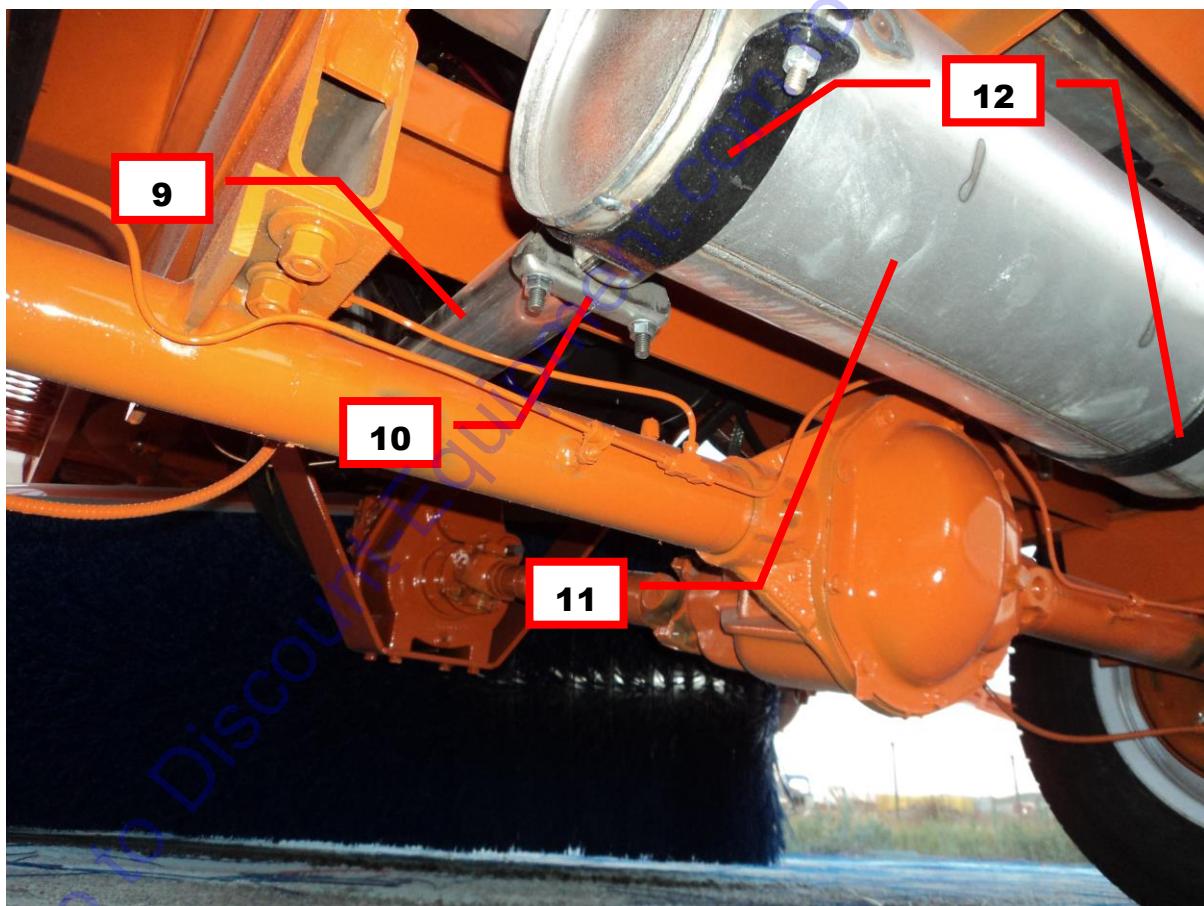


## RCT-350 Tier 4i Engine, cont'd

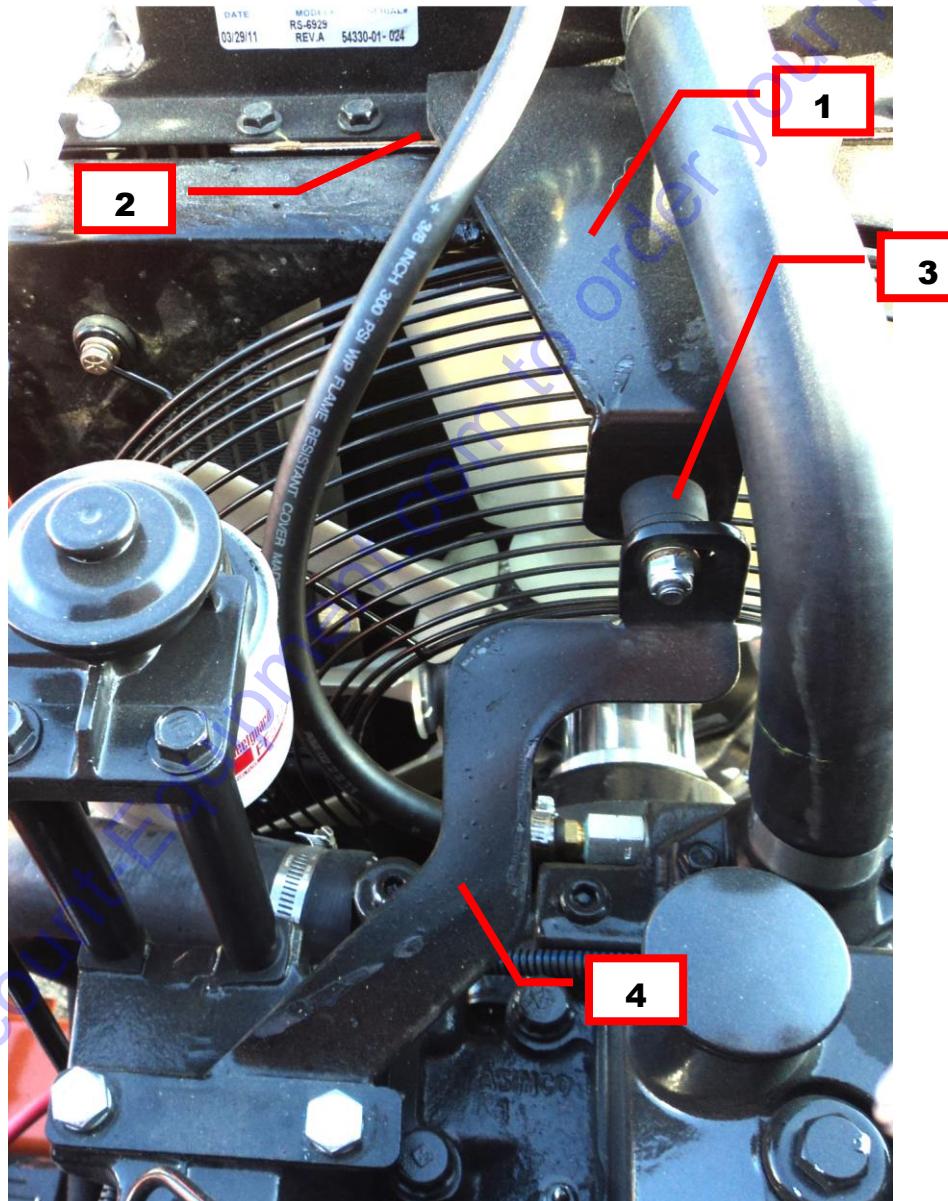

## RCT-350 TIER 4i ENGINE


Reference	Part No.	Description	Qty.
1.....	203684.....	Upper Radiator Support .....	1
2.....	203685.....	Upper Radiator Support Spacer.....	1
3.....	304096.....	Upper Radiator Rubber Isolator.....	1
4.....	203648.....	Radiator to Engine Support.....	1
5.....	AC-764-R.....	Strap.....	1
6.....	P103113 .....	Cup .....	1
7.....	P102980 .....	Air Cleaner Baffle .....	1
8.....	TT-771-R .....	Turbo II Precleaner .....	1
9.....	304059.....	Enginair Precleaner .....	1
	304063 .....	Sy-Klone Precleaner .....	1
10.....	DE-770-R.....	Air Cleaner (Dual Element).....	1
11.....	P119410 .....	Safety Element .....	1
12.....	P182059 .....	Service Element .....	1
13.....	P003951 .....	Clamp .....	1

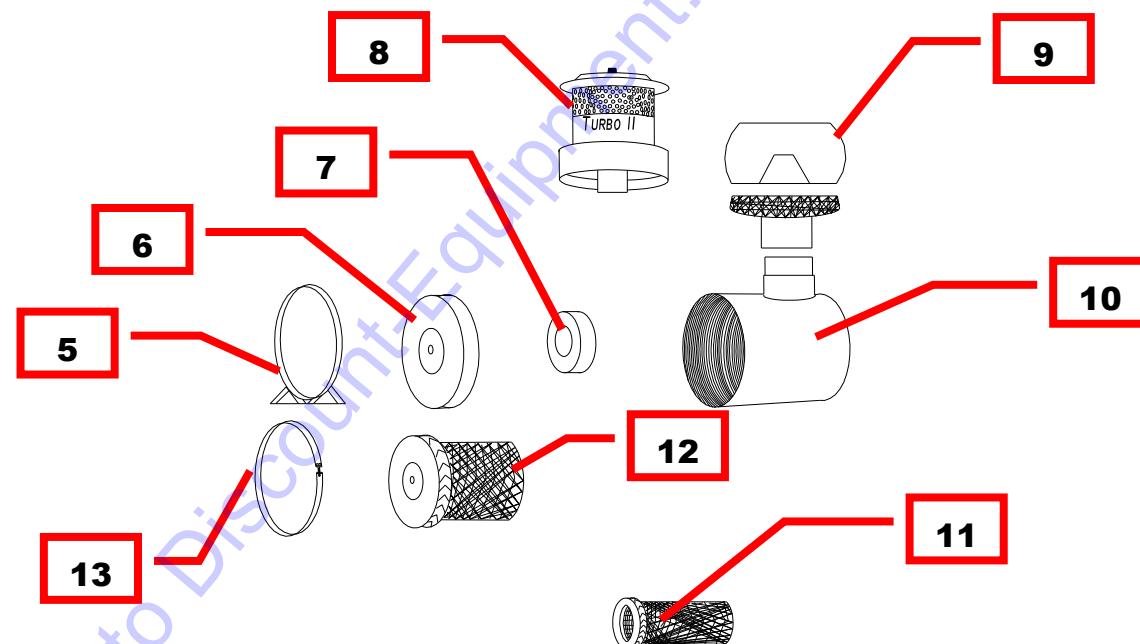

## RJT-350 ENGINE AND RELATED PARTS

<u>Reference</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
1.....	344050.....	John Deere Diesel Engine .....	1
2.....	N/A .....	Drive Plate .....	1
3.....	344053.....	Pump Drive, Complete.....	1
4.....	304097.....	Isolator Kit (Radiator Sides) .....	4
5.....	203125.....	Right Front Motor Mount (LR of vehicle)	1
6.....	203126.....	Left Front Motor Mount (RR of vehicle)..	1
7.....	203128.....	Right Rear Motor Mount (LF of vehicle) .	1
8.....	203129.....	Left Rear Motor Mount (RF of vehicle)....	1
9.....	JR-722-BB .....	Lower Radiator Hose .....	1
10.....	JR-721-BB .....	Upper Radiator Hose .....	1
11.....	JR-723-B .....	Radiator Cap.....	1
12.....	203633.....	Radiator Saddle.....	1
13.....	203638.....	Fan Guard.....	1
14.....	CM-714-B.....	Engine Isolator Kit .....	4
15.....	203615.....	Radiator Shroud.....	1
16.....	852083.....	Oil Cooler Hose Sleeve.....	1
17.....	344560.....	Belt.....	1
18.....	RE504836.....	Oil Filter .....	1
19.....	344561.....	Fuel Filter (Primary) .....	1
20.....	344562.....	Fuel Filter (Secondary) .....	1
21.....	311468.....	John Deere Fan.....	1


## RJT-350 Engine

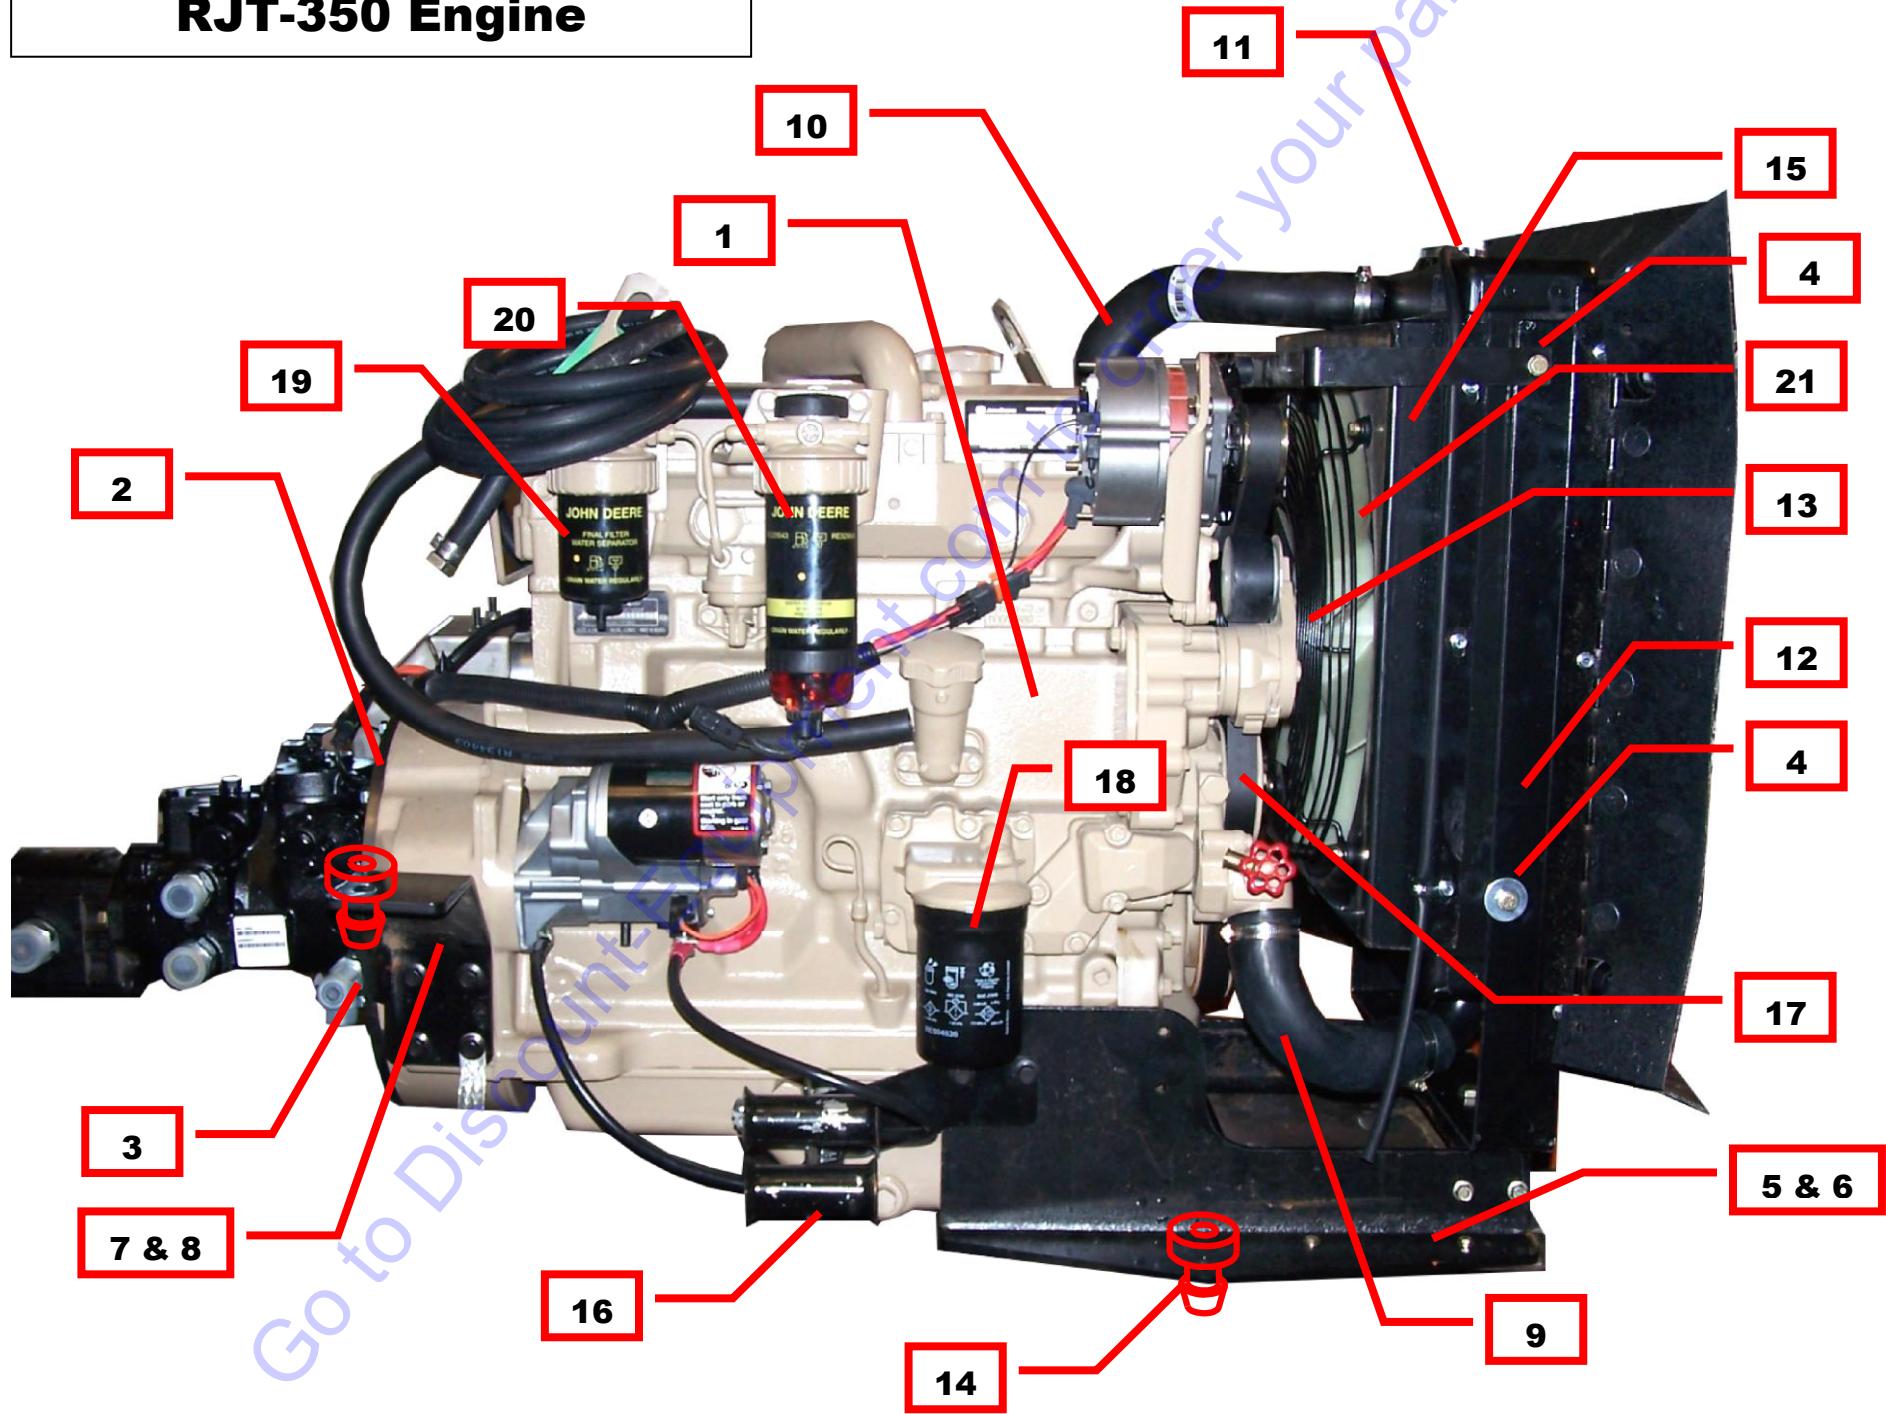

## RJT-350 ENGINE AND RELATED PARTS

Reference	Part No.	Description	Qty.
22.....	203634.....	Upper Radiator Support.....	1
23.....	203617.....	Radiator Assembly.....	1
24.....	304096.....	Top Radiator Isolator .....	1
26.....	203133.....	Radiator to Mount Support .....	1
27.....	203618.....	Fan Spacer.....	1
28.....	203624.....	Exhaust Pipe Heat Shield .....	1
29.....	203620.....	Exhaust Pipe 180 degree .....	1
30.....	302109.....	3" Muffler Clamp .....	2
31.....	203619.....	Exhaust Clamp .....	1


## RJT-350 Engine

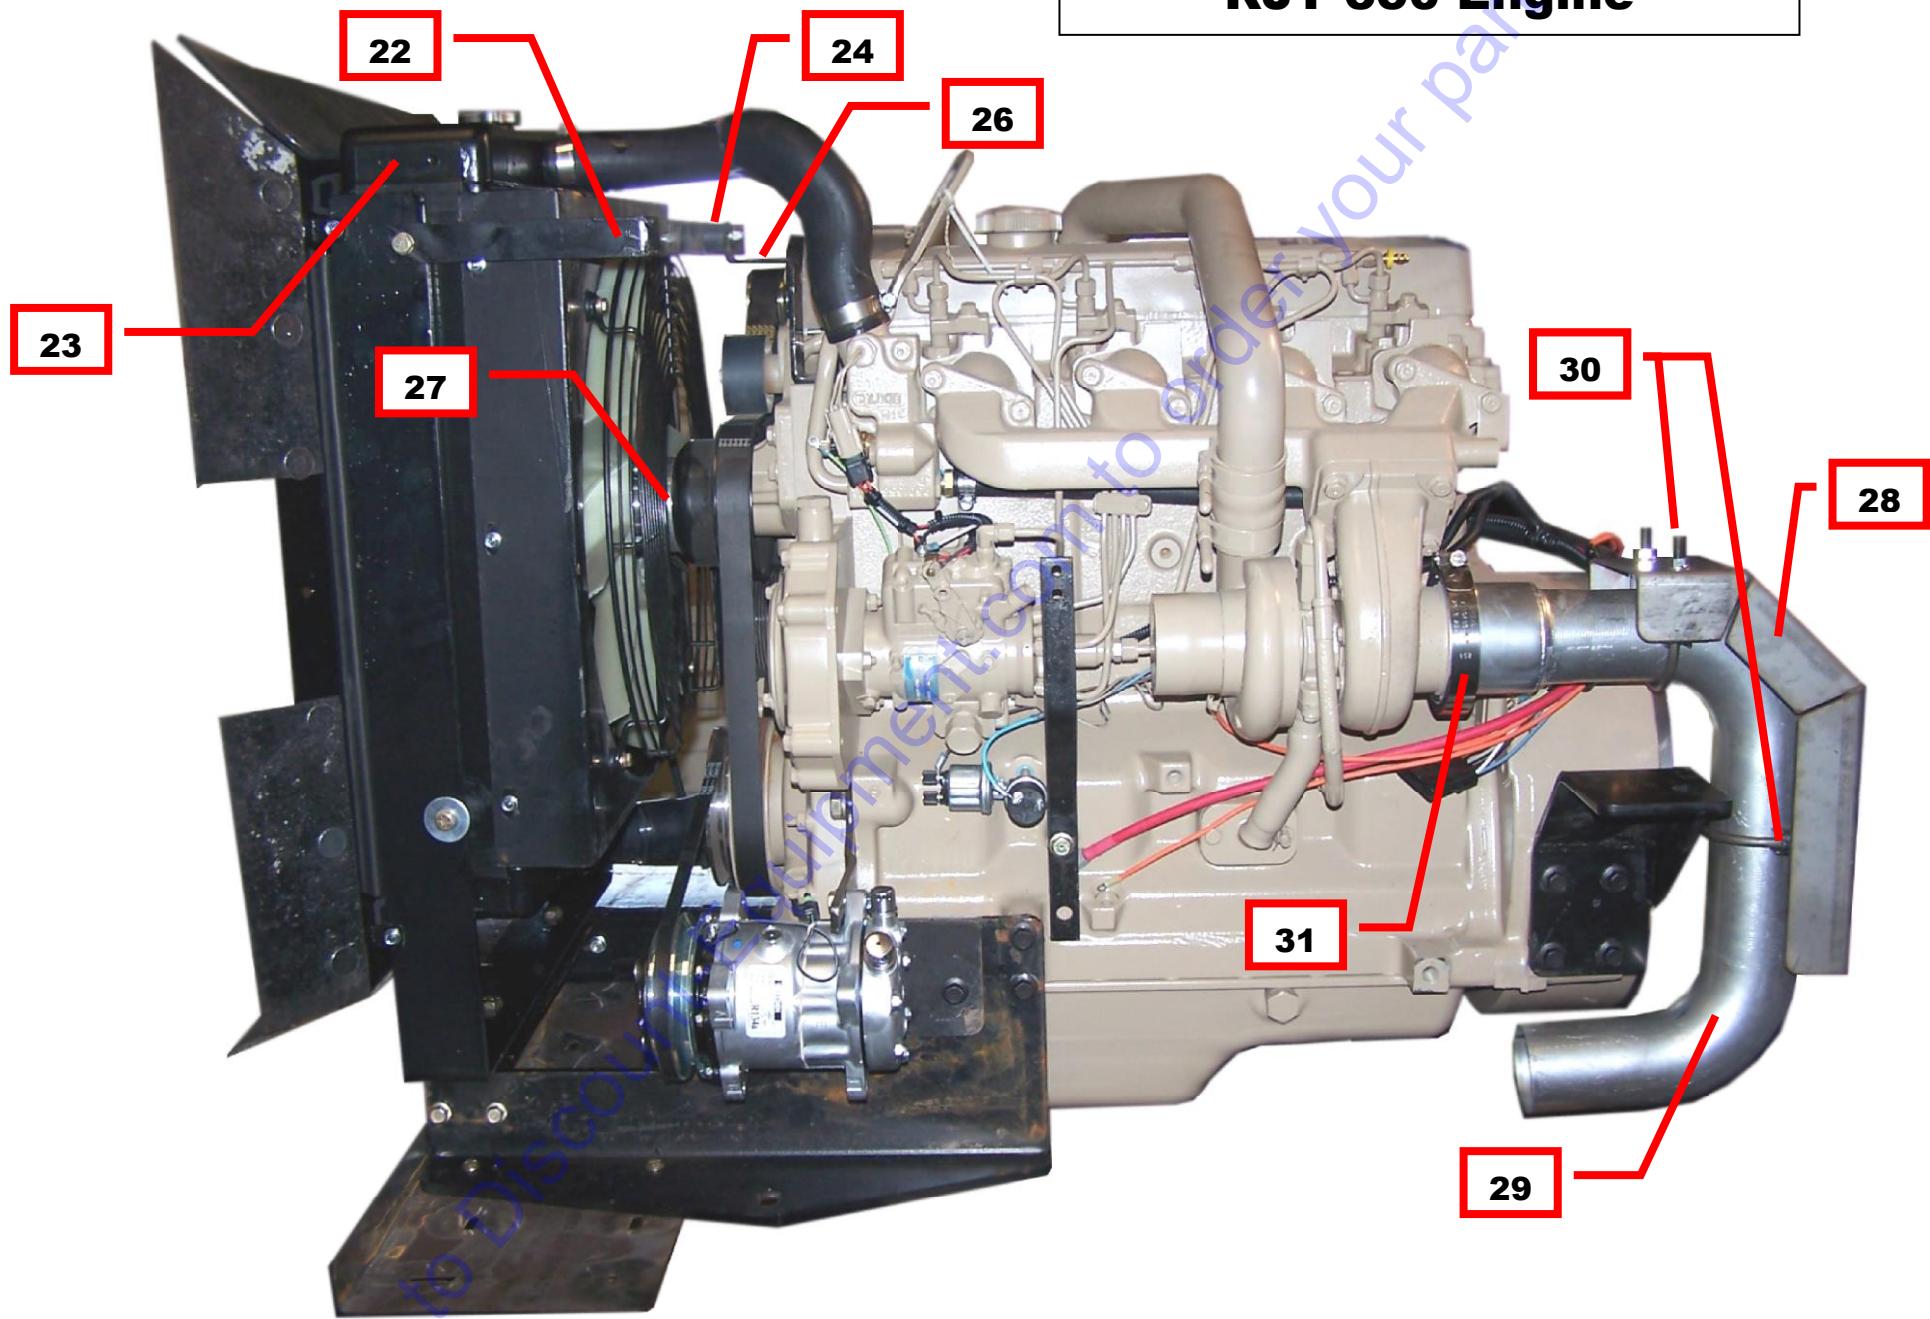

## RJT-350 ENGINE AND RELATED PARTS

Reference	Part No.	Description	Qty.
32.....	.305768.....	Oil Cooler .....	1
33.....	.203475.....	Lower Seal (Rubber) .....	1
34.....	.203186.....	Right Side Oil Cooler Seal .....	1
35.....	.203477.....	Upper Seal (Rubber).....	1
36.....	.203187.....	Left Side Oil Cooler Seal.....	1
37.....	.344121.....	Bottom Radiator Isolator .....	2
38.....	.852079.....	Bottom Radiator Support.....	1
39.....	.852635.....	Oil Cooler Mount Frame.....	1
40.....	.203105.....	Exhaust Heat Shield Plate .....	1


## RJT-350 Engine

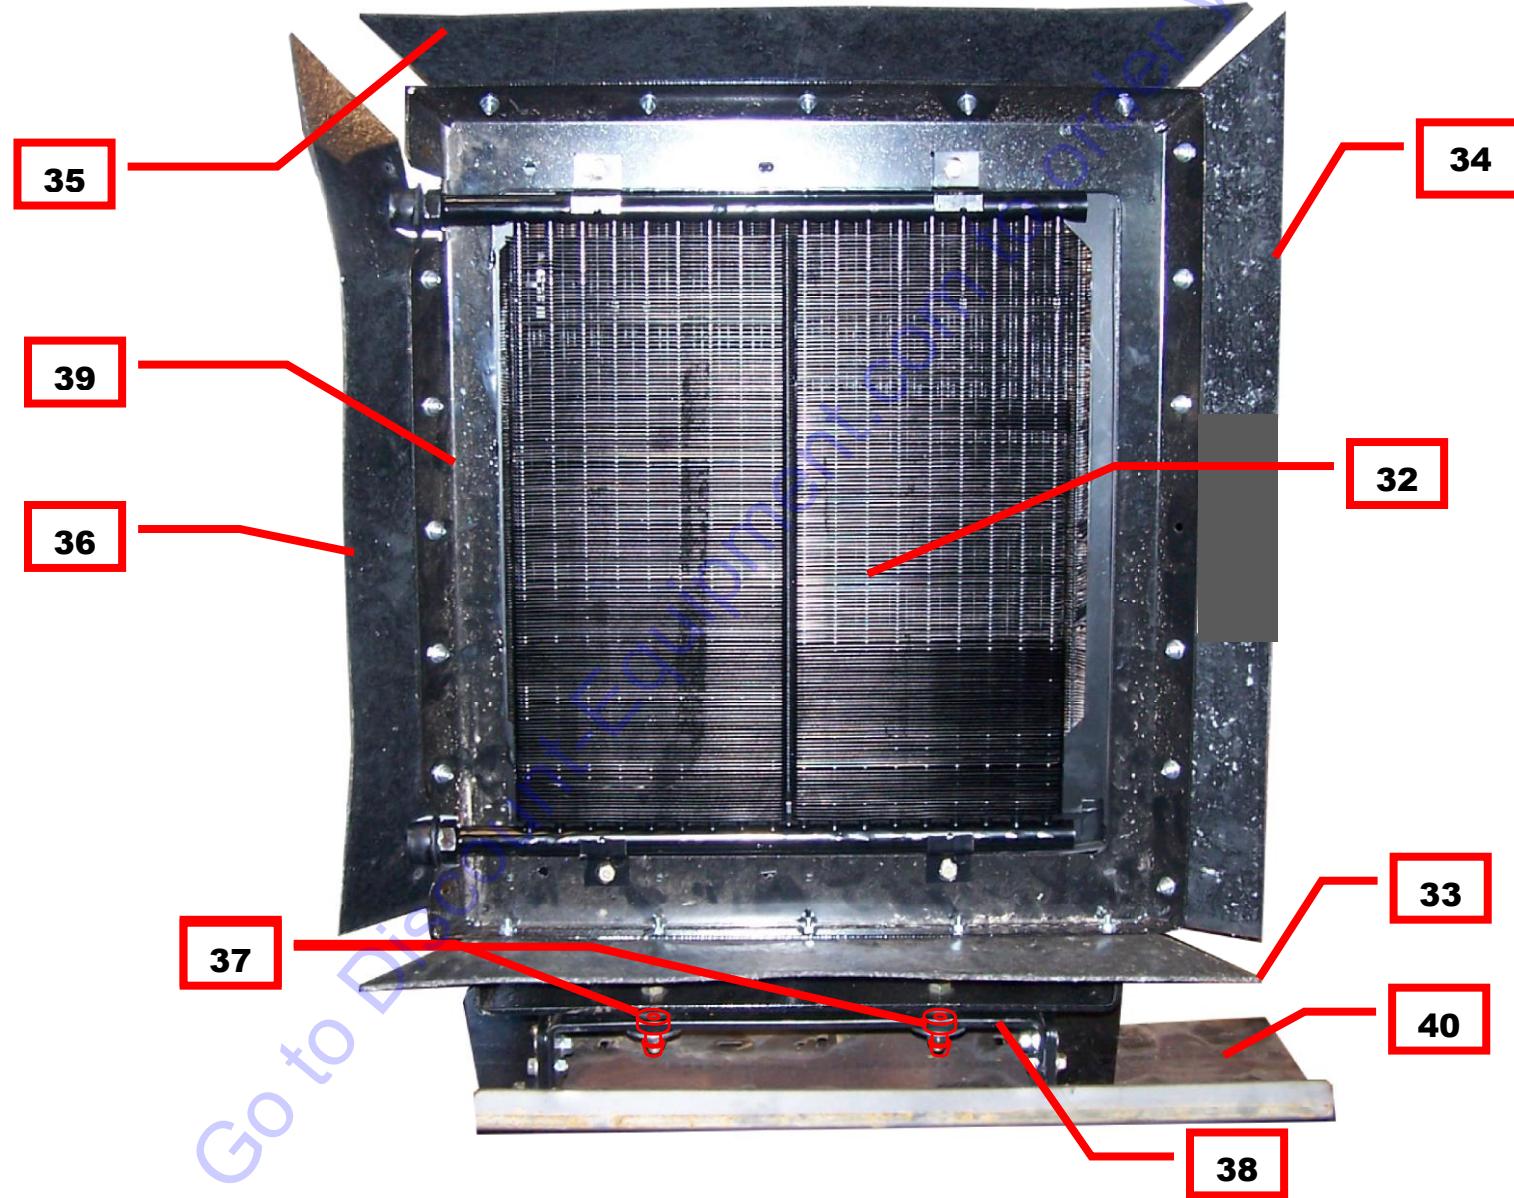

## RJT-350 ENGINE AND RELATED PARTS



Reference	Part No.	Description	Qty.
41.....	AC-760-B.....	Rubber Elbow (3.5" x 3") .....	1
42.....	203628.....	Air Inlet Tube .....	1
43.....	202152.....	Connecting Tube (6") .....	1
44.....	AC-760-R.....	Rubber Elbow (3" x 3") .....	1
45.....	203630.....	Rubber Elbow (3" x 2.5") .....	1
50.....	203625.....	Exhaust Pipe.....	1

## RJT-350 Engine

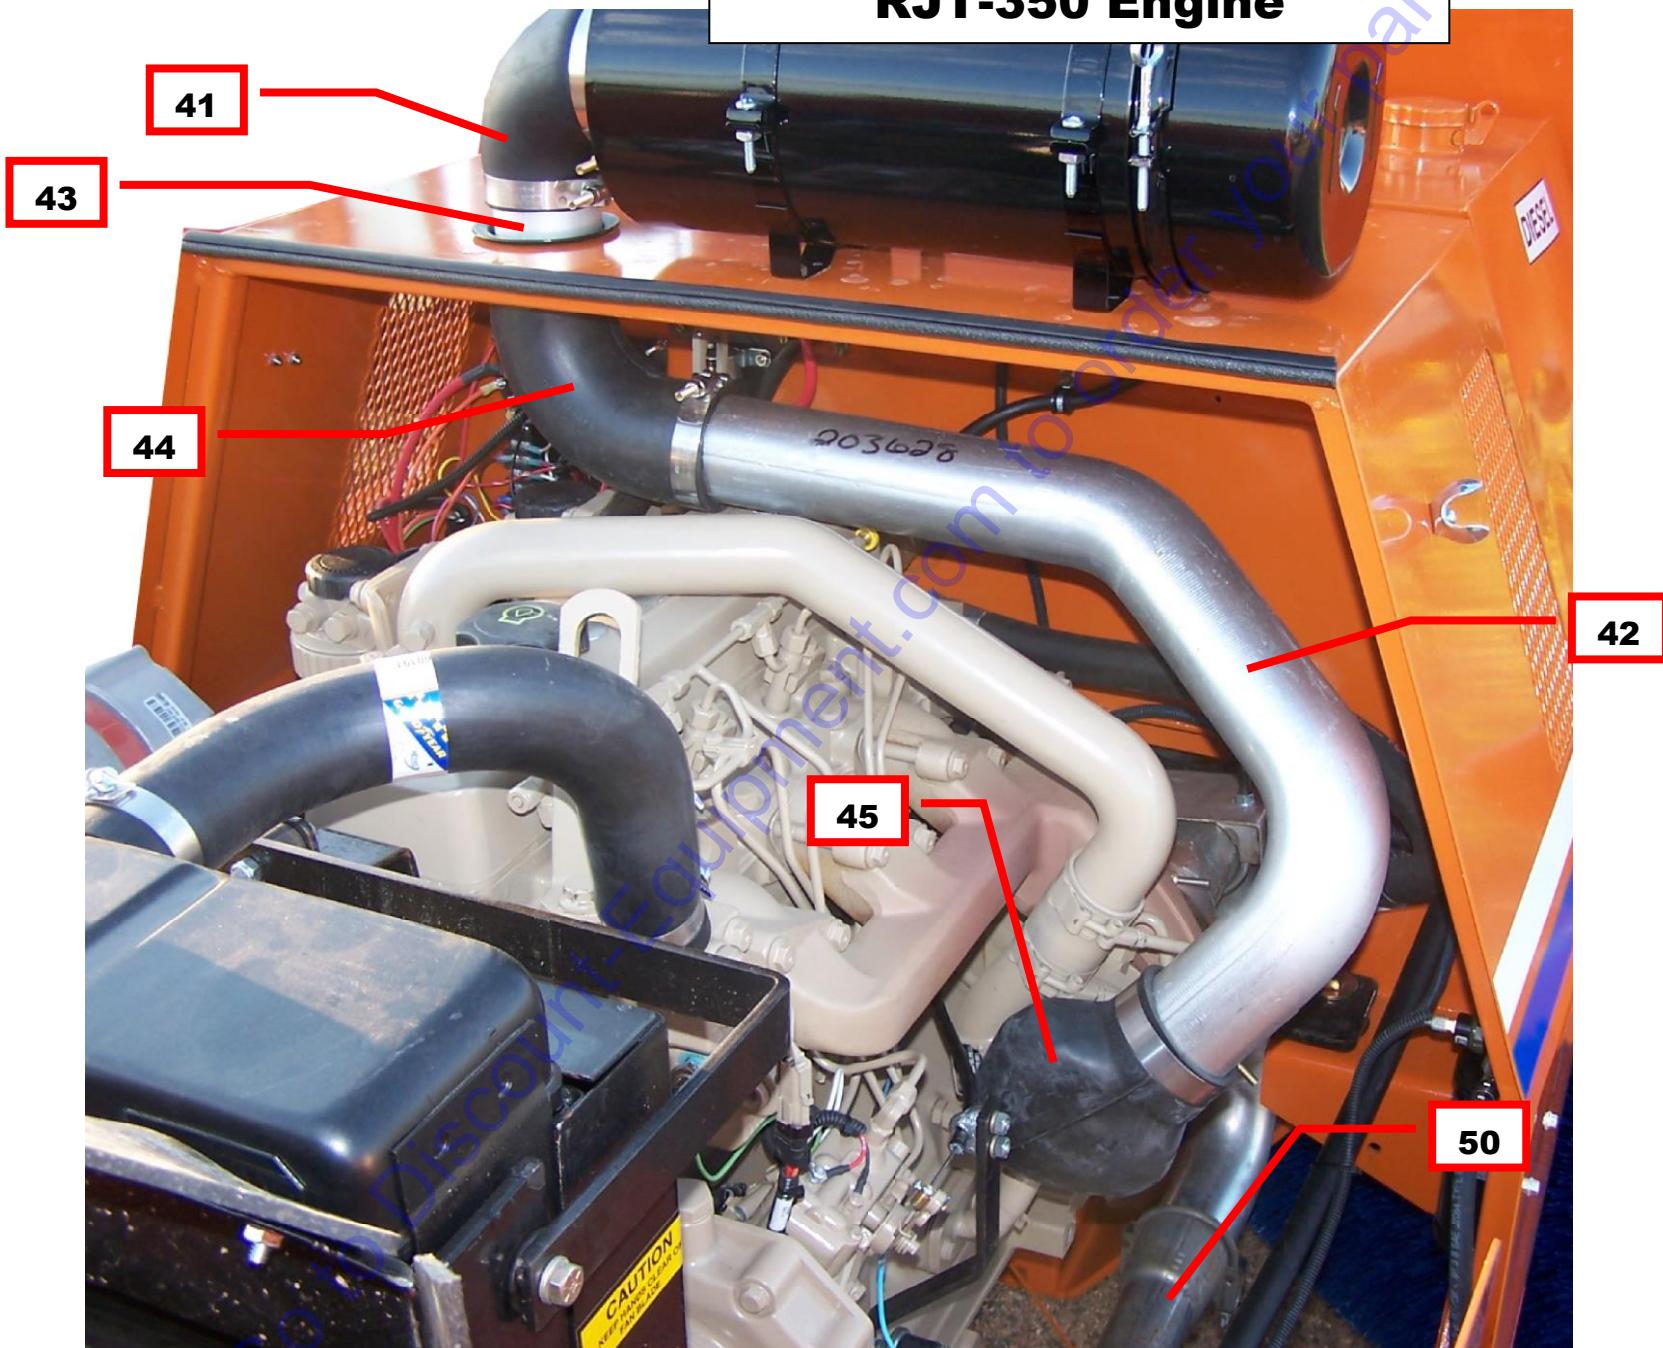


## RJT-350 ENGINE AND RELATED PARTS

Reference	Part No.	Description	Qty.
46	JE-705-B	Muffler	1
47	344040	Tail Pipe	1
48	852110	Muffler Clamp	2
49	JE-758-B	Head Pipe Clamp	1
50	203625	Exhaust Pipe	1

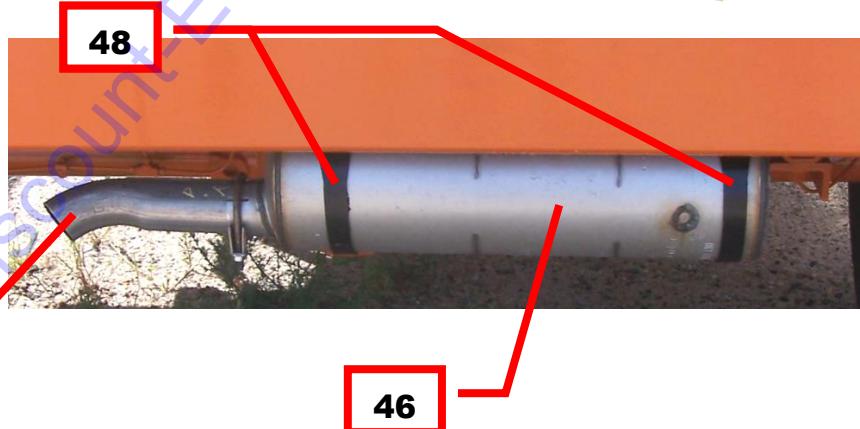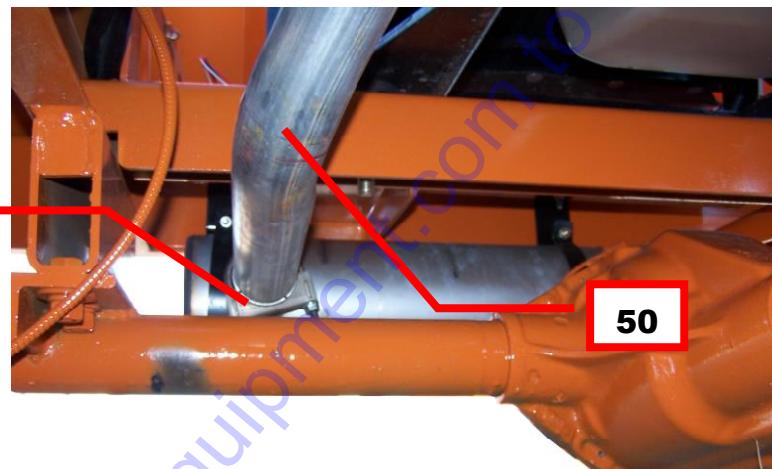


# RJT-350 ENGINE AND RELATED PARTS

Reference	Part No.	Description	Qty.
51 .....	AC-764-R .....	Strap .....	2
52 .....	P103113 .....	Cup .....	1
53 .....	P102980 .....	Air Cleaner Baffle .....	1
54 .....	TT-771-R .....	Turbo II Precleaner .....	1
55 .....	304059 .....	Enginair Precleaner .....	1
	..... 304063 .....	Sy-Klone Precleaner .....	1
56 .....	DE-770-R .....	Air Cleaner (Dual Element) .....	1
57 .....	P119410 .....	Safety Element .....	1
58 .....	P182059 .....	Service Element .....	1
59 .....	P003951 .....	Clamp .....	1

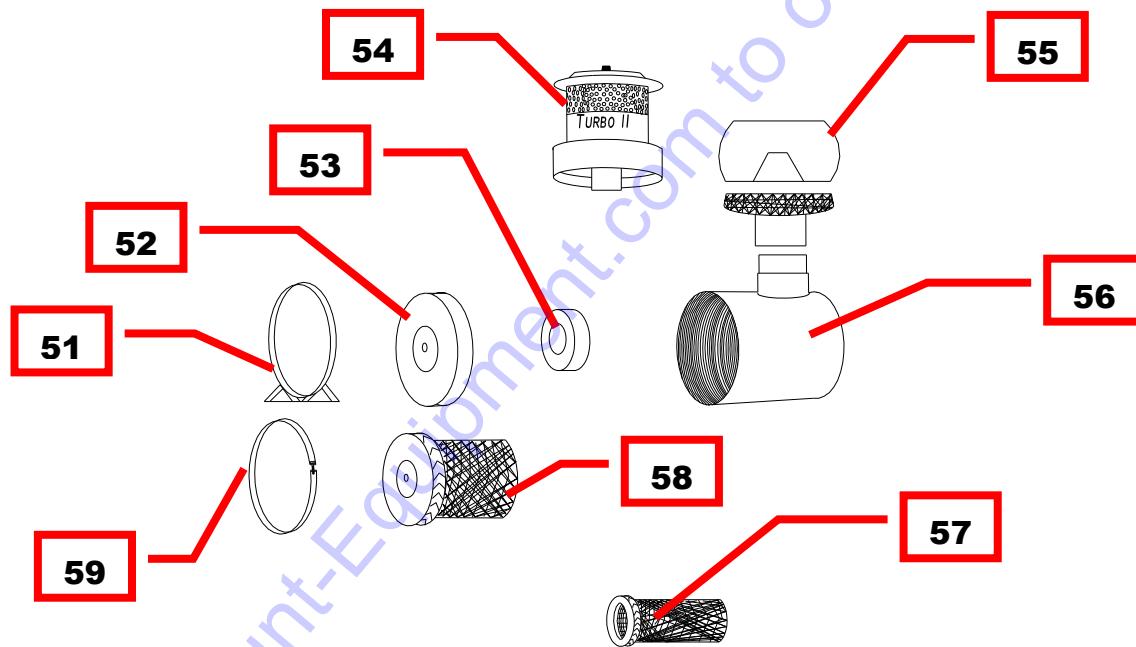

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

KR-350 ENGINE AND RELATED PARTS

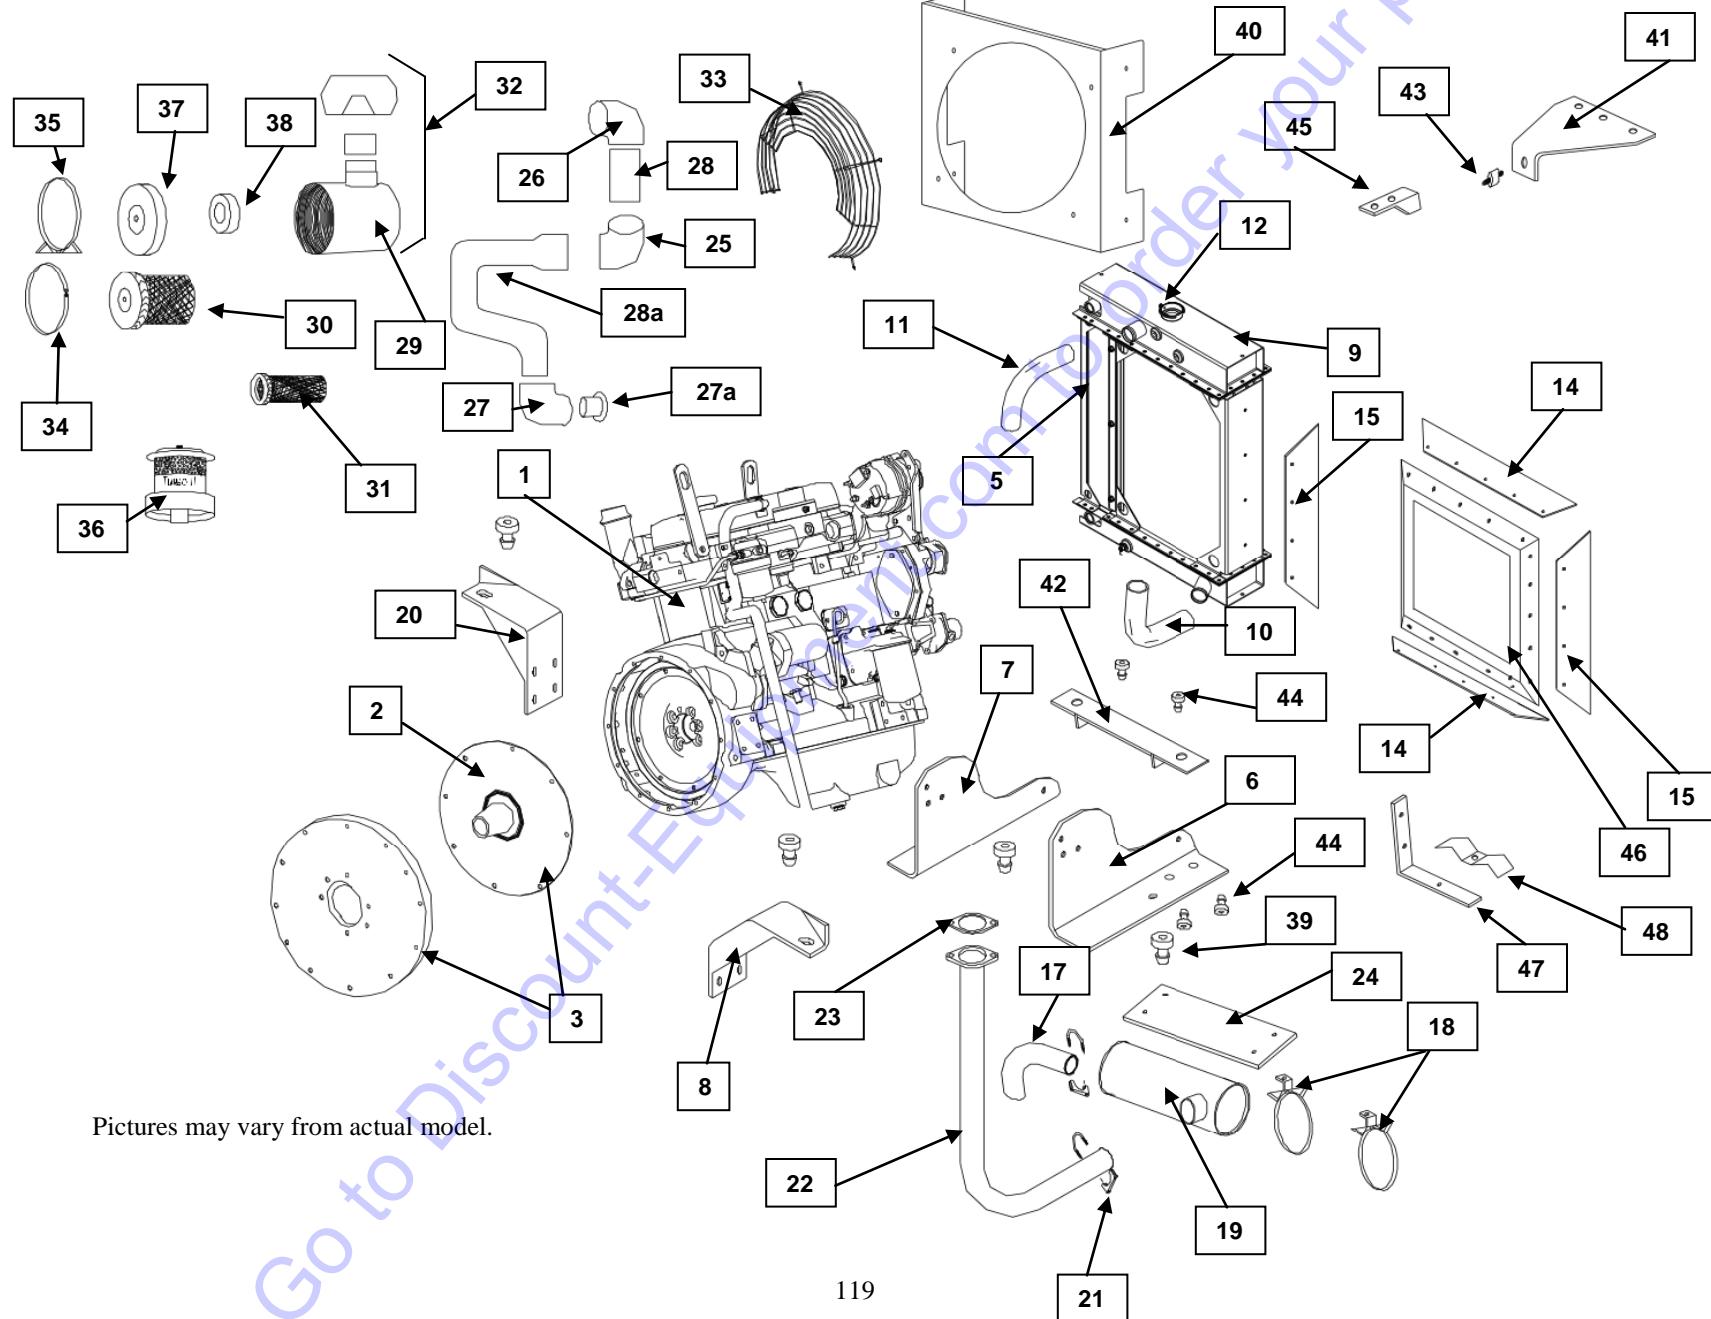


Pictures may vary from actual model.

## KR-350 ENGINE AND RELATED PARTS

Reference	Part No.	Description	Qty.
1.....	344064.....	Kubota Diesel Engine .....	1
2.....	N/A.....	Drive Plate.....	1
3.....	344052.....	Pump Drive, Complete.....	1
5.....	203794.....	Oil Cooler Asm/ Radiator Asm.....	1
6.....	203330.....	Right Front Motor Mount .....	1
7.....	203331.....	Left Front Motor Mount.....	1
8.....	203780.....	Right Rear Motor Mount .....	1
9.....	203794.....	Radiator Assembly / Oil Cooler Asm.....	1
10.....	CR-721-B.....	Lower Radiator Hose .....	1
11.....	304099.....	Upper Radiator Hose .....	1
12.....	CALL.....	Radiator Cap.....	1
14.....	203800.....	Top and Bottom Seal .....	2
15.....	203799.....	Left and Right Seal.....	2
17.....	344040.....	Tail Pipe .....	1
18.....	852110.....	Muffler Clamp .....	2
19.....	JE-705-B .....	Muffler .....	1
20.....	203781.....	Left Rear Motor Mount .....	1
21.....	JE-758-B .....	Head Pipe Clamp.....	2
22.....	852337.....	Exhaust Pipe.....	1
23.....	19258-12230.....	Exhaust Gasket .....	1
24.....	203105.....	Exhaust Heat Shield.....	1
25.....	304106.....	Rubber Elbow (3" x 2.5") .....	1
26.....	AC-760-B.....	Rubber Elbow (3.5" x 3") .....	1
27.....	304110.....	Rubber Elbow (1.75" x 2") .....	1
28.....	202152.....	Connecting Tube .....	1
28a.....	203345.....	Connecting Tube .....	1
29.....	DE-770-R.....	Air Cleaner (Dual Element).....	1
30.....	P182059.....	Service Element .....	1
31.....	P119410.....	Safety Element .....	1
32.....	304059.....	Enginair Precleaner .....	1
	304063.....	Sy-Klone Precleaner .....	1
33.....	203806.....	Fan Guard .....	1
34.....	P003951.....	Clamp .....	1
35.....	AC-764-R.....	Strap .....	2
36.....	TT-771-R .....	Turbo II Precleaner .....	1
37.....	P103113.....	Cup .....	1
38.....	P102980.....	Air Cleaner Baffle .....	1
39.....	CM-714-B .....	Engine Isolator Kit .....	4
40.....	203797.....	Radiator Shroud .....	1
41.....	203801.....	Upper Radiator Support .....	1
42.....	852802.....	Bottom Radiator Support .....	1
43.....	304096.....	Top Radiator Isolator .....	1
44.....	344121.....	Bottom Radiator Isolator & Heat Shield Isolator ...	6
45.....	203334.....	Radiator to Mount Support .....	1
46.....	203798.....	Air Guide Frame .....	1
47.....	203804.....	Hose Guide .....	1
48.....	001397.....	Hump Clamp .....	1
Not Shown .....	203795.....	Kubota Fan .....	1
Not Shown .....	203805.....	Fan Spacer .....	1
Not Shown .....	344550.....	Oil Filter .....	1
Not Shown .....	16631-43560.....	Fuel Filter .....	1
Not Shown .....	304015.....	Alternator/Engine Belt .....	1
Not Shown .....	203346.....	Alternator Support Bracket .....	1
Not Shown .....	203347.....	Alternator Adjustment Bracket .....	1
Not Shown .....	203348.....	Alternator Bushing .....	1

# CAT C4.4 ENGINE AND RELATED PARTS

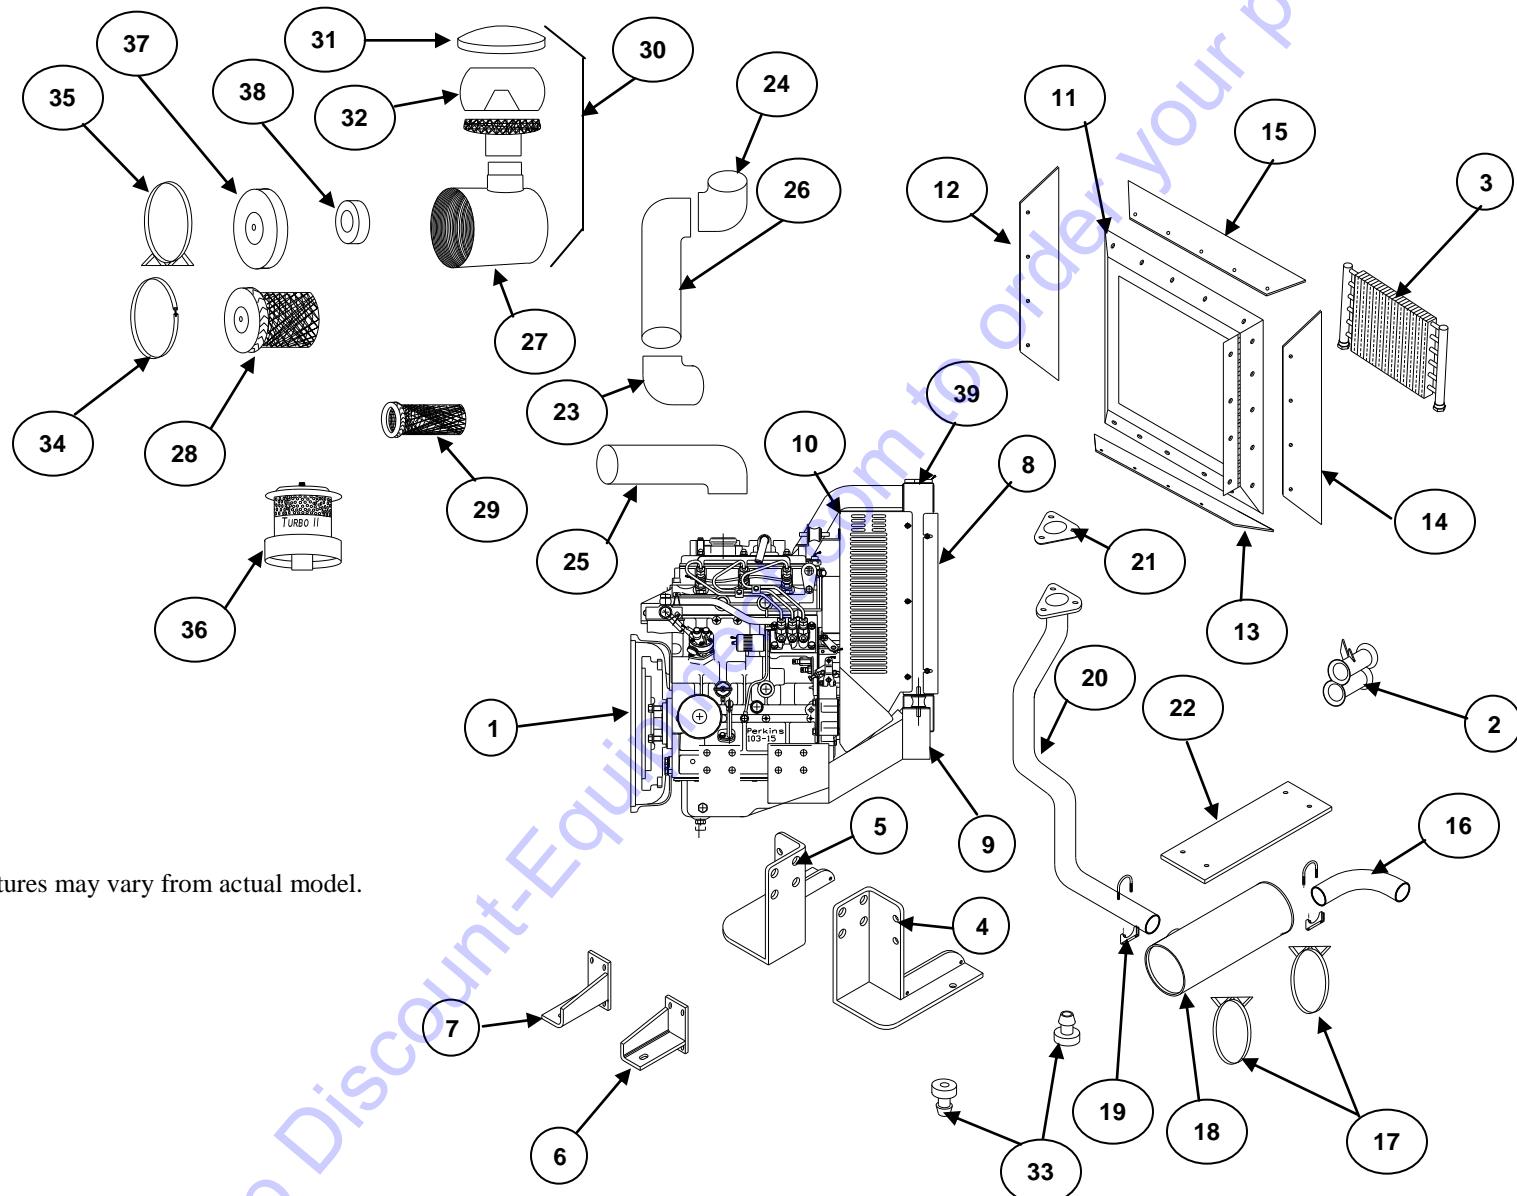

Pictures may vary from actual model.

# CAT C4.4 ENGINE AND RELATED PARTS

ITEM	PART NUMBER	DESCRIPTION	QUANTITY
1	344023	CAT C4.4 Diesel Engine	1
2	852045	Oil Cooler Hose Guide Sleeve	1
3	325027	Oil Cooler - Aluminum	1
4	203600	Right Front Motor Mount	1
5	203601	Left Front Motor Mount	1
6	852042	Right Rear Motor Mount	1
7	852043	Left Rear Motor Mount	1
8	344508	Radiator Assembly	1
9	344511	Lower Radiator Hose	1
10	344510	Upper Radiator Hose	1
11	853606	Oil Cooler Mount	1
12	203480	Right Side Oil Cooler Seal	1
13	203481	Lower Seal (Rubber)	1
14	203479	Left Side Oil Cooler Seal	1
15	203482	Upper Seal (Rubber)	1
16	344040	Tail Pipe	1
17	852110	Muffler Clamp	2
18	JE-705-B	Muffler	1
19	JE-758-B	Head Pipe Clamp	2
20	855612	Exhaust Pipe	1
21	344031	Exhaust Gasket	1
22	203105	Exhaust Heat Shield	1
23	304106	Rubber Elbow	2
24	304119	Rubber Elbow	1
25	304195	Heater Hose	1
26	203614	Connecting Tube	1
27	DE-770-R	Air Cleaner (Dual Element)	1
28	P182059	Service Element	1
29	P119410	Safety Element	1
30	PC-710-B	Precleaner, 4"	1
31	PC-765-R	Precleaner, Top	1
32	PC-711-R	Precleaner Bowl	1
33	304095	Engine Isolator Kit	4
34	P003951	Clamp	1
35	AC-764-R	Strap	2
36	TT-771-R	Turbo II Precleaner	1
37	P103113	Cup	1
38	P102980	Air Cleaner Baffle	1
39	344509	Radiator Cap	1
NS	101-3770	CAT Fan	1
NS	5M8155	Fan Belt	1
NS	304196	Compressor Belt, A/C Only	1
<b>NS</b>	<b>344079</b>	<b>Fuel Filter</b>	<b>1</b>
<b>NS</b>	<b>344078</b>	<b>Oil Filter</b>	<b>1</b>

# **PREVENTIVE MAINTENANCE BROOM SPECIFICATIONS & SCHEMATICS**

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

# Preventative Maintenance

A well maintained A/C system would save on downtime and premature component failures.

Weekly inspections or every 2 days in severe environments should include:

1. Inspect compressor clutch drive belts (tightness, wear).
2. Inspect compressor-mounting brackets (bolts, alignment).
3. Inspect mounting hardware on evaporator unit and condensers.
4. Inspect air intake filter. Clean or replace filter.
5. Inspect evaporator and condenser coils. Clean using air pressure. (DO NOT USE WATER OR PRESSURE WASHERS).
6. Inspect hose and wire harness for proper routing. Leaks and wear.

## Helpful Hints

Make sure the evaporator air intake area is not obstructed (i.e. toolboxes, clothing, lunch box, etc.)

Manual thermostats on our systems, when rotated clockwise to the stop position will not allow the A/C compressor clutch to cycle. The compressor will run continuously and the evaporator coil will not defrost. REMEDY: Turn the manual thermostat knob clockwise to the stop position, and then turn the thermostat knob back counter clockwise  $\frac{1}{4}$  turn.

Broce thanks you for purchasing our units. It is our endeavor to provide you with a quality A/C unit with trouble free service.

# HYDRAULIC COMPONENT SPECIFICATIONS

## Propel Pump

Displacement at MAX Angle:	46 cc (2.8 CU IN)
Rated Speed:	4000 RPM
MAX Speed:	4100 RPM
MIN Speed:	500 RPM
Case Pressure – Continuous:	1.7 BAR (25 PSI)
Case Pressure – MAX:	5.2 BAR (75 PSI)
System Pressure – Continuous:	210 BAR (3000 PSI)
System Pressure – MAX:	345 BAR (5000 PSI)
Inlet Vacuum – Continuous:	.8 BAR Absolute (5 IN Hg)
Inlet Vacuum – MAX: Hg)	.7 BAR Absolute (10 IN
Charge Pressure Setting:	19.5 BAR (283 PSI)
System Pressure Setting:	280 BAR (4060 PSI)
Approximate Flow at 2400 RPM	26 GPM

## Propel Motor

Displacement:	46 cc (2.8 CU IN)
Rated Speed:	3600 RPM
MAX Speed:	3600 RPM
Case Pressure – Continuous	1.7 BAR (25 PSI)
Case Pressure – MAX:	5.2 BAR (75 PSI)
System Pressure – Continuous:	210 BAR (3000 PSI)
System Pressure – MAX:	345 BAR (5000 PSI)

## Auxiliary Pump

Displacement:	38 cc (2.32 CU IN)
MAX Speed:	2500 RPM
MAX Continuous Pressure:	3000 PSI
Approximate Flow at 2400 RPM	
Priority (Steering and Broom)	3 GPM
Secondary (Broom Rotation)	18 GPM
MAX Pressure Setting (Priority):	1600 PSI
MAX Pressure Setting * (Secondary)	3000 PSI

\*Relief Valve in the Broom Rotation Valve

# FLUID CAPACITIES

<i>Component</i>	<i>Fluid Type</i>	<i>Quantity</i>
Hydraulic Tank	DYNA-PLEX 21C CURSA HYDRAULIC OIL Must meet Caterpillar spec. T02 or Allison C3	27 Gal.
Fuel	#2 DIESEL	27 Gal.
Radiator	ETHYLENE GLYCOL 50/50 MIX	2.5 Gal
Engine Crankcase	API Classification CE or CD CCMC Specification D4 or D5	10 Qts
Rear Axle	EP-90 GEAR LUBE	2 Qts*
2-Speed G-Box	EP-90 GEAR LUBE	2 Qts*

\* 2 Quarts is approximate. Fill to the level of the filler plug.

# Broce Brooms

## DYNA-PLEX 21C CURSA HYDRAULIC OIL

Dyna-Plex 21C Cursa Hydraulic Oils are high quality; extra-inhibited oils designed with hydrocrack Group II base oils, for use in multi-functional applications where long oil life is required. These oils will give you steady, reliable performance as a hydraulic medium.

Dyna-Plex 21C Cursa Hydraulic Oils have been finely filtered to remove external contamination and contain special O-Ring conditioners to prolong hydraulic component life. Seal swell agents have been added to prevent leaks and Cursa's demulsibility characteristics enhance separation and removal of water. These oils will supply 5000 hours of service before extreme oxidation problems occur and also provide excellent resistance to foaming, rust and wear.

<u>PROPERTY</u>	<u>ASTM TEST METHOD</u>	<u>MULTI-FUNCTION</u>
Viscosity @ 40°C,CST	D445	46.00
Viscosity @ 100°C,CST	D445	9.75
Viscosity Index	D2270	200
Flash Point, COC, °C	D92	200
Flash Point, COC, °F	D92	392
Pour Point, °C (°F)	D97	-36 (-33)
Color	D1500	Orange
Gravity, °API	D287	32.0
Turbine Oil Oxidation	D943	5000+
Copper Strip	D130	LB
Rust Test	D665	Pass
Vane Pump, Mgs. Wt. Loss	D2882	12
Usable Temperature Range, °F		-10-110
Maximum Hydra. Temperature, °F		205
Dielectric Strength, kv		35
RBOT, Minutes	D2272	950
Demulsibility	D1401	40-40-0 (5)

### Meets or exceeds the following tests and requirements:

AFNOR E 48-603  
B.F. Goodrich – 0152  
Cincinnati Milacron – P-68 (light hydraulic oils), P-69, P-70  
Denison – HF-0, HF-1, HF-2  
DIN – 51524, Part 2  
FMC – High-Performance Hydraulic Oil  
Ford – M-6C32  
General Motors – LH-04-1, LH-06-1, LH-15-1  
Jeffrey - #87  
Lee Norse 100-1  
Racine – Model S, variable volume vane pump  
U.S. Steel – 136, 127  
Vickers – I-286-S, M-2950-S, 35VQ25

## DYNA-PLEX 21C EXTENDED DRAIN ANTI-FREEZE/ENGINE COOLANT

Dyna-Plex 21C Extended Drain Anti-Freeze/Engine Coolant is a premium quality ethylene glycol based product. It is pre-diluted to a 50/50 mixture with de-ionized water to provide excellent corrosion control and a deduction of scale buildup.

The corrosion inhibitor package eliminates the need for an initial charge of supplemental coolant additive (SCA). The 50/50 dilution with de-ionized water insures high water quality and eliminates the chance for error when mixing anti-freeze with water in the field.

Dyna-Plex 21C Extended Drain Anti-Freeze gives the maximum protection and performance available for heavy-duty diesel applications, while eliminating potential water related problems. Advantages of this product include the highest quality inhibitor package available and its ready to use convenience.

Universal recommends good maintenance practices to monitor inhibitor levels on a regular basis by utilizing coolant analysis, which is an important aspect of extending the life of this coolant/anti-freeze. This product meets or exceeds manufacturer specifications for use in both heavy-duty diesel and automotive applications.

<u>Physical and Chemical Properties</u>	<u>ASTM Test Method</u>	<u>Test Specifications</u>
Specific Gravity @ 60°F	D-1122	1.110 – 1.145
pH 50% Dilution	D-1287	10.0 – 10.4
Reserve Alkalinity	D-1121	5.0 ml min.
Boiling Point	D-1120	320°F min.
Flash Point	D-92	240°F min.
Freeze Point	D-1177	-34°F max.
Color		OEM Standard Green
Foaming – Foam Volume, ml	D-1881	50 max.
Break Time, sec.	D-1881	5 max.
Composition (% by weight)		
Total Glycols		45.0% min.
Total De-ionized Water		53.0% max.
Inhibitors and Dye		2.0% min.

Dyna-Plex 21C Extended Drain Anti-Freeze/Engine Coolant meets or exceeds the following specifications:

American Society for Testing and Materials (ASTM)- D-33-6; D-4985; D-4656

General Motors – GM 1899M; GM 1825M

Society for Automotive Engineers – SAE J1941, J1034

Cummins – 85T8-2; 90T8-4; Bulletin #3666132

Ford Motor Corporation – ESE M97B44A; ESE-M97B18-C

Chrysler Motors - MS7170


Detroit Diesel 7SE298

John Deere H24A2; H24C2


ATA Maintenance Council – RP-329

AF-1/9-12-01


# Curb Broom With Variable Speed Brush

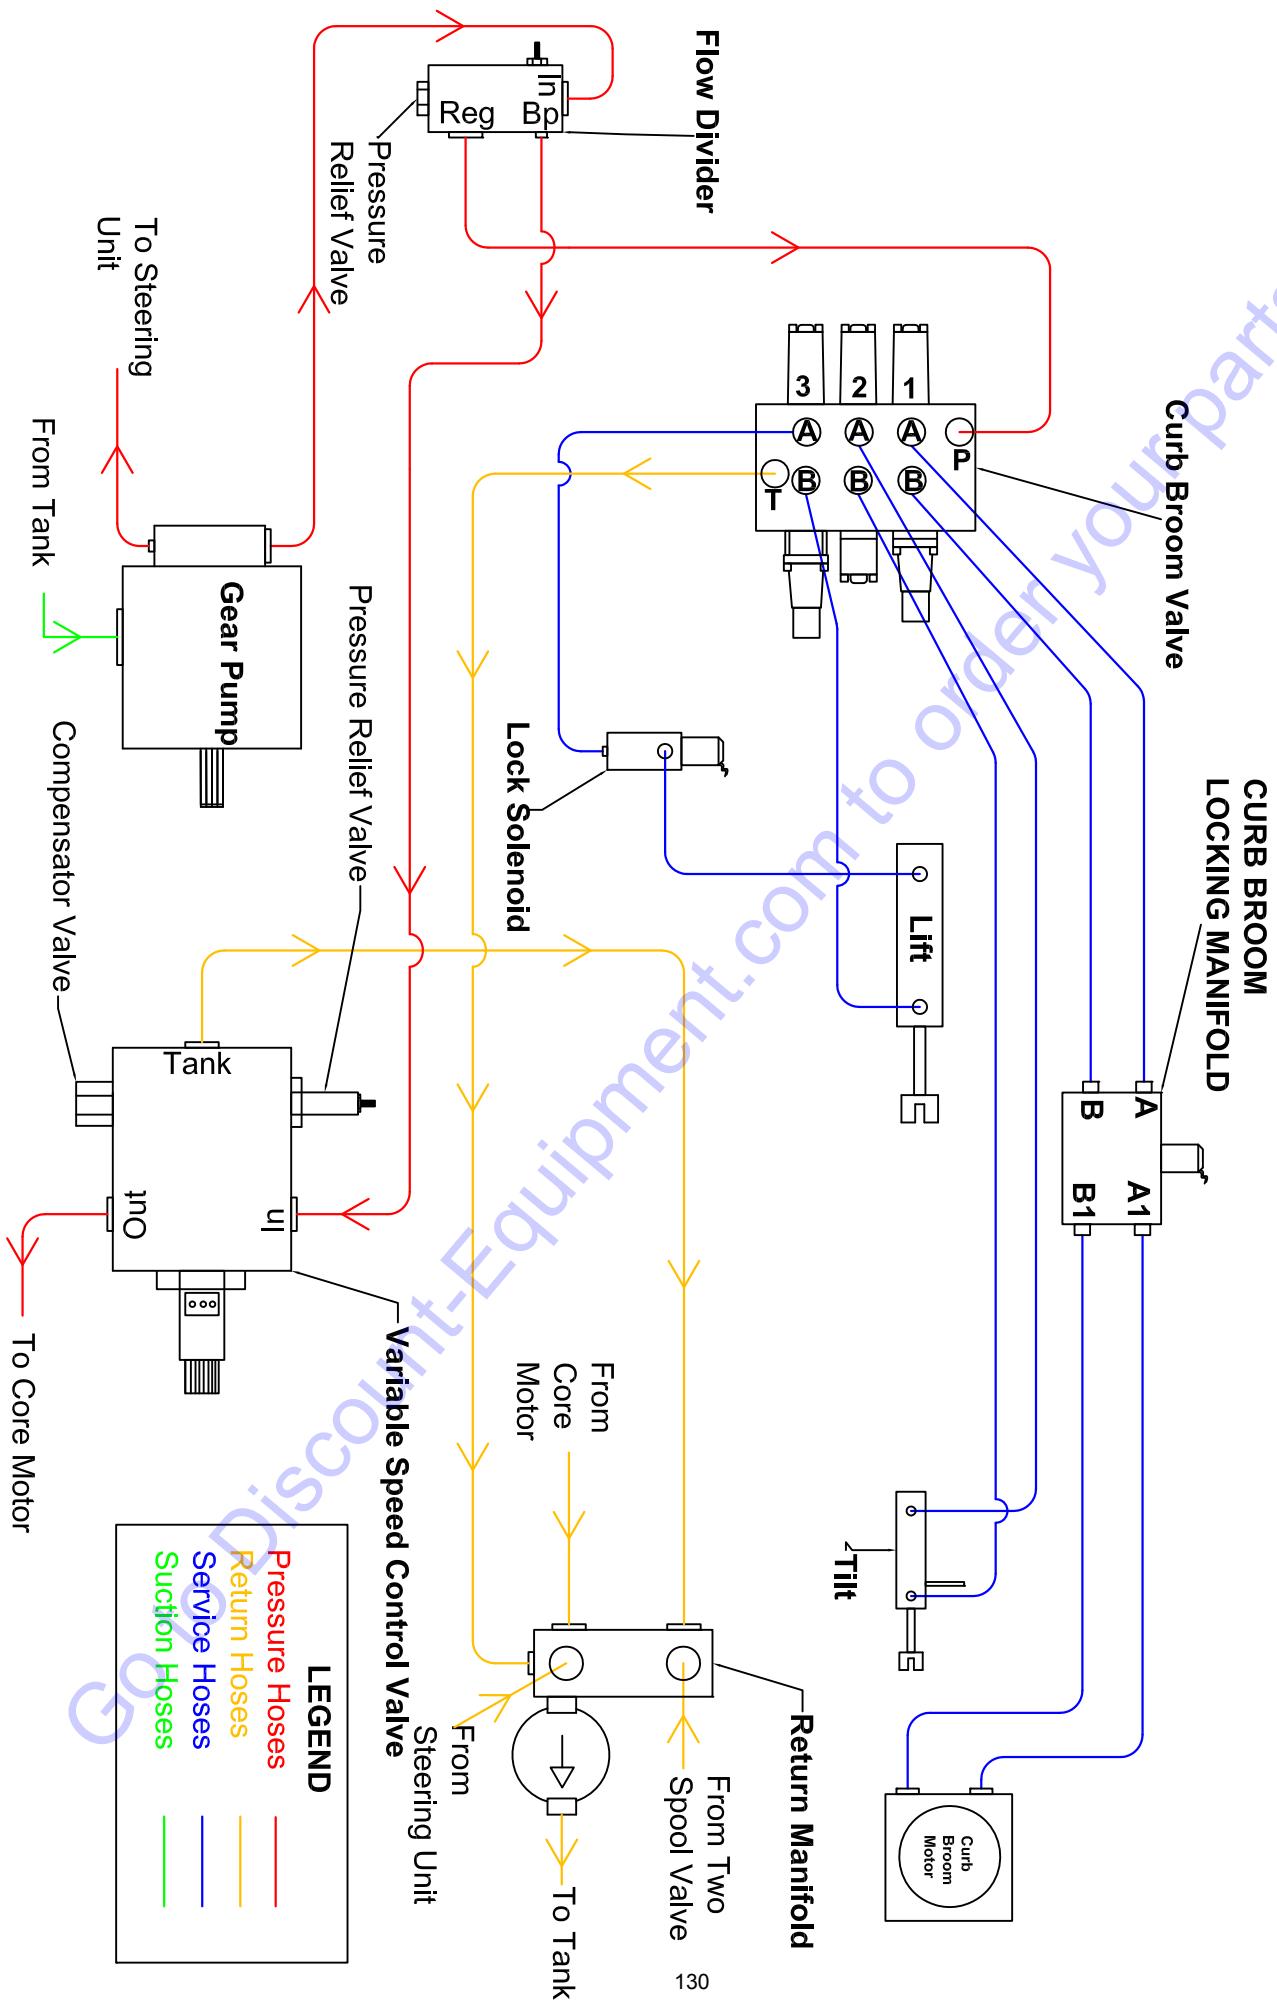


# Curb Broom Hyd.

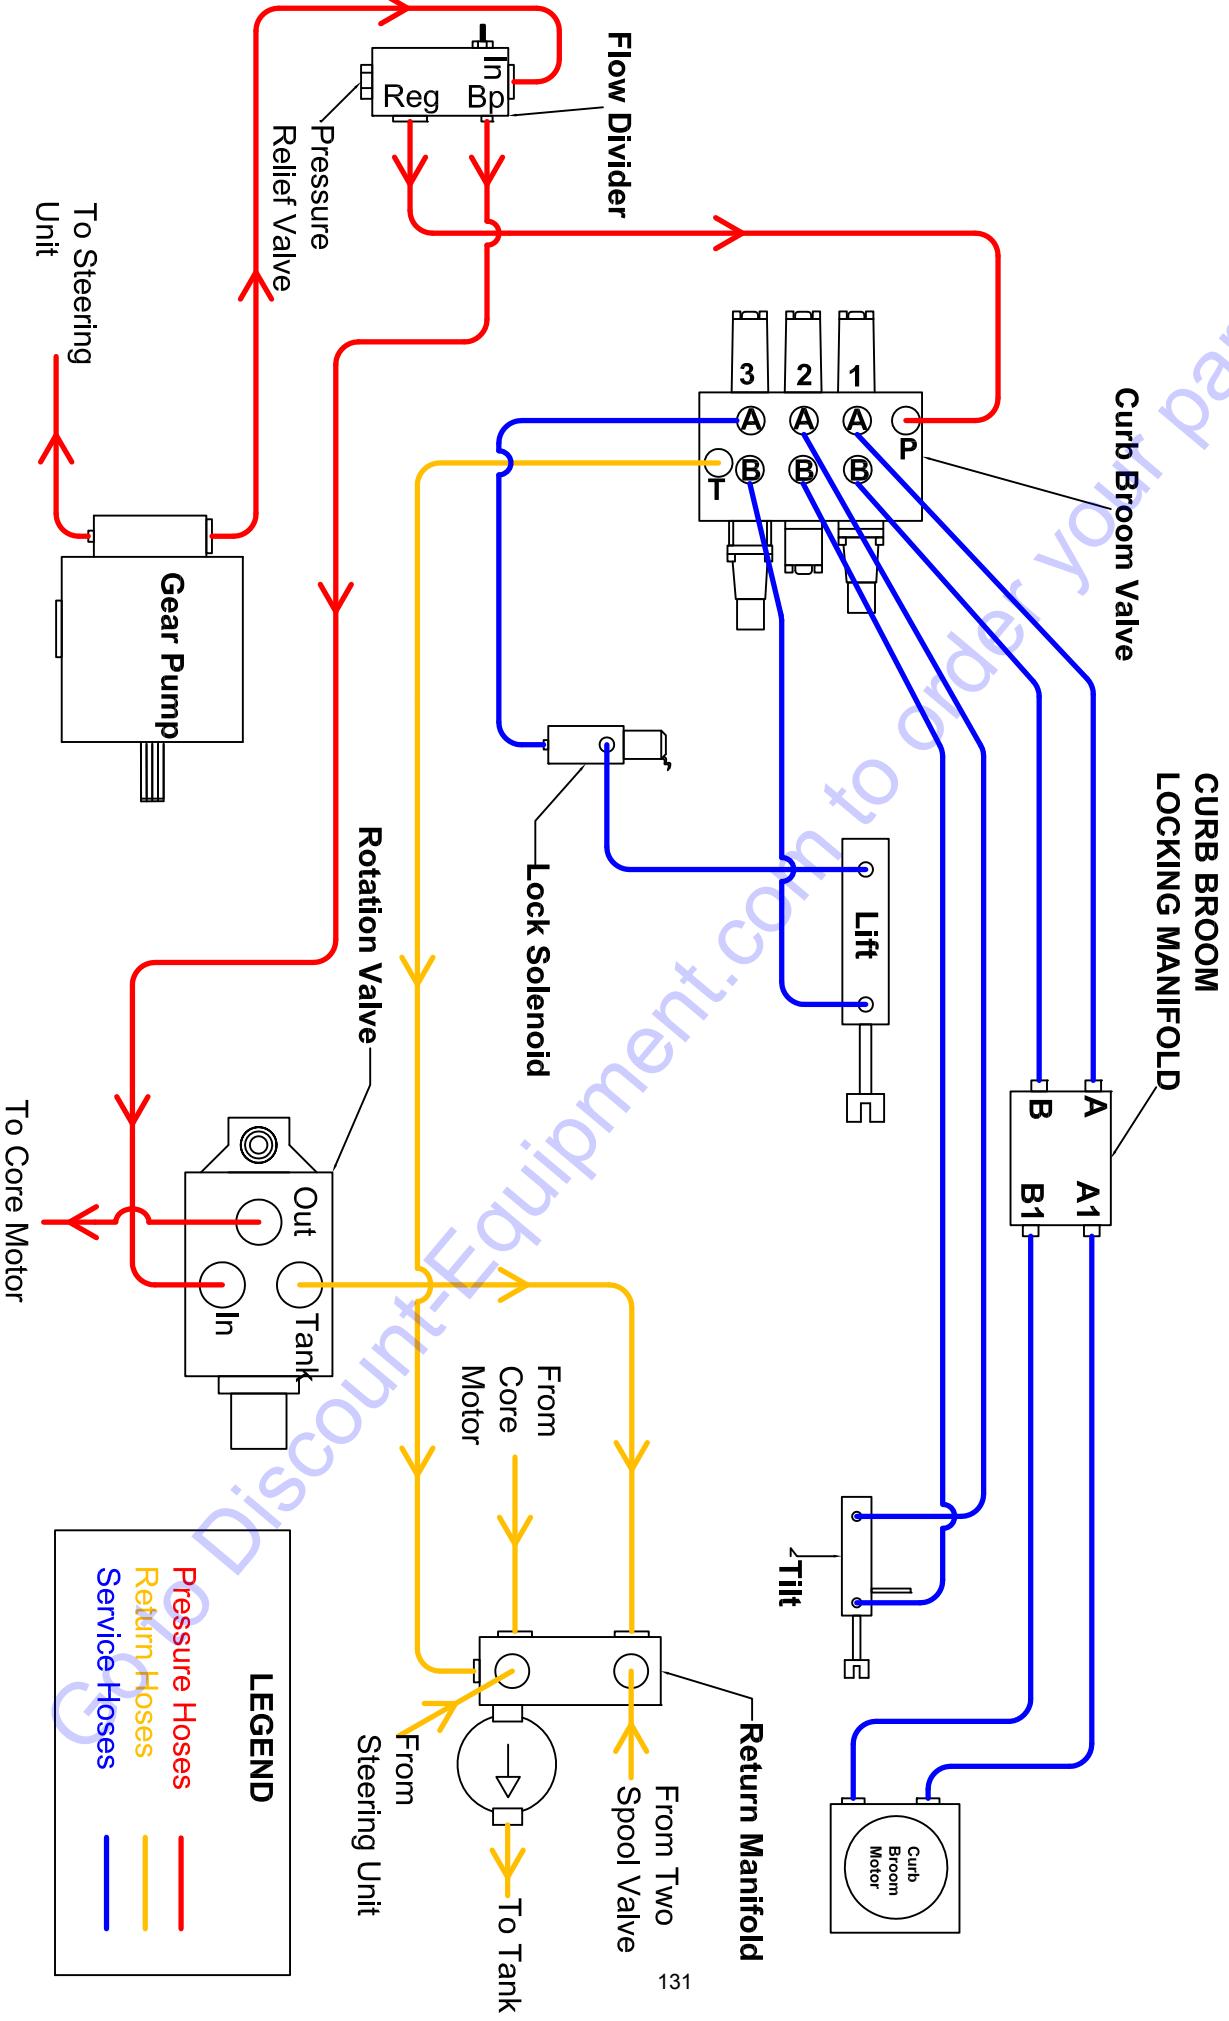


# Down Pressure Limit

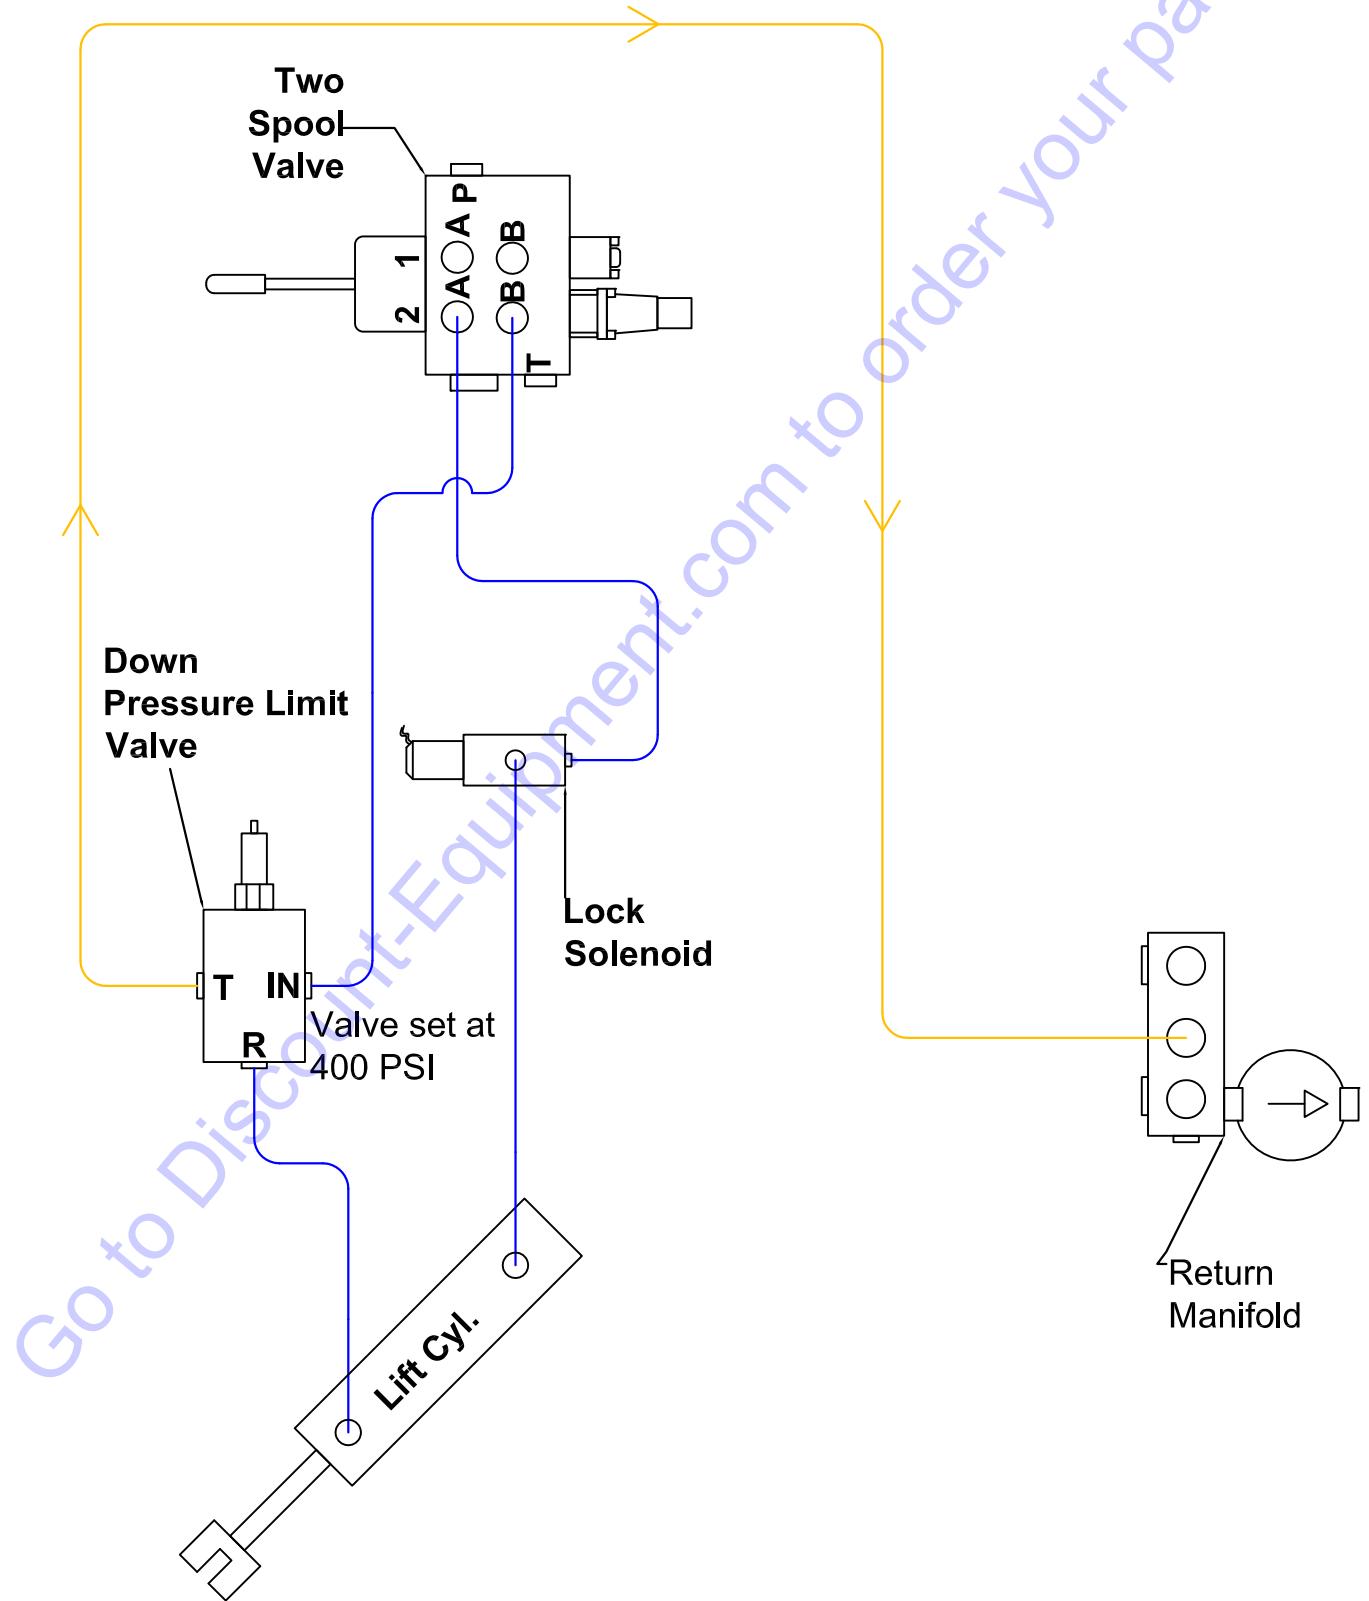


# Scaper Blade

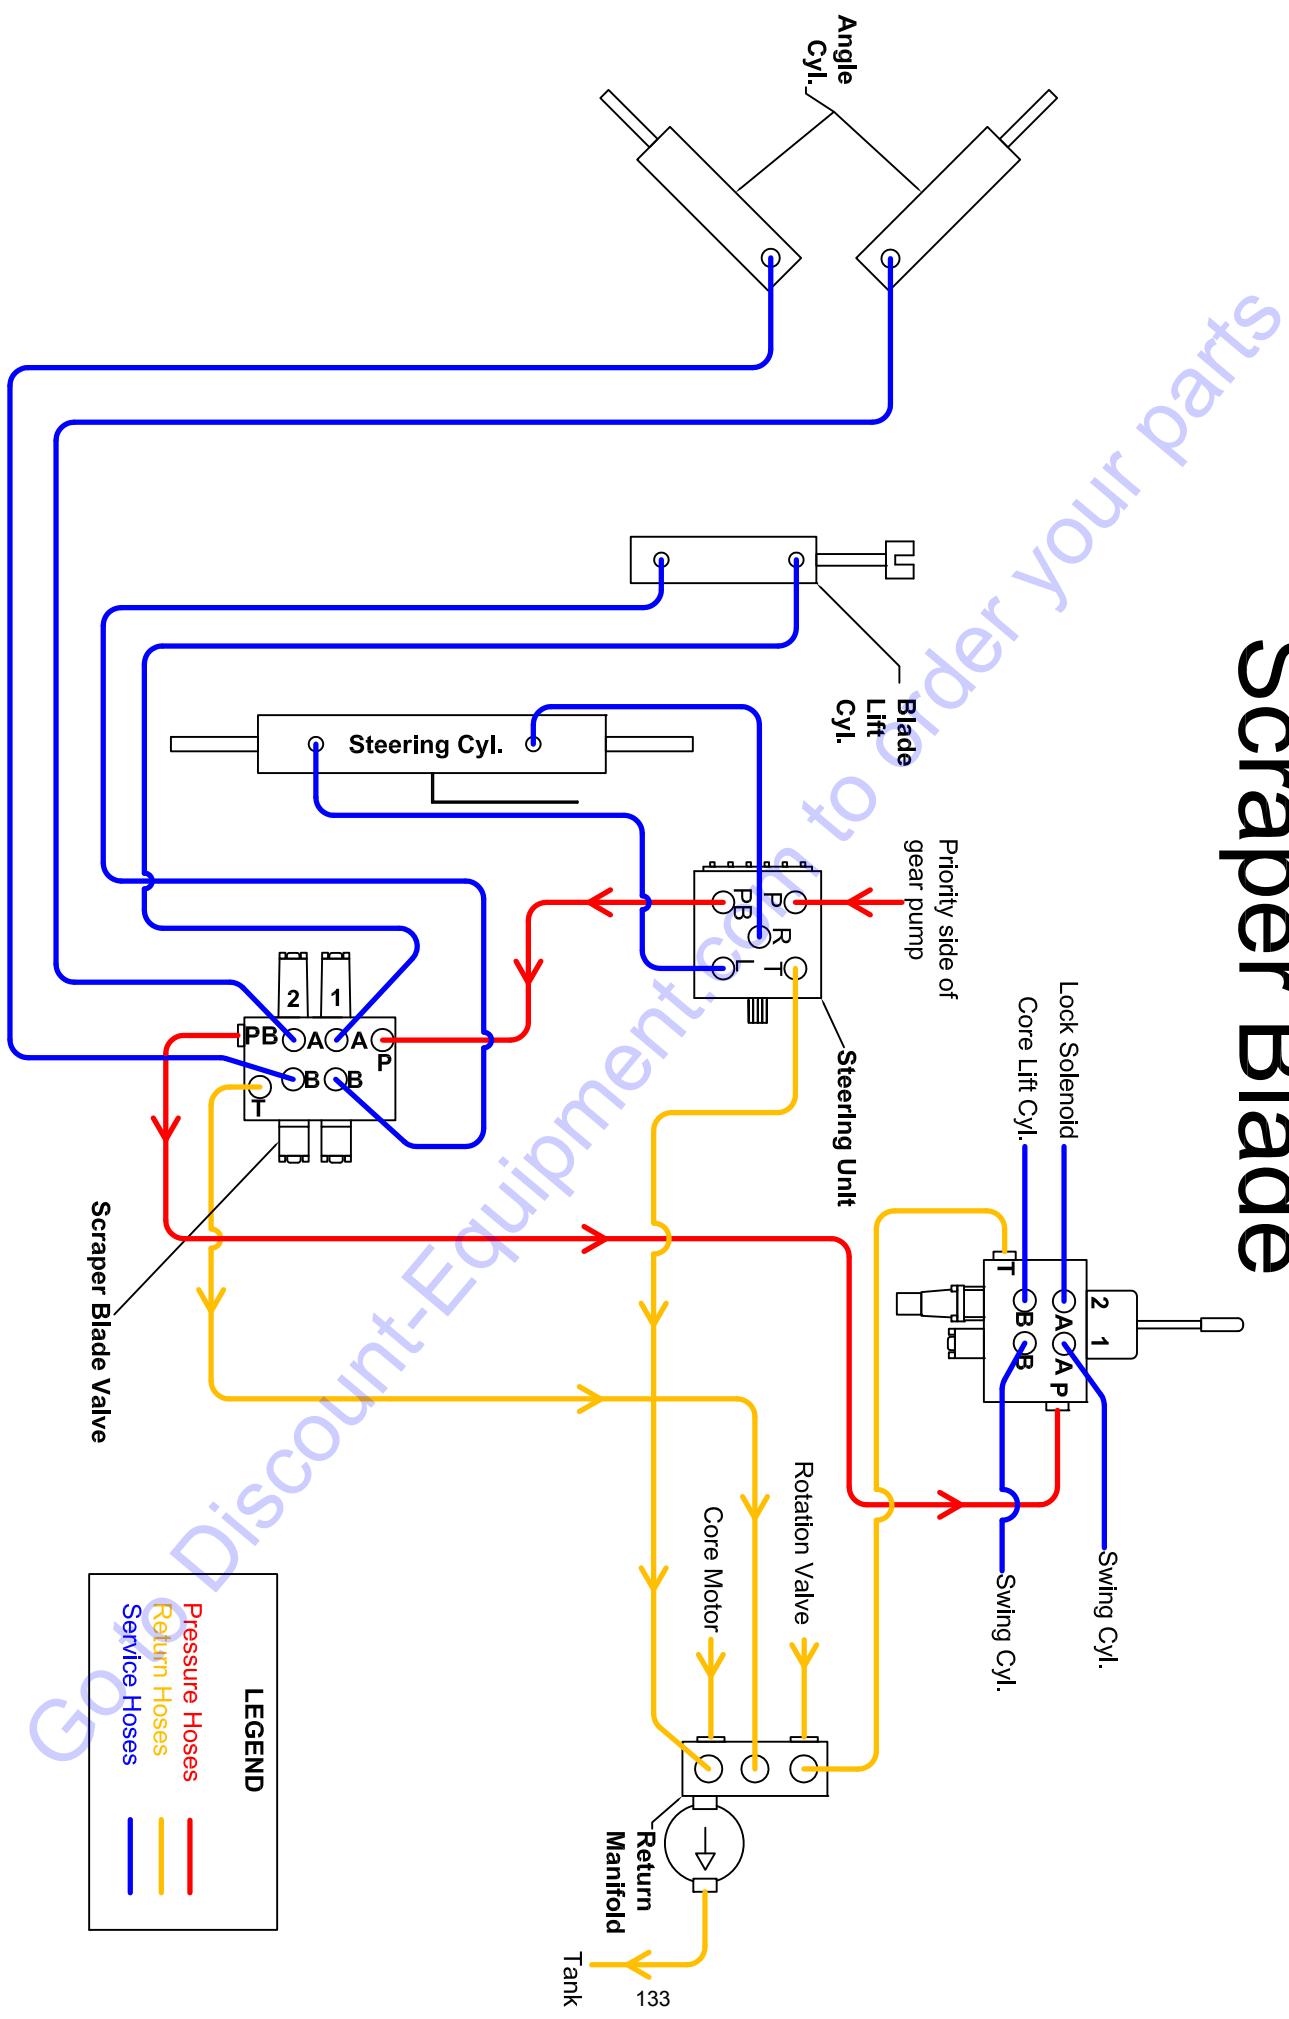

# Standard 4whl Hyd.

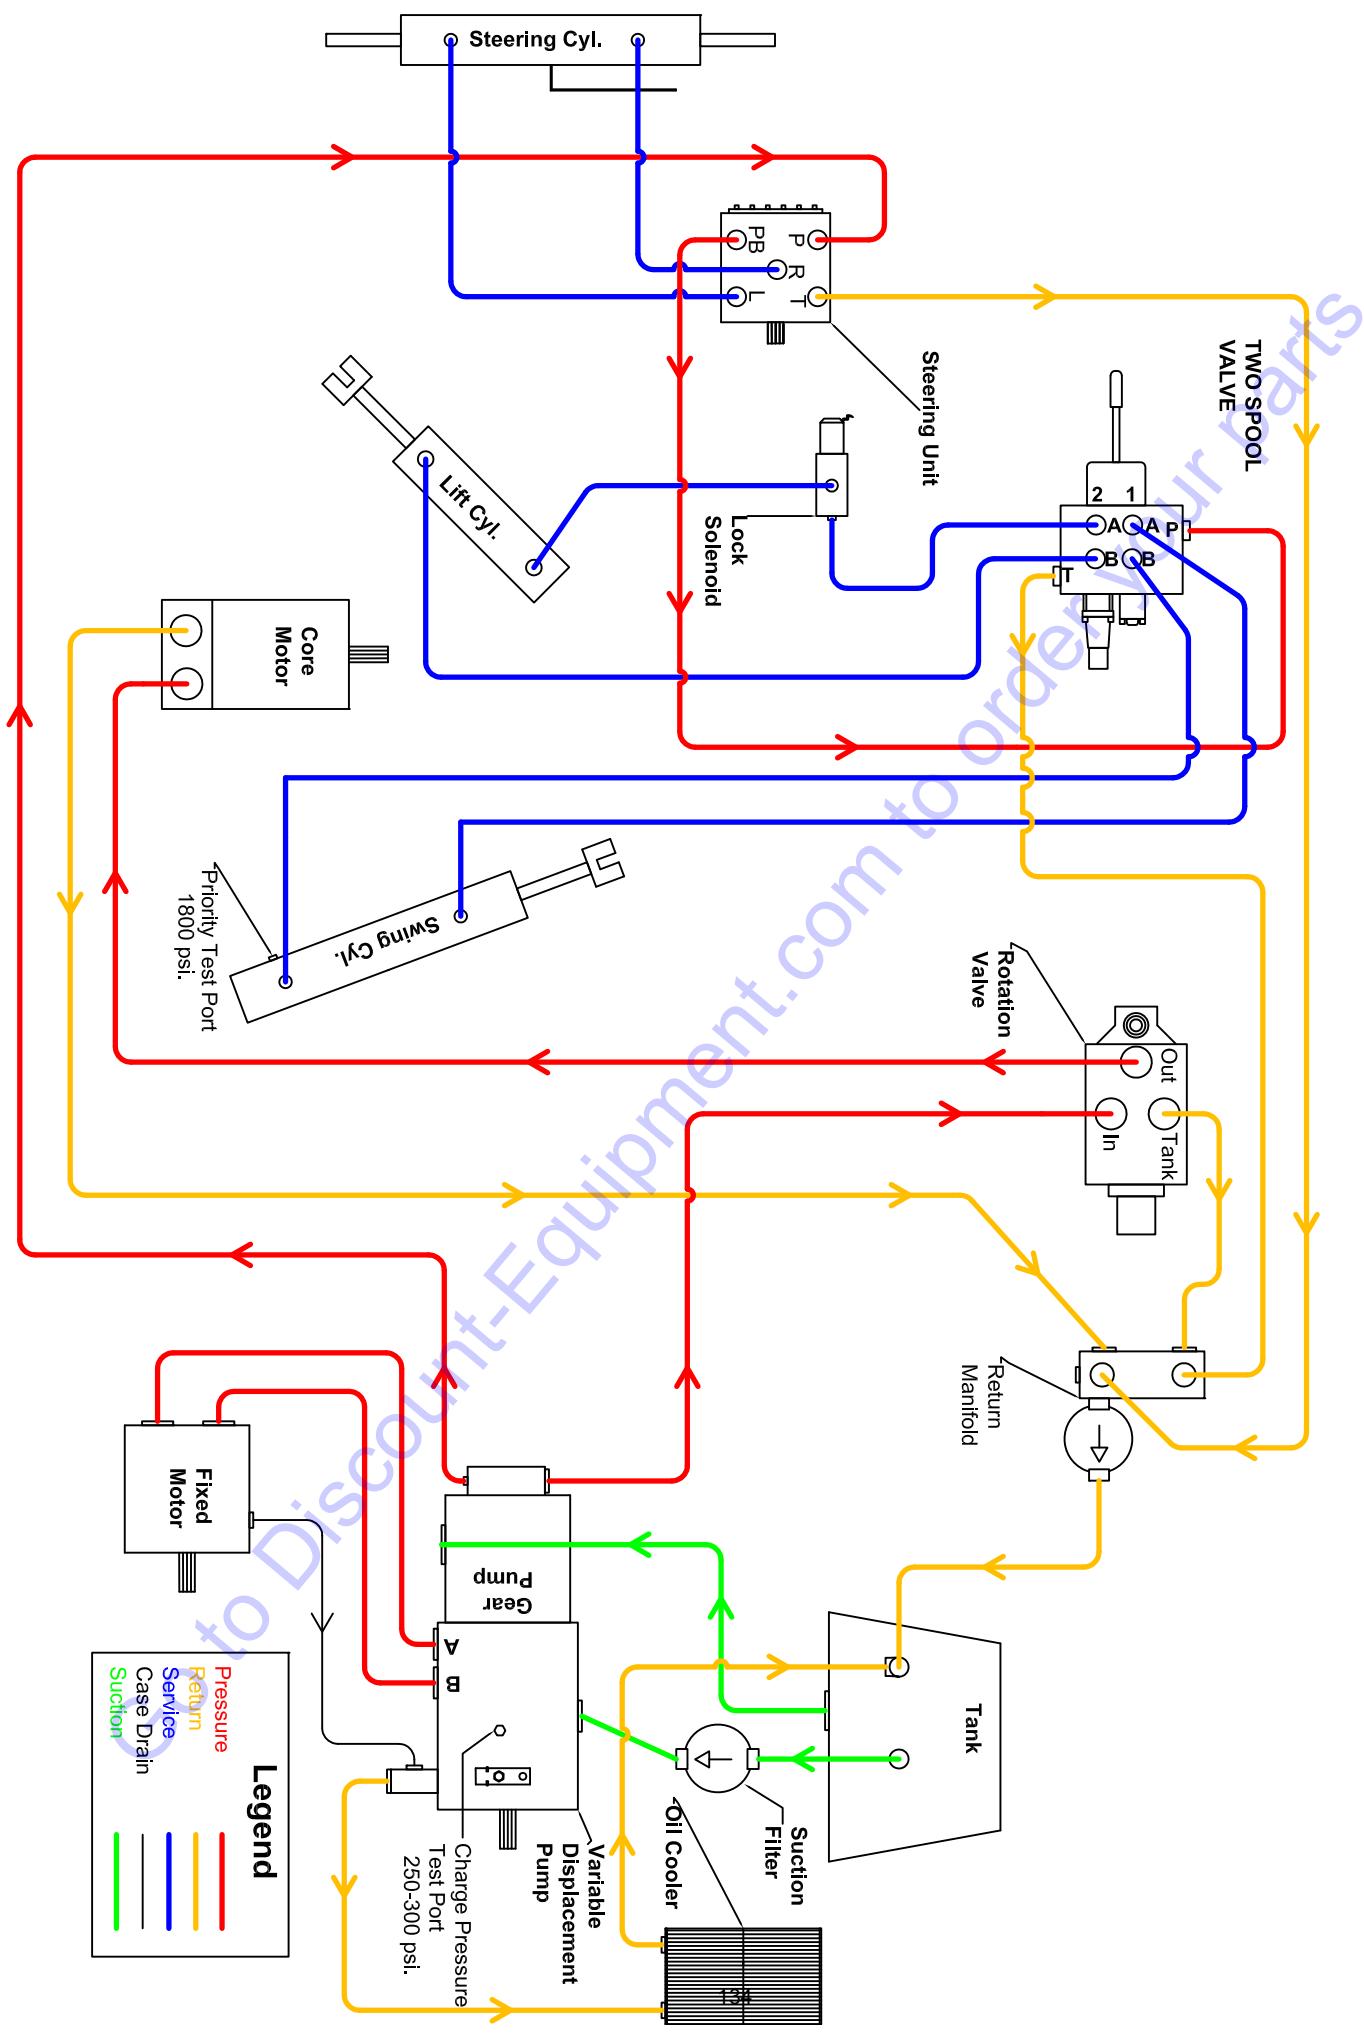

# 350 Series Hydraulics with optional Variable Brush Speed

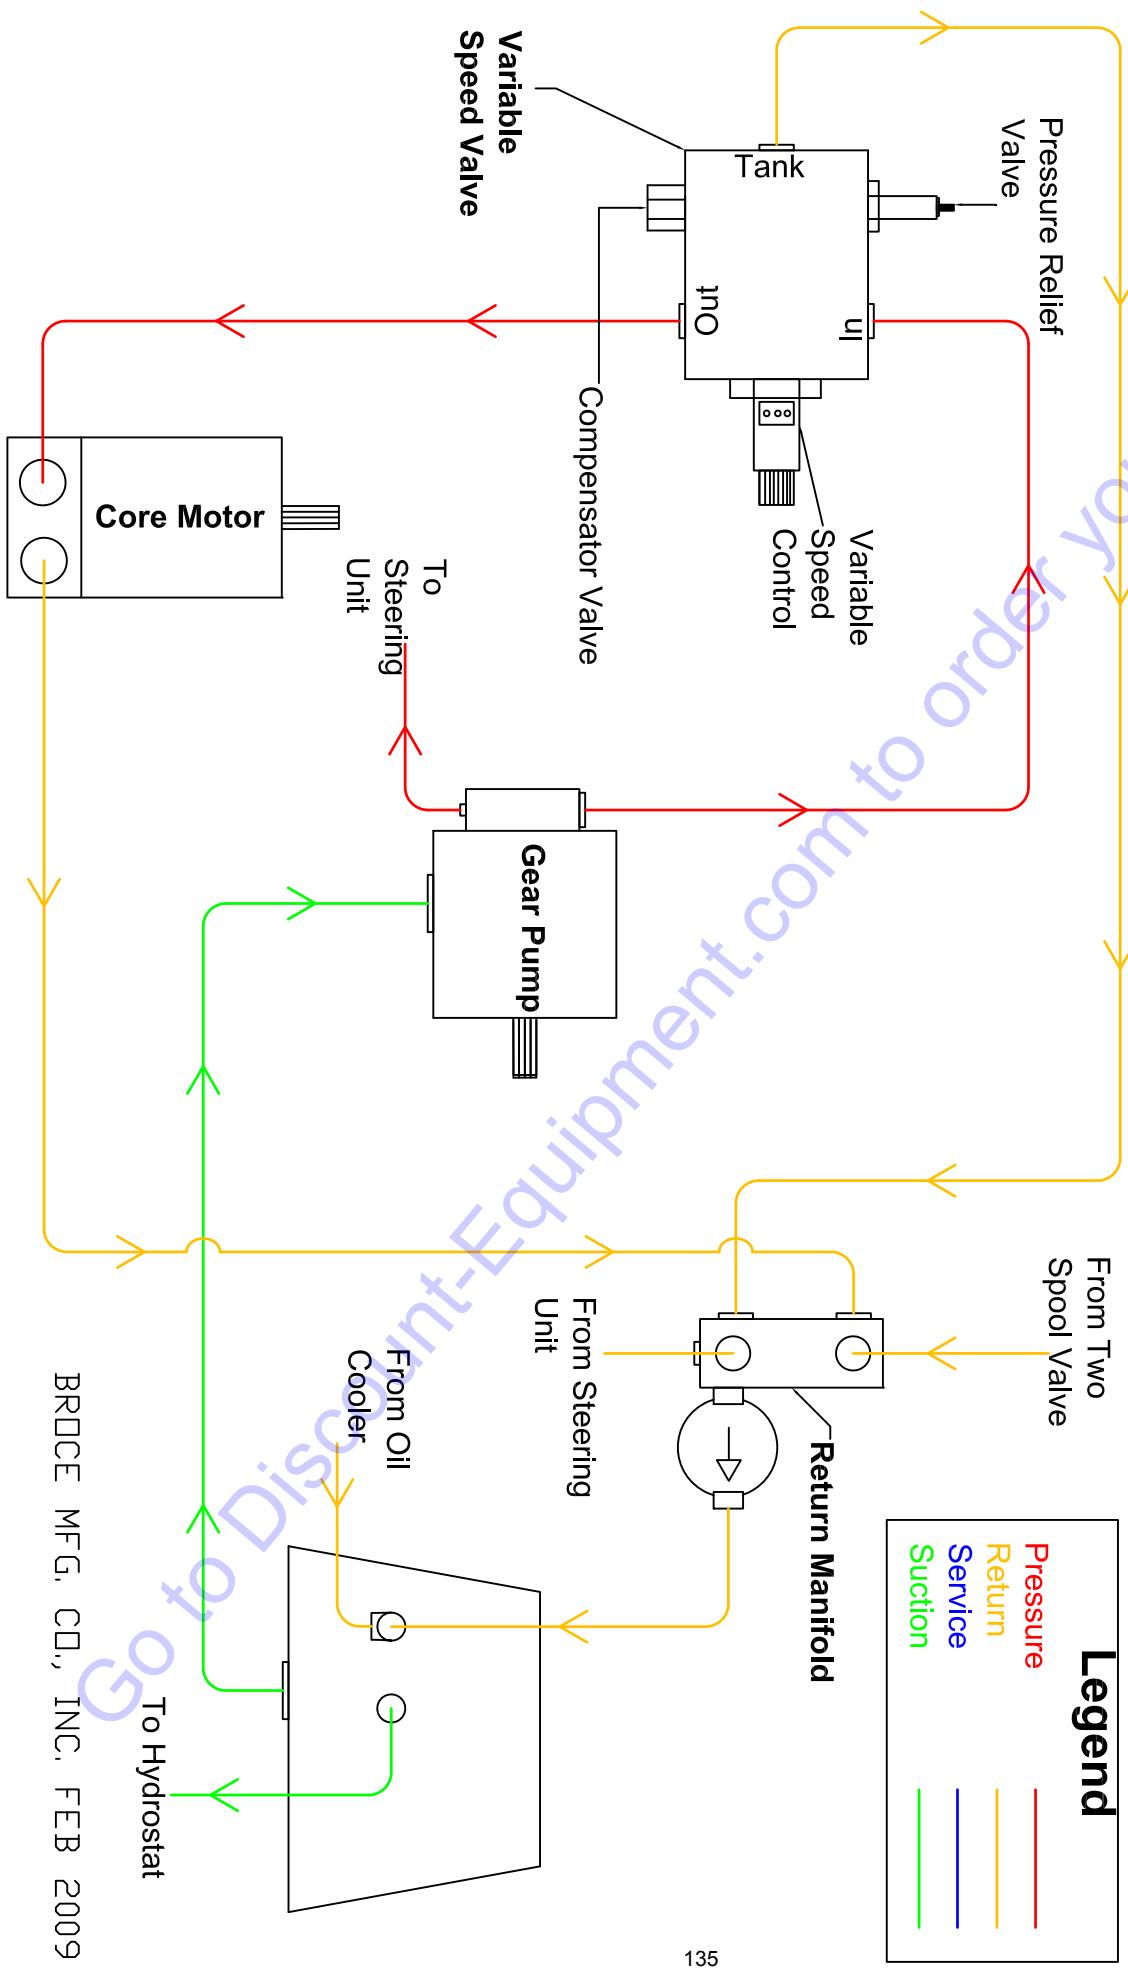

# Broce Broom Wiring Diagram


## Air Conditioner Wiring

To: Engine Control Panel

Red 14g

Black 14g

Evaporator Housing

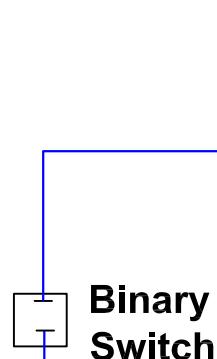

**Binary Switch**

Blue 16g

**Thermostatic switch**

To  
Compressor

**Blower Switch**

Yellow 16g

Red 16g


Orange 16g

Black 16g

**Blower Motor**


# Broce Broom Wiring Diagram

## Engine Control Panel - CR Model With Cab

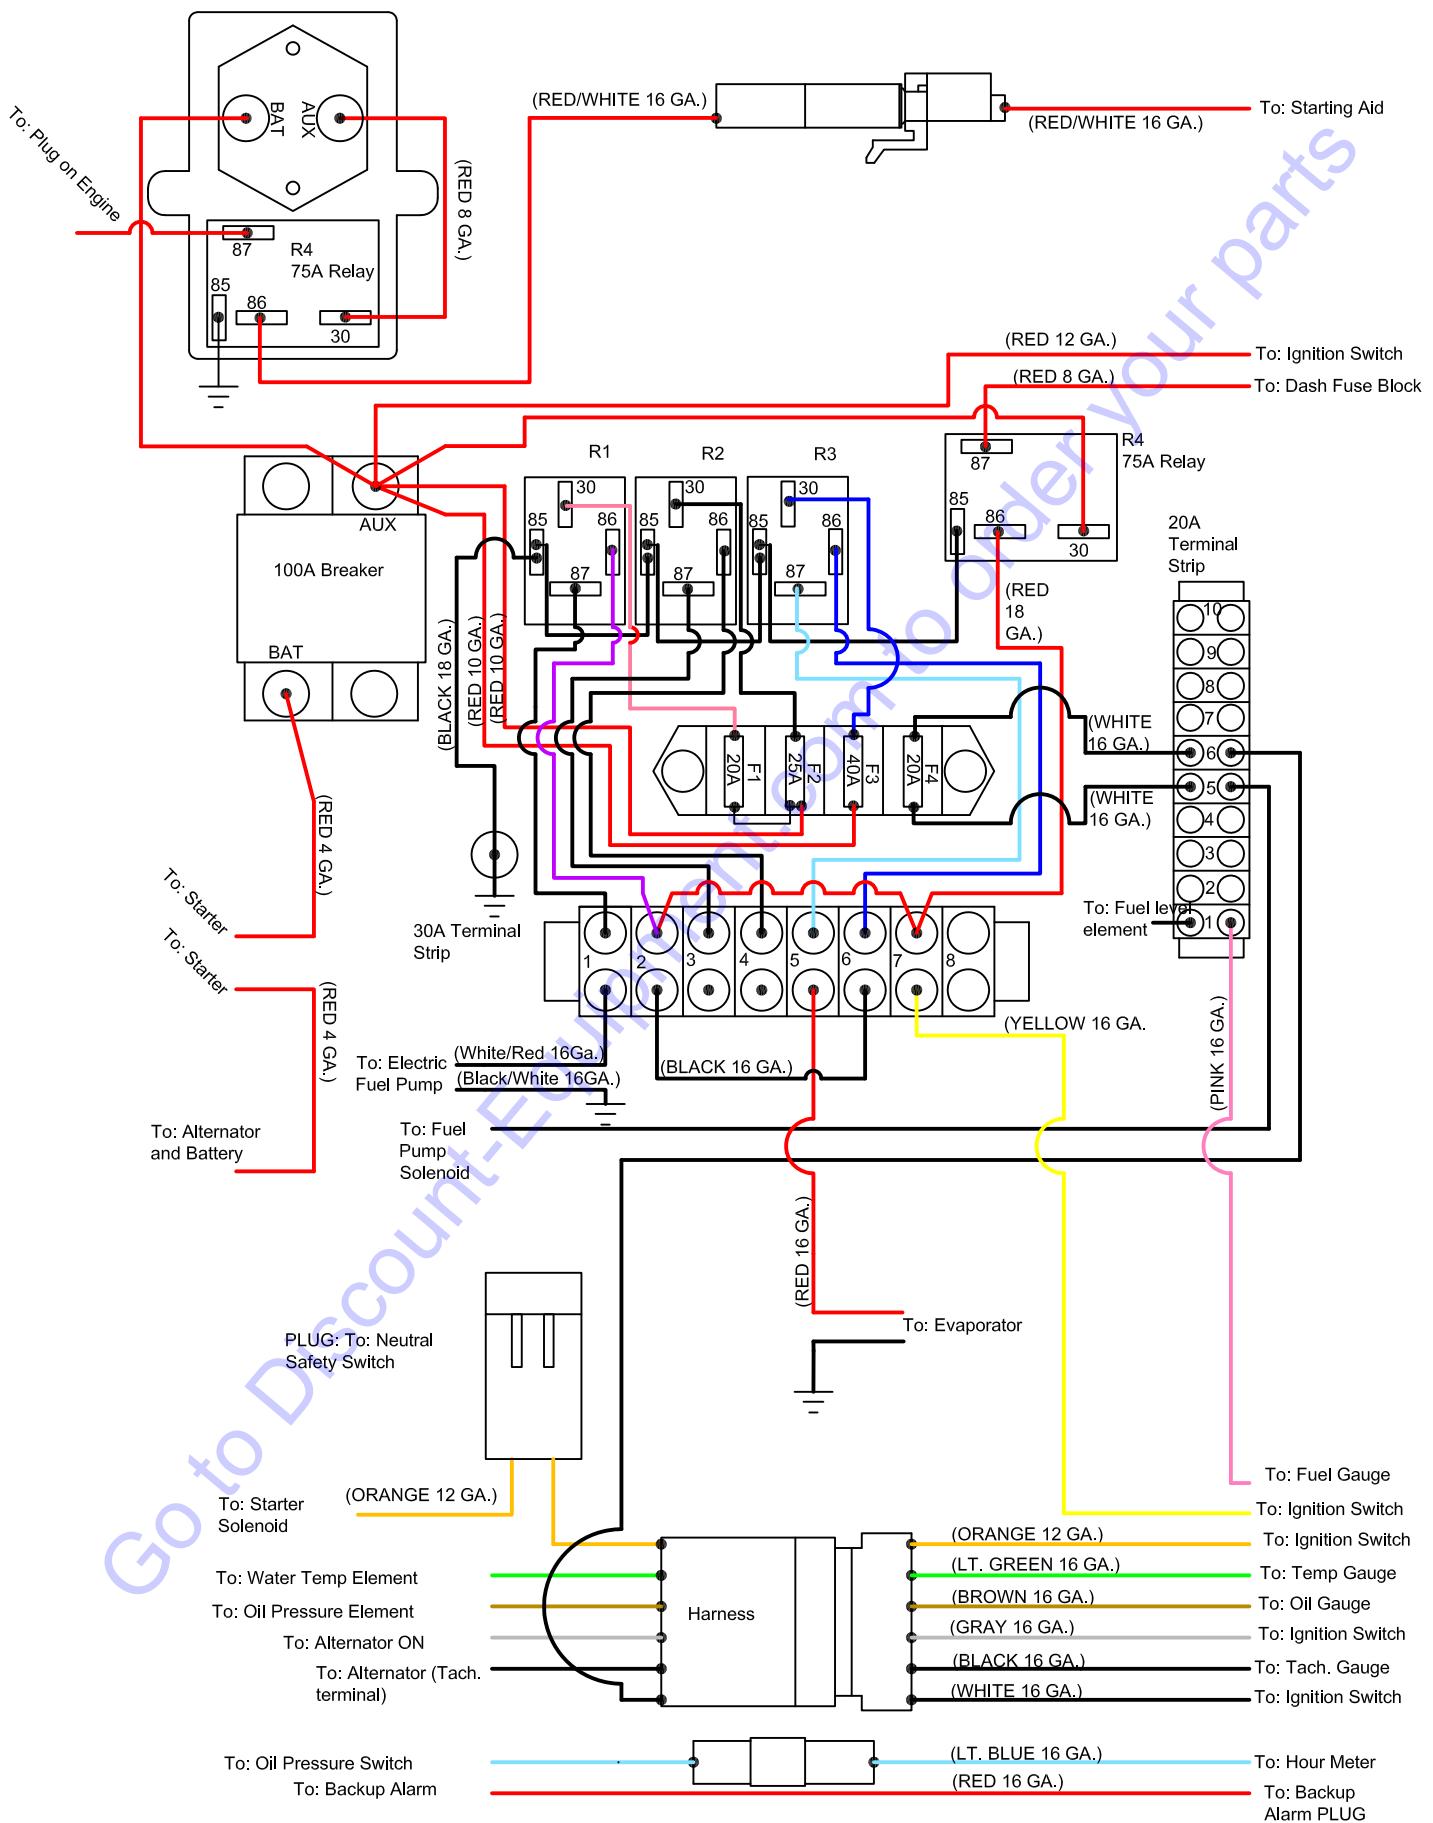


# Broce Broom Wiring Diagram

## Engine Control Panel - CR Model With Canopy

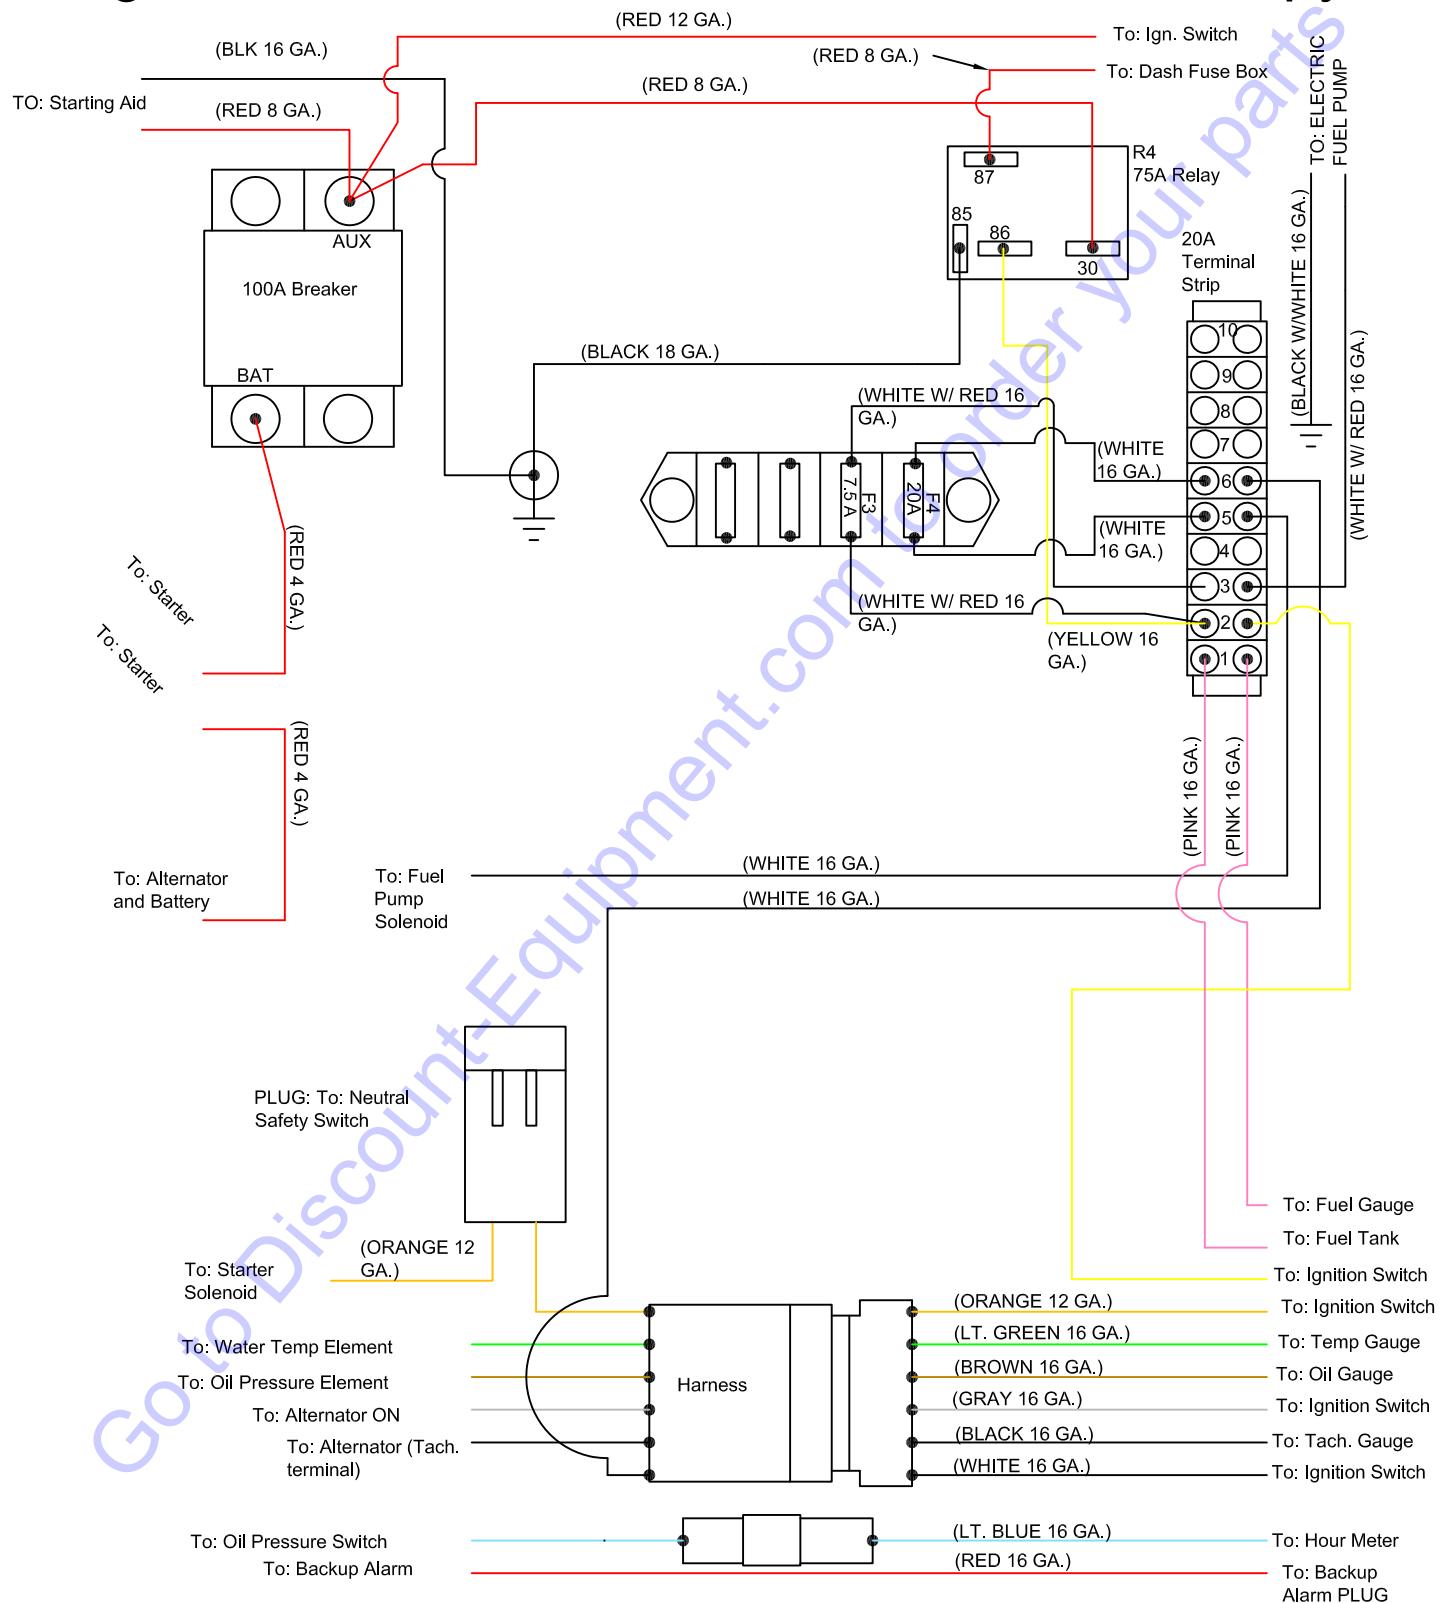


# Broce Broom Wiring Diagram

## Engine Control Panel - KR Model With Cab

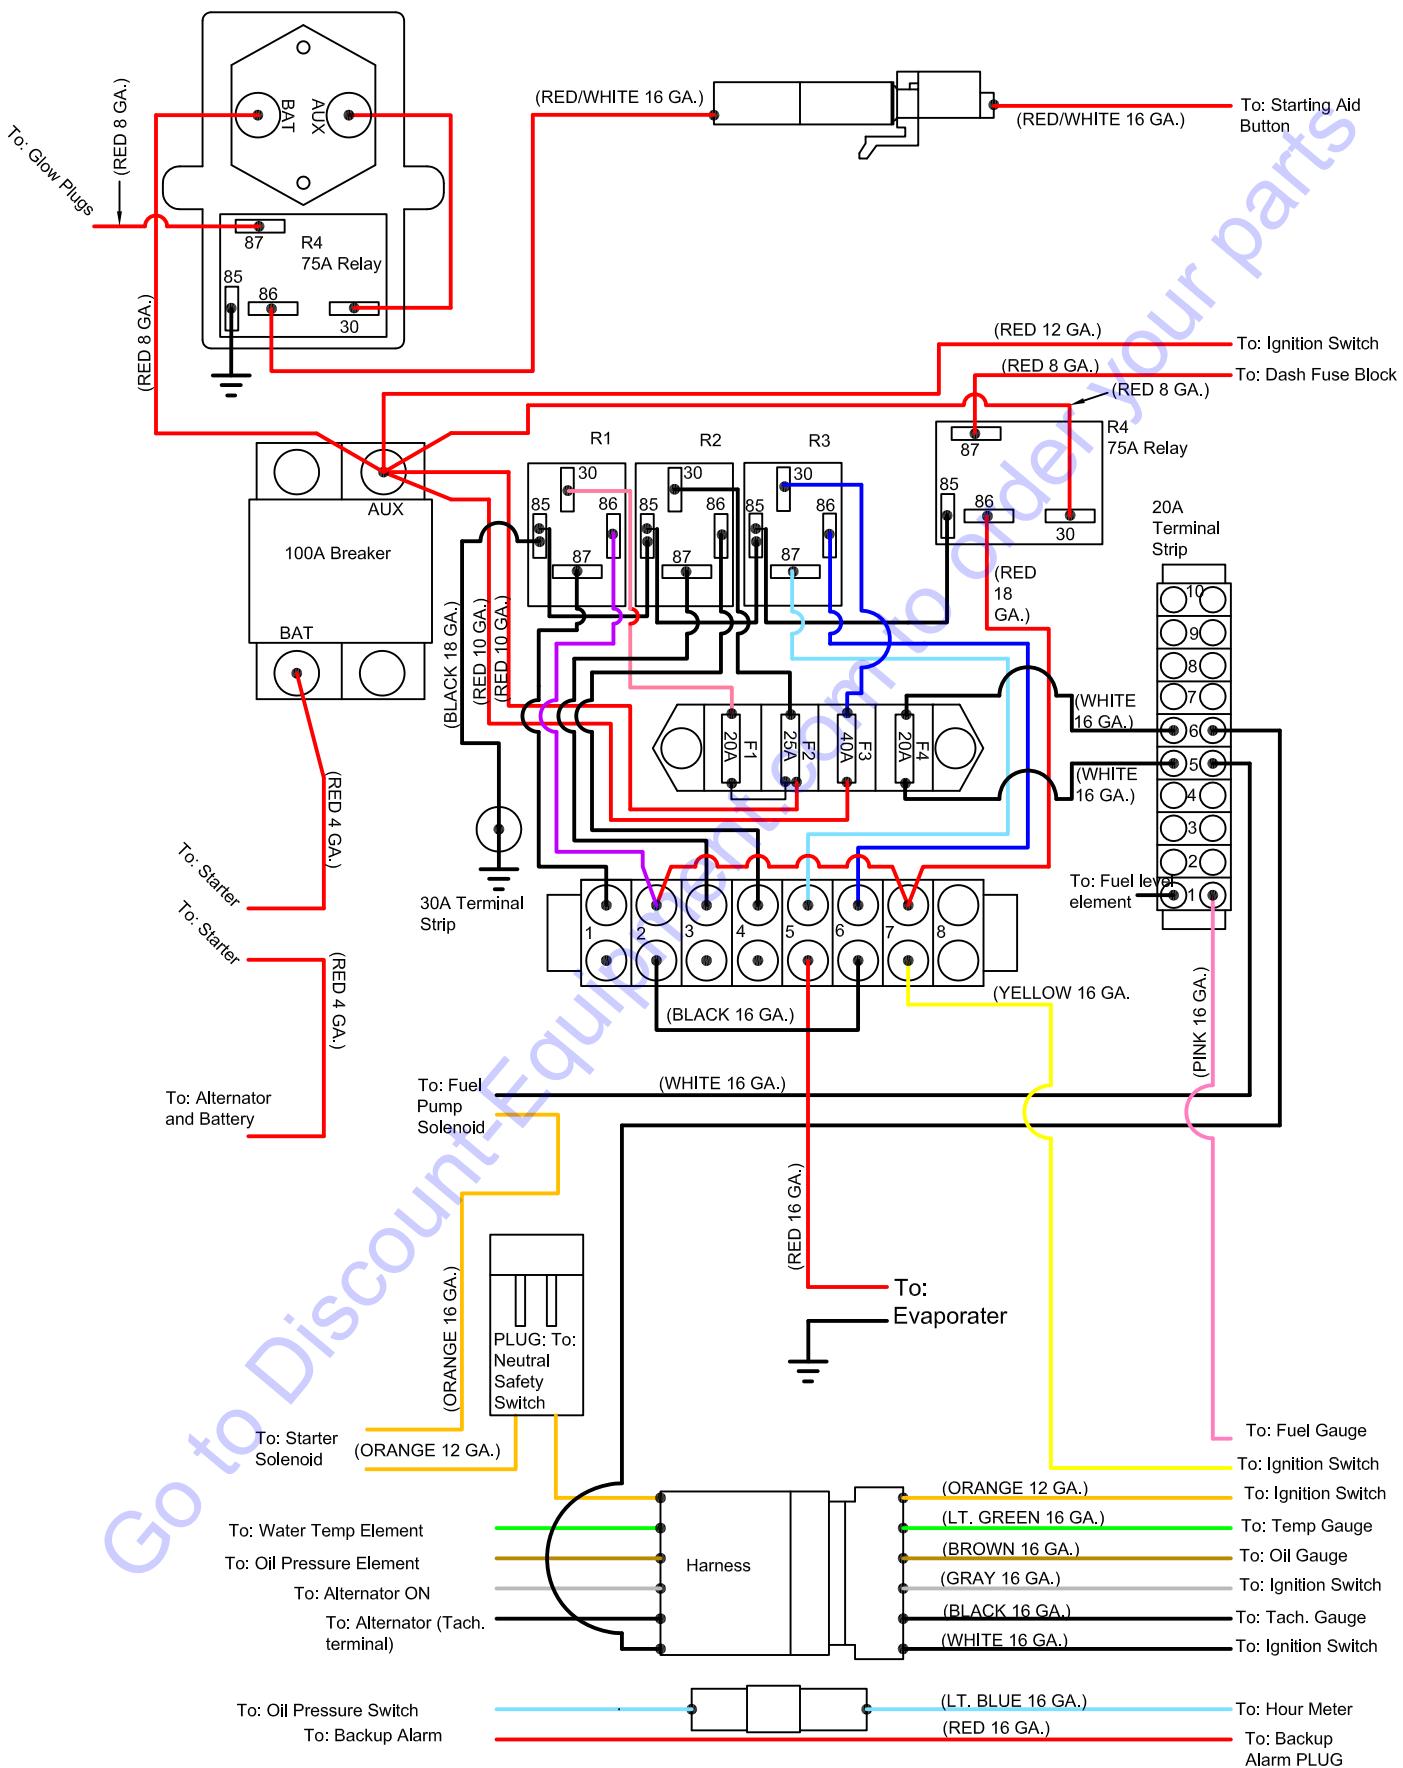


# Broce Broom Wiring Diagram

## Engine Control Panel - KR Model With Canopy

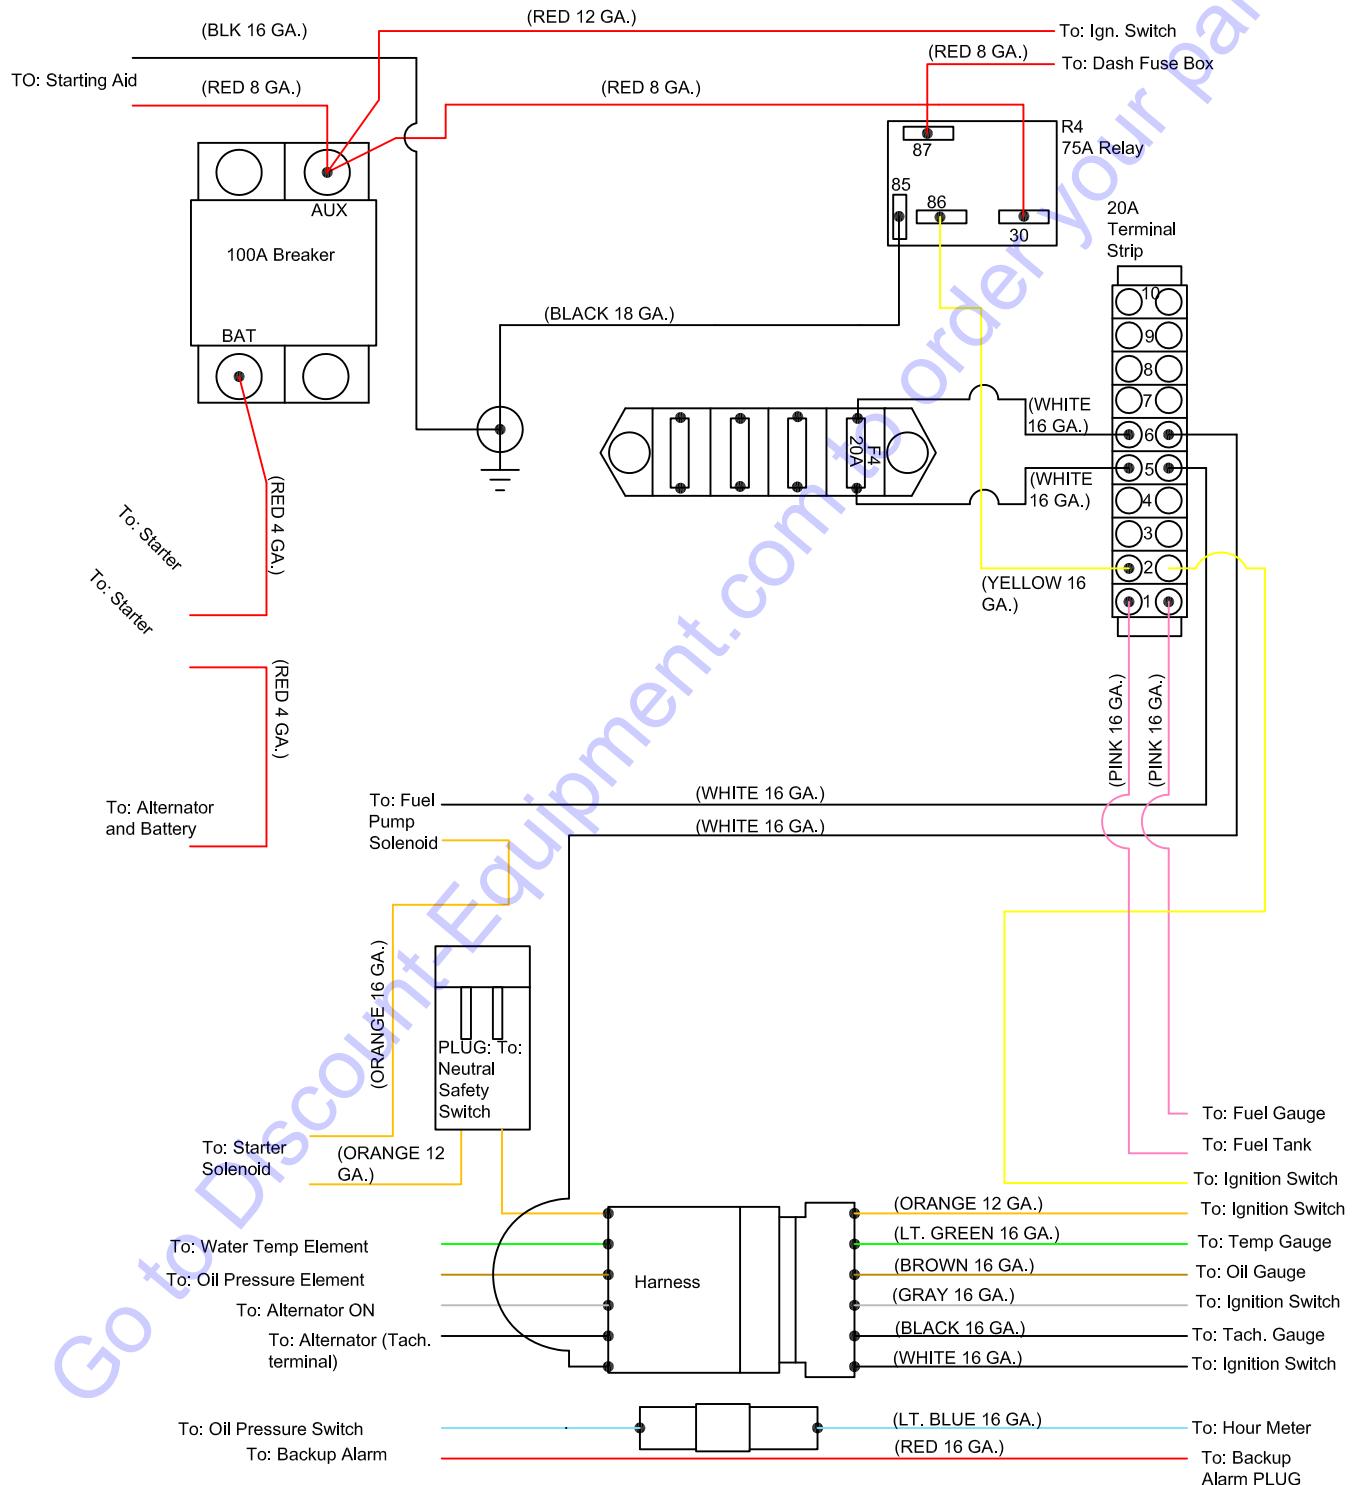


# Broce Broom Wiring Diagram

## Engine Control Panel - RCT Model With Cab

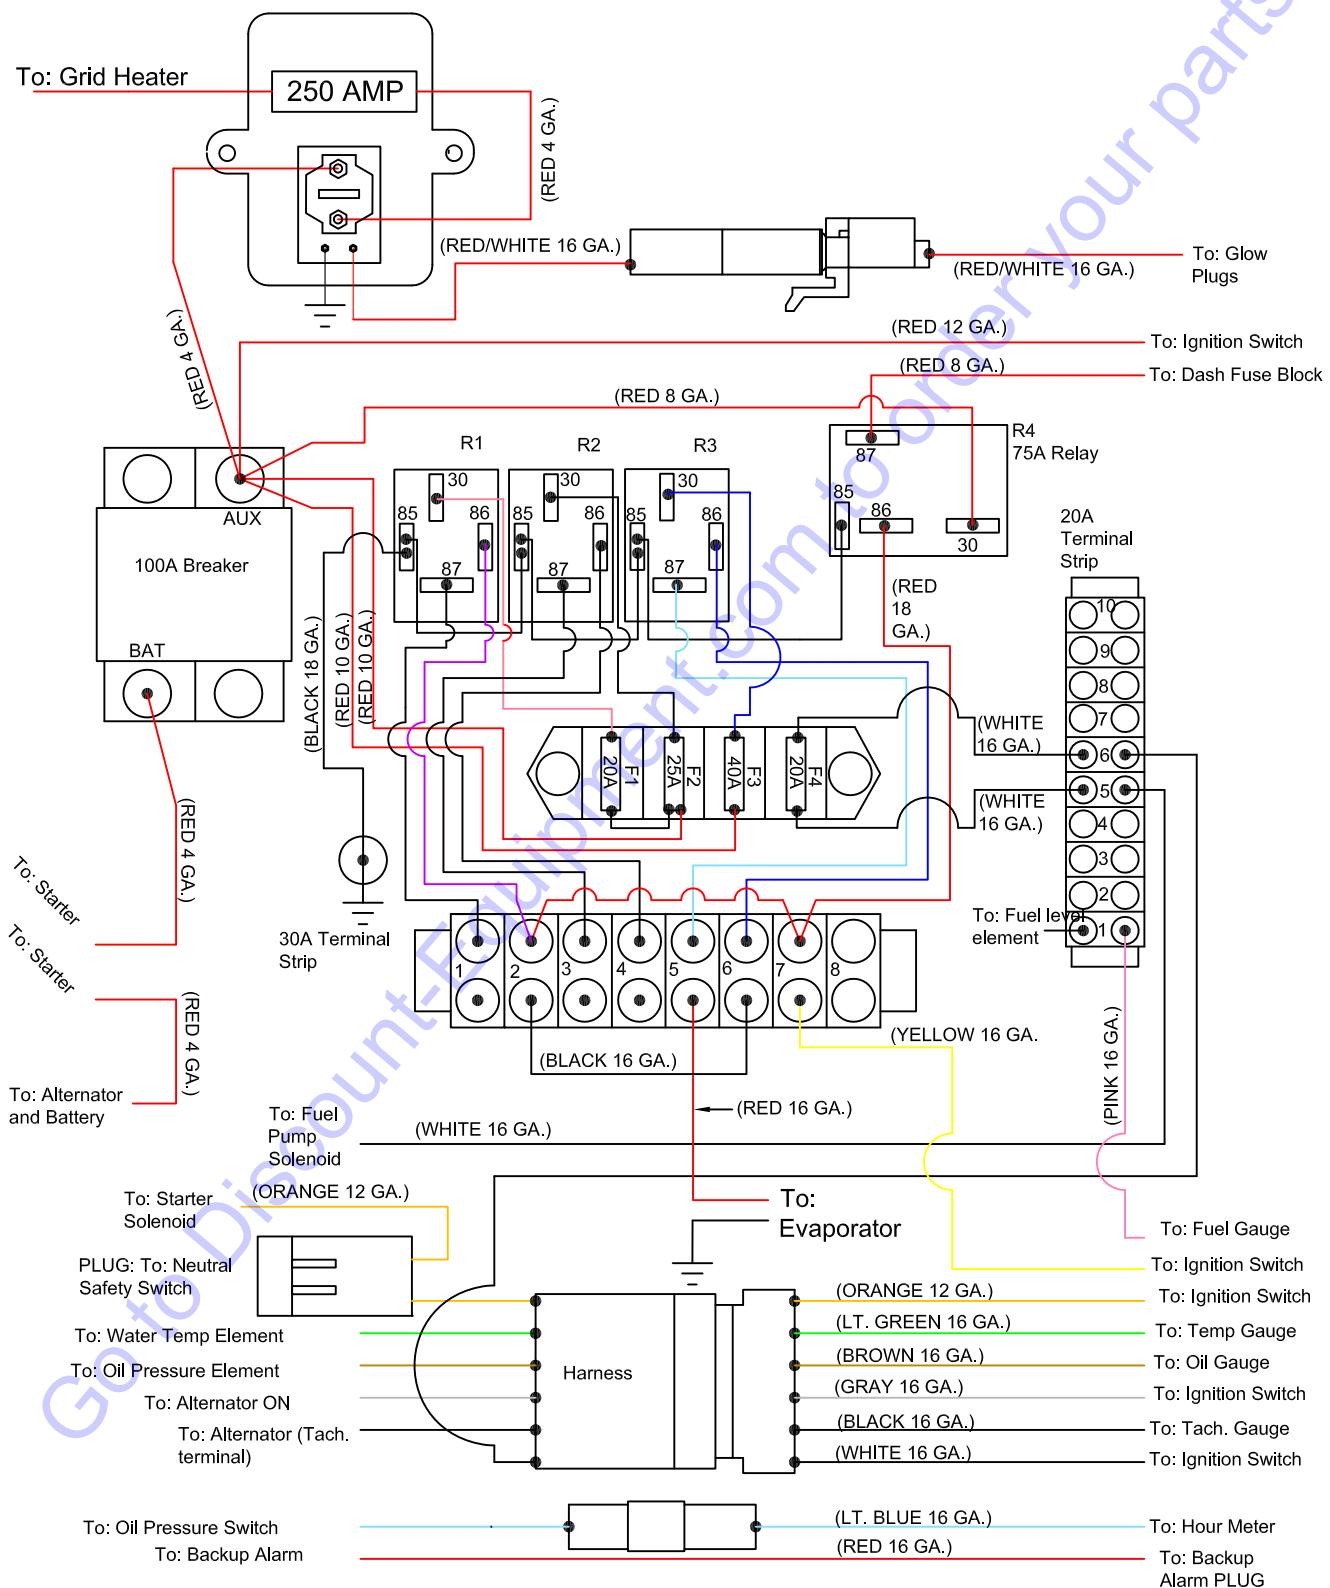


# Broce Broom Wiring Diagram

## Engine Control Panel - RCT Model With Canopy

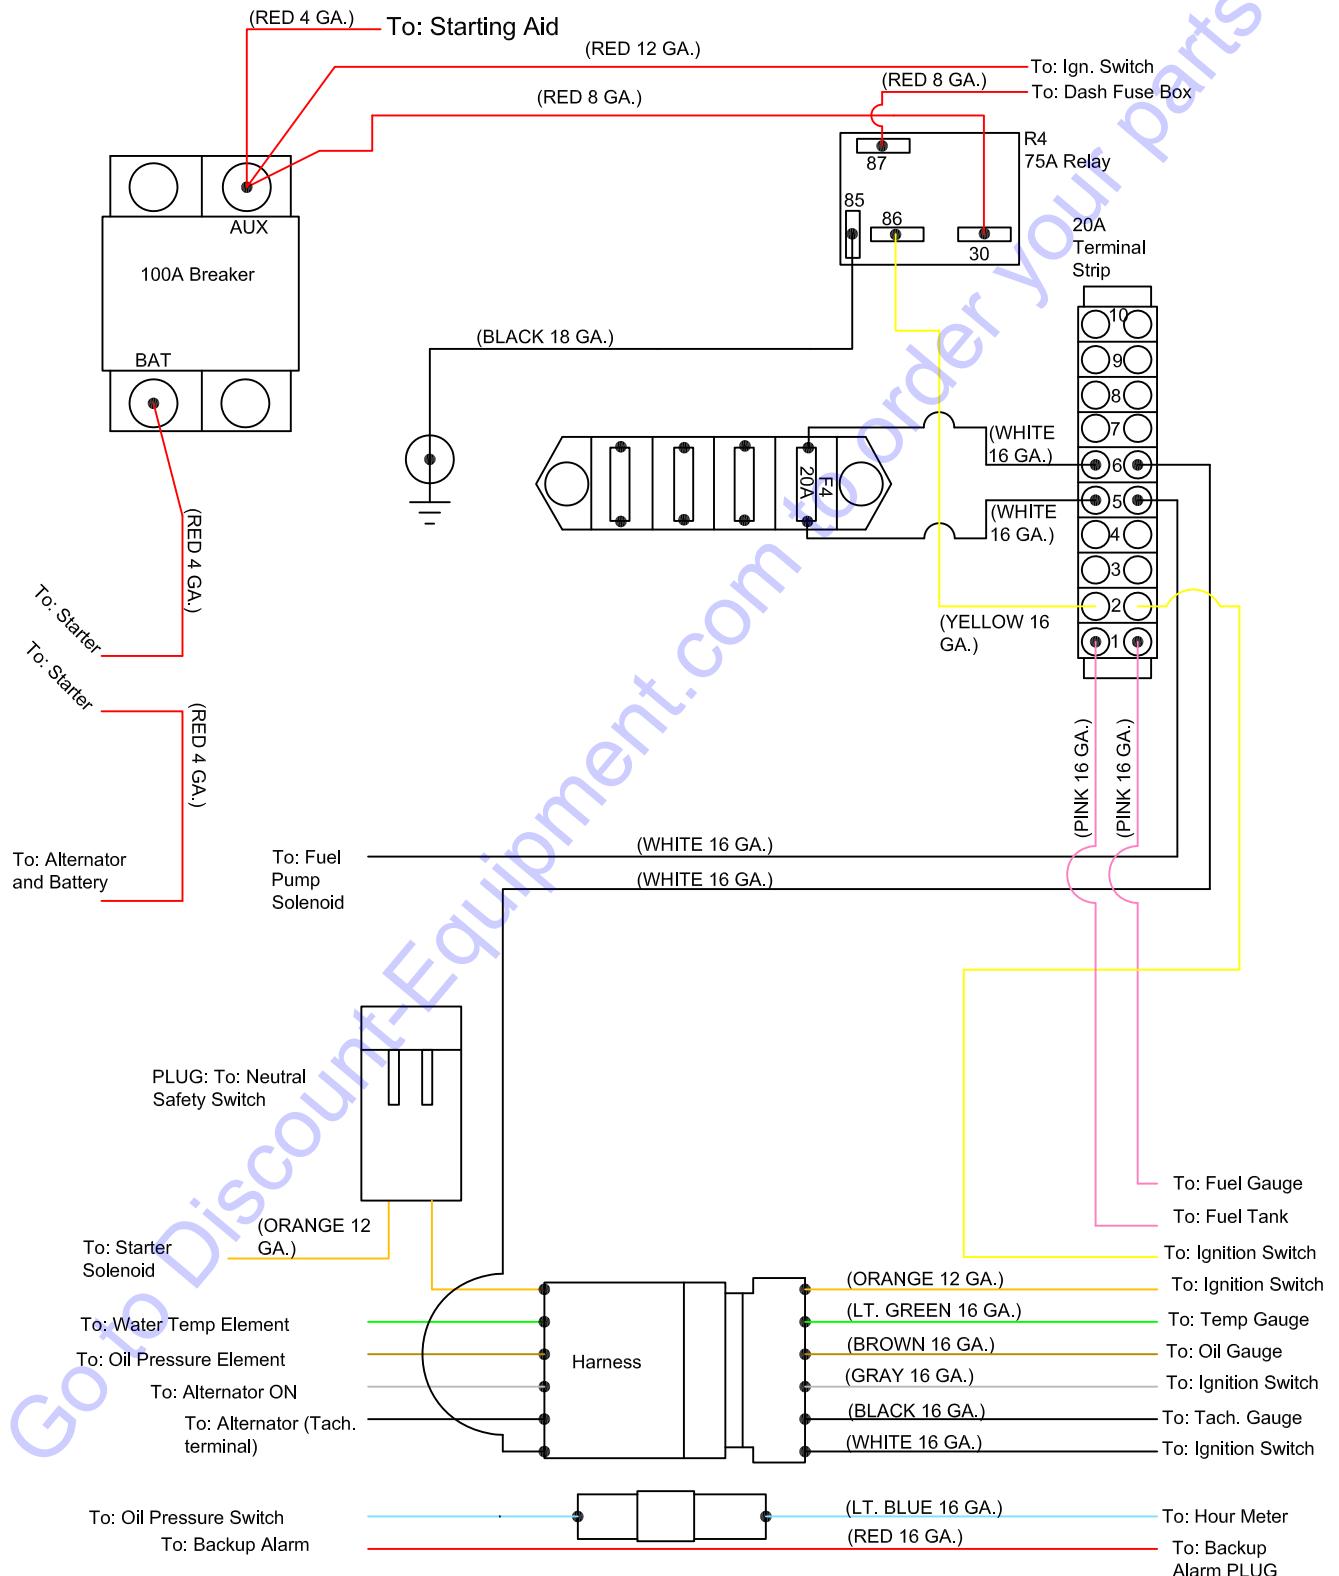


# Broce Broom Wiring Diagram

## Engine Control Panel - RJT Model With Cab

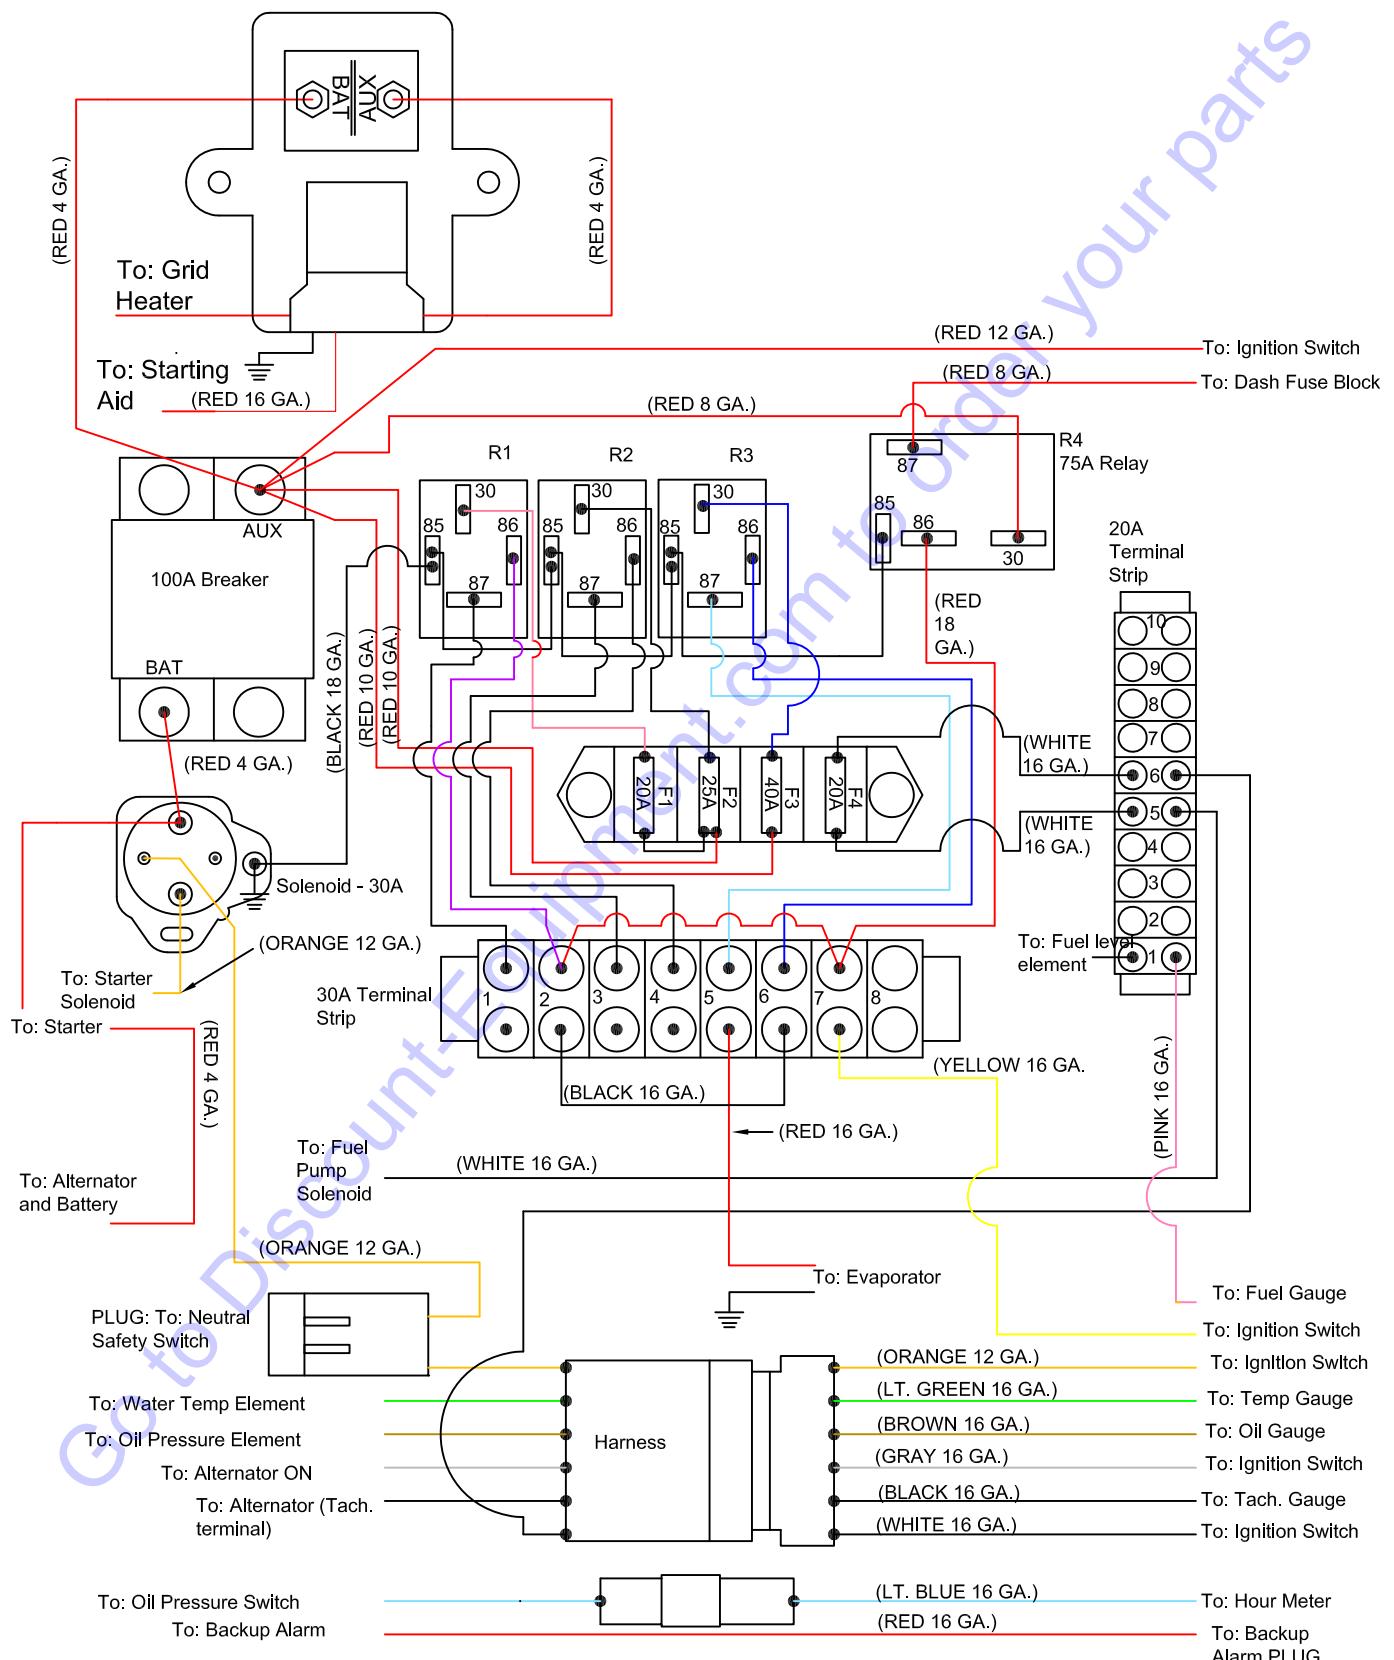


# Broce Broom Wiring Diagram

## Engine Control Panel - RJT Model With Canopy

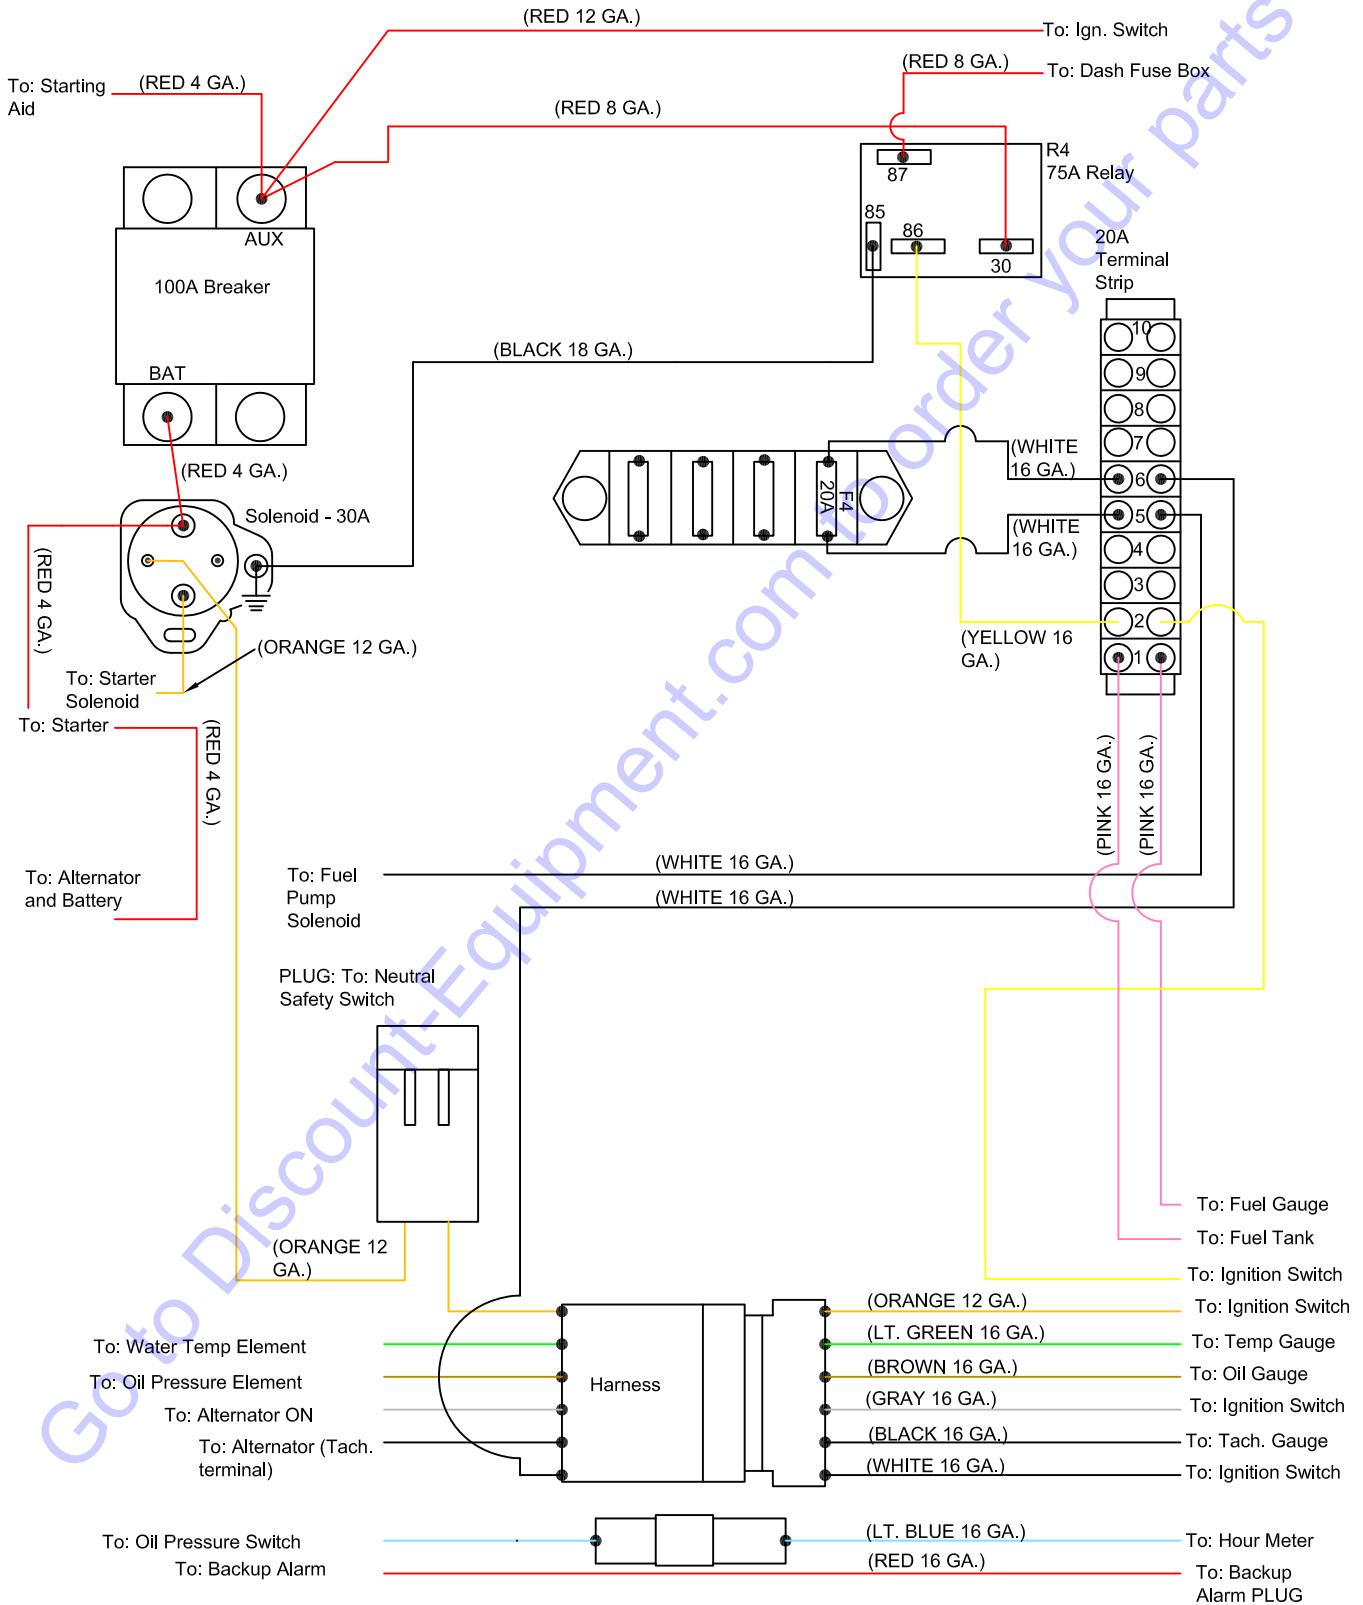

# 350 Series Dashboard Gauges Wiring Diagram


Broce Manufacturing Co., Inc.

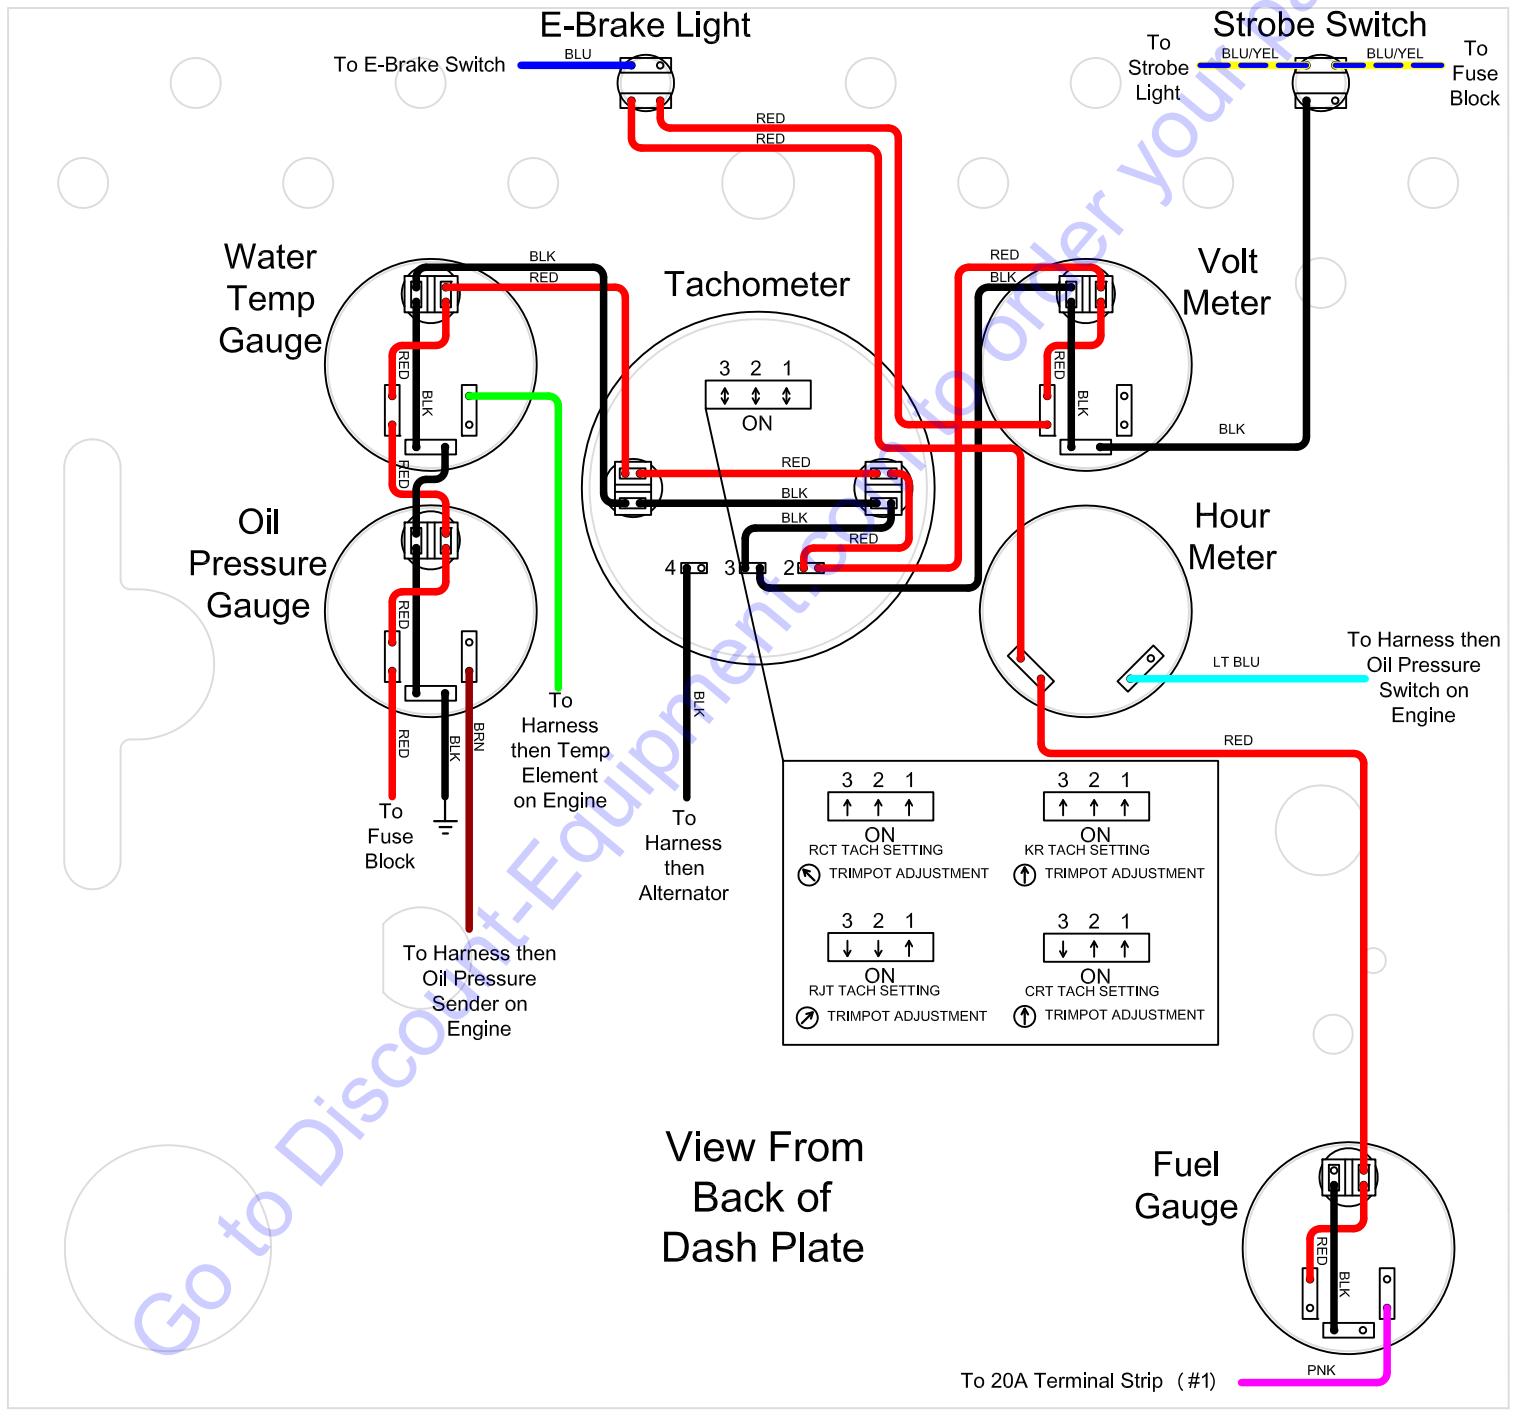

View From  
Back of  
Dash Plate

# 350 Series Dashboard Switches Wiring Diagram


**Broce Manufacturing Co., Inc., April 2007**

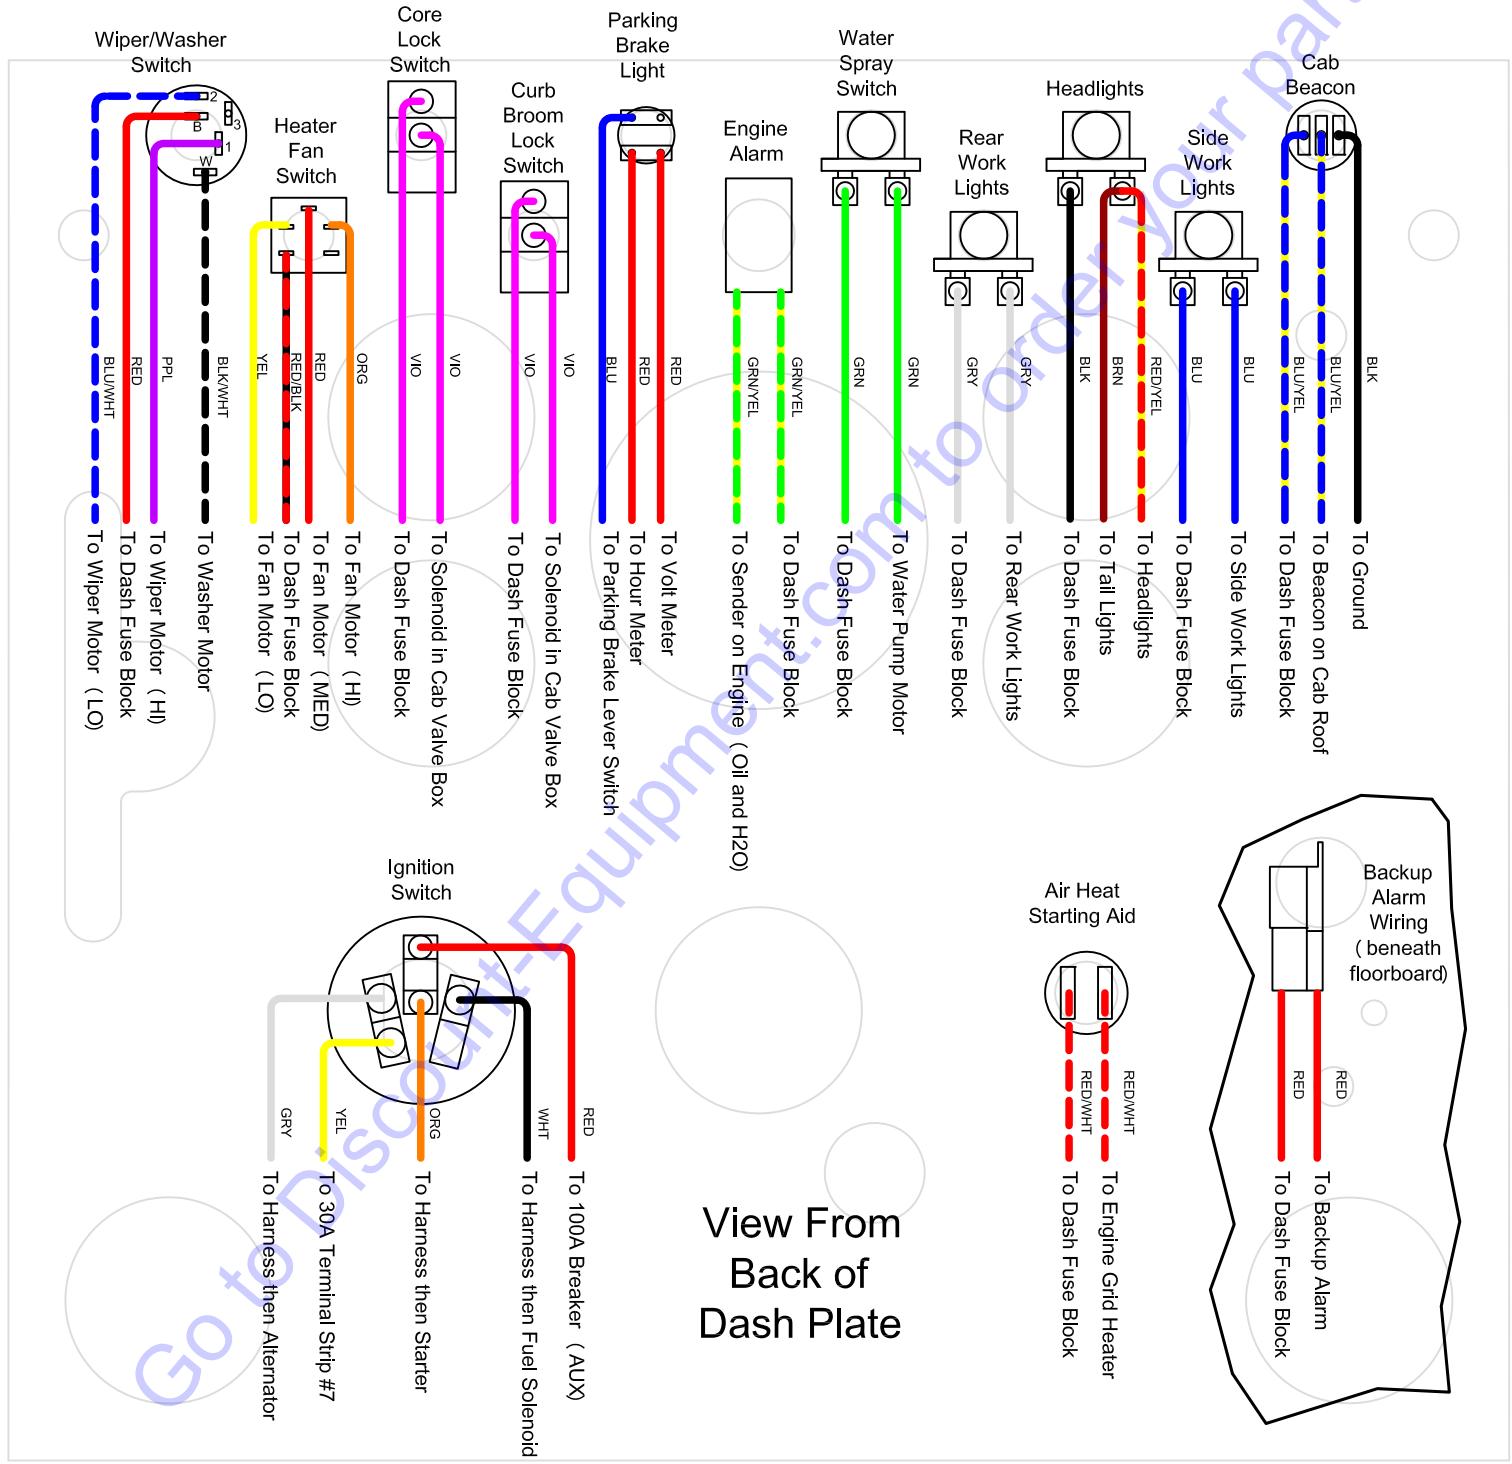

# Broce Broom Wiring Diagram

Tow Light  
Tail Light  
Light Plug  
Left Rear  
Right Rear  
Tag Light

For Brooms With Four-Tailights  
Dash Fuse Block

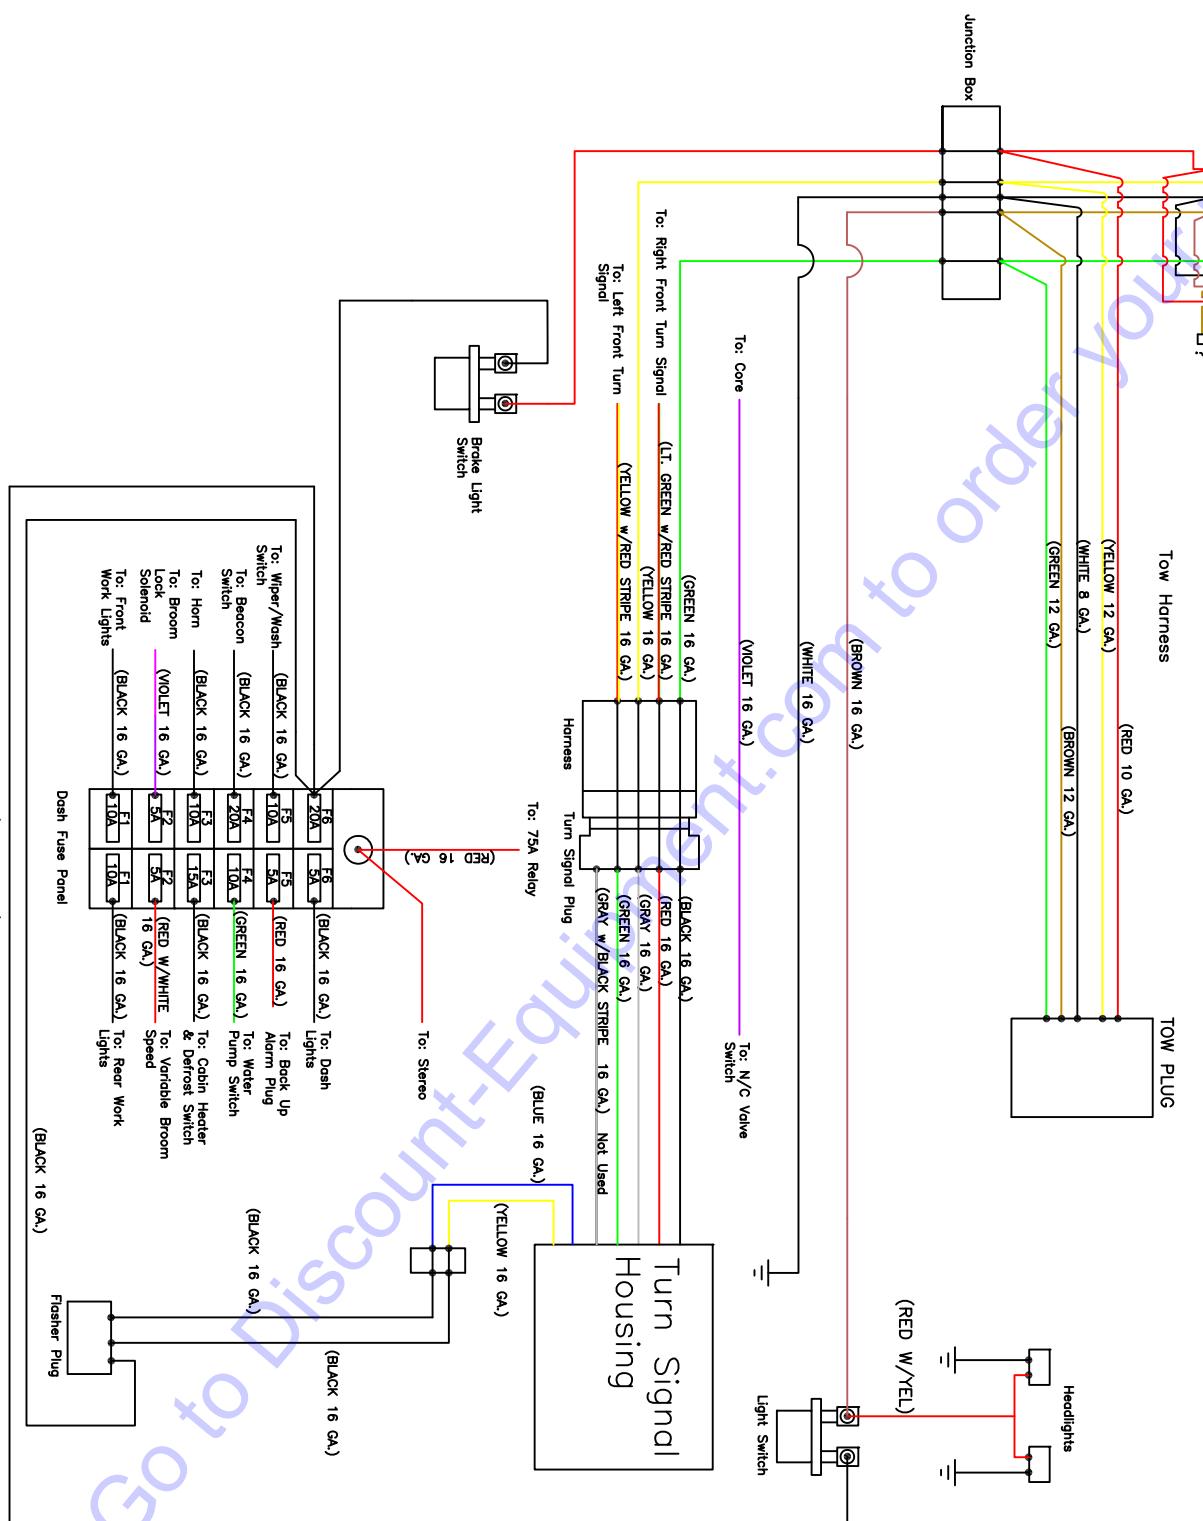

Broce Broom Wiring Diagram

Light Wiring Diagram

Dash Fuse Block


Light Plug Left Rear

Light Plug Right Rear

Light Plug Left


Light Plug Right

Headsights

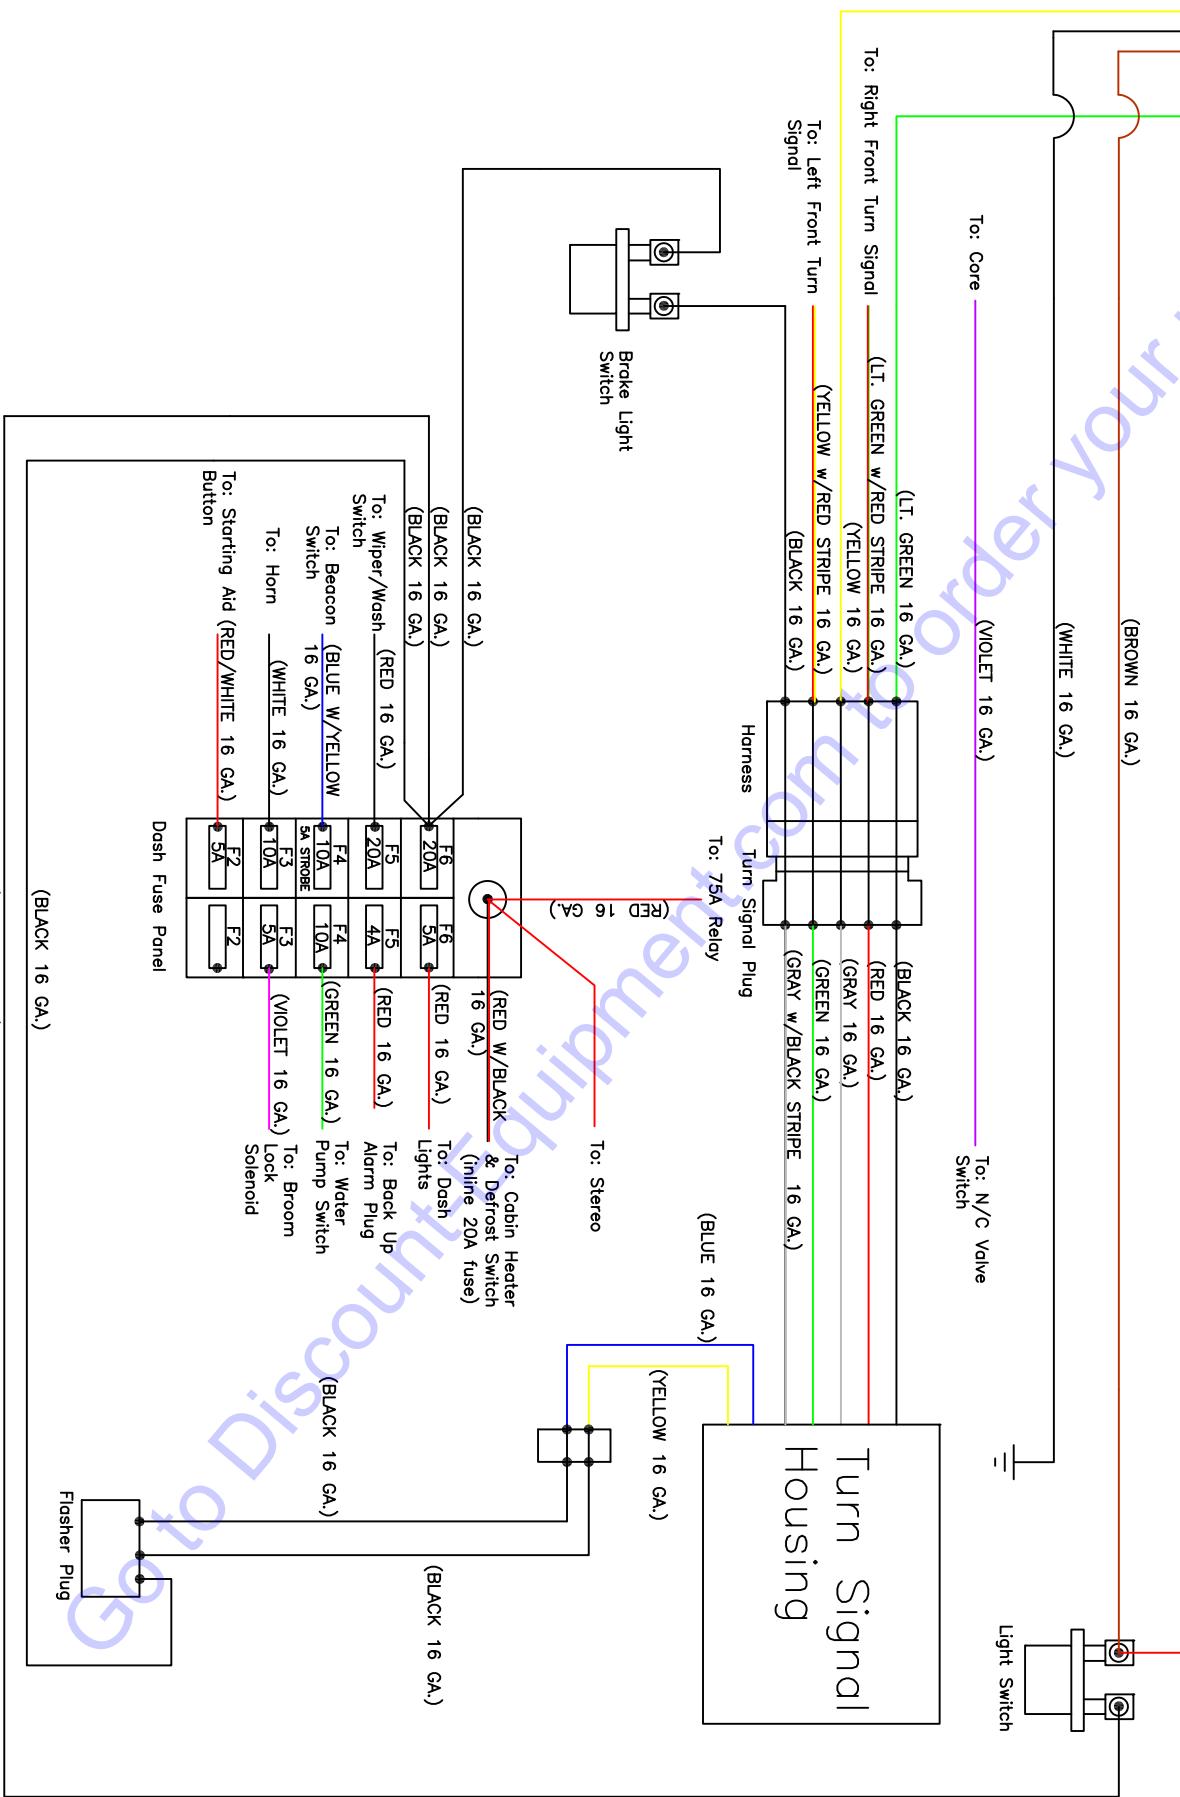

# 4-Wheel Broce Broom Wiring Diagram


## Optional Safety Engine Shutdown System with Low Water Shutdown

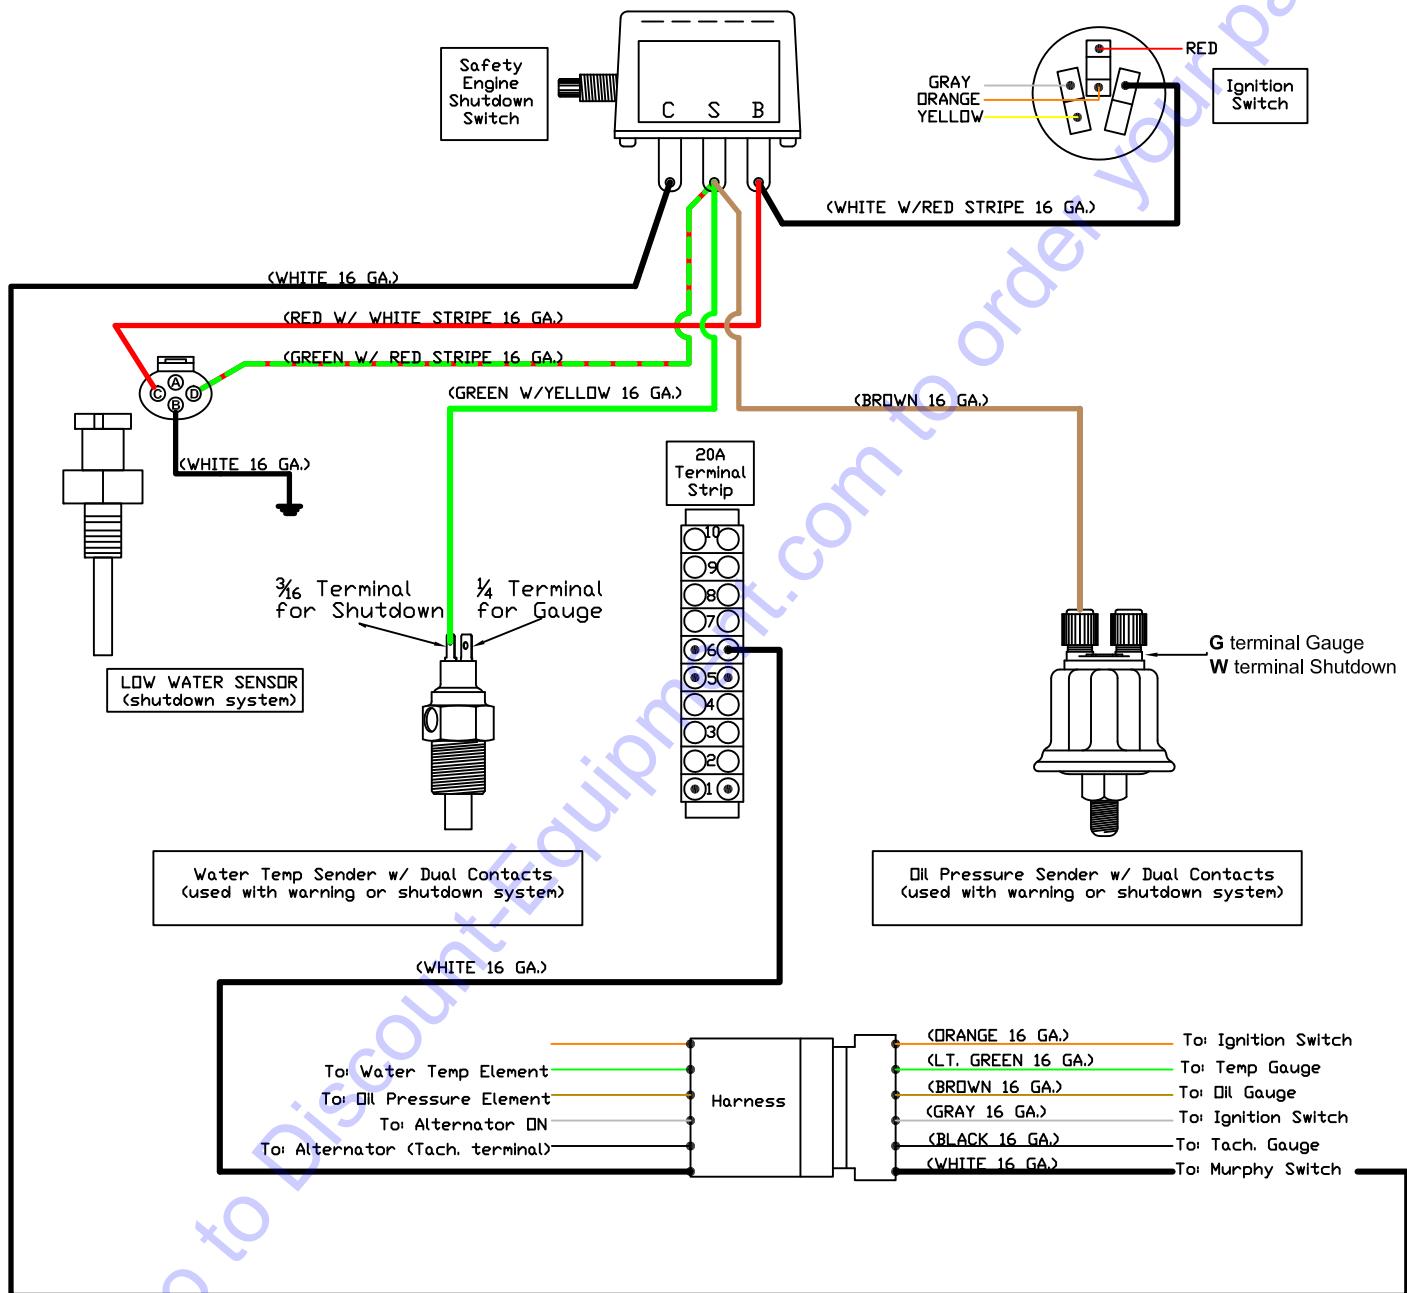

03/05/12

# 4-Wheel Broce Broom Wiring Diagram

## Optional Safety Engine Shutdown System

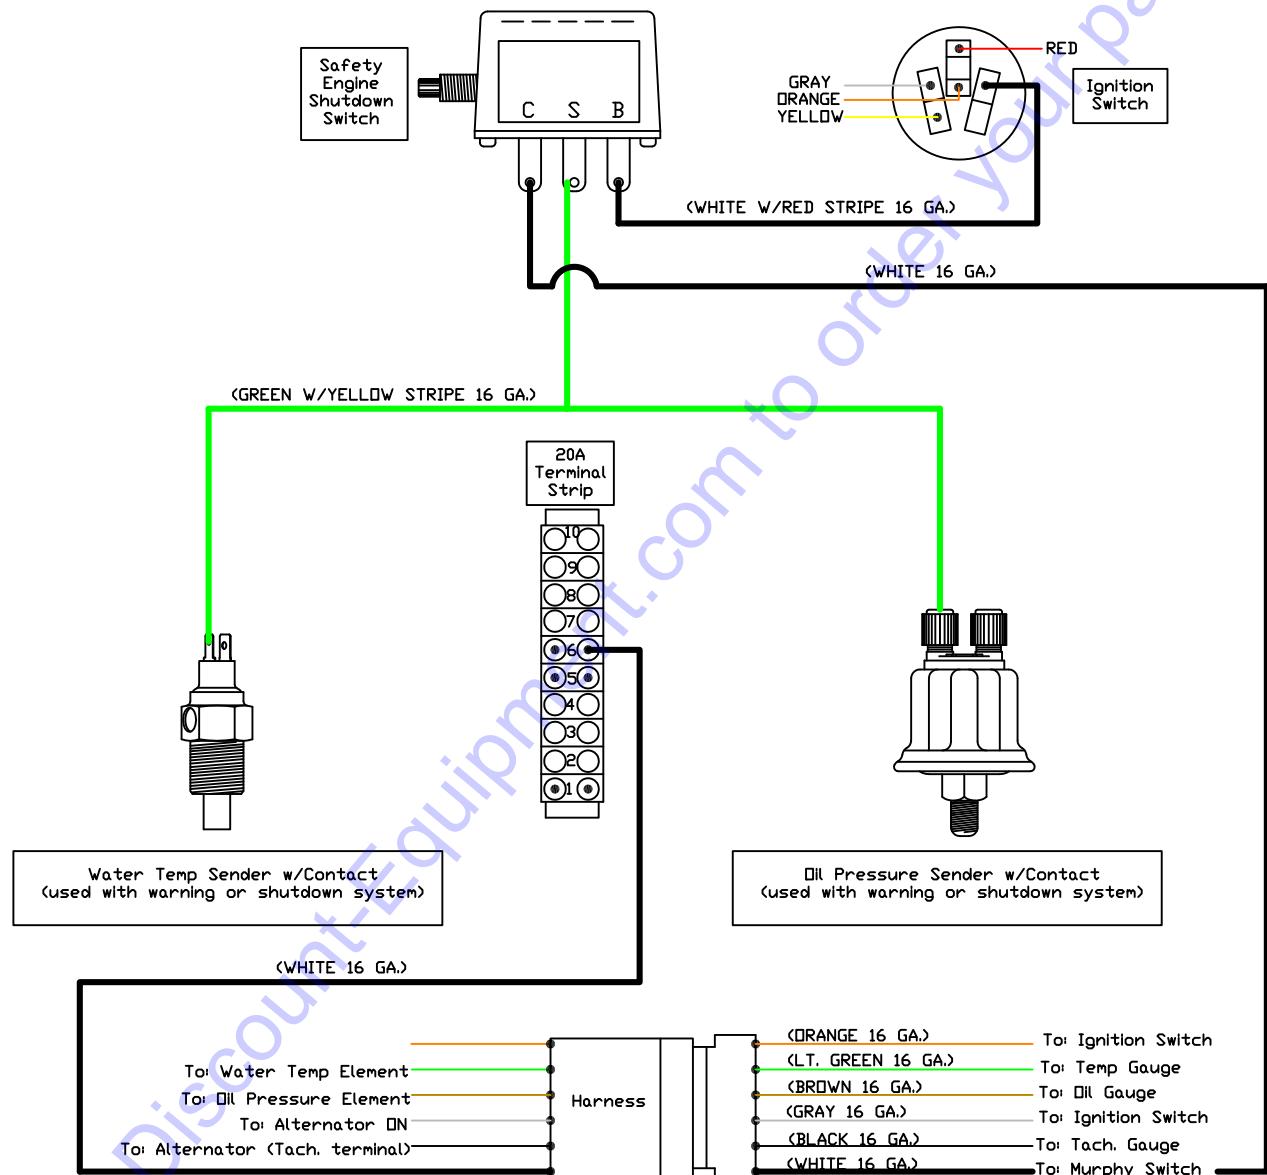

01/06/05

# VARIABLE SPEED W / SAUER CONTROLLER

